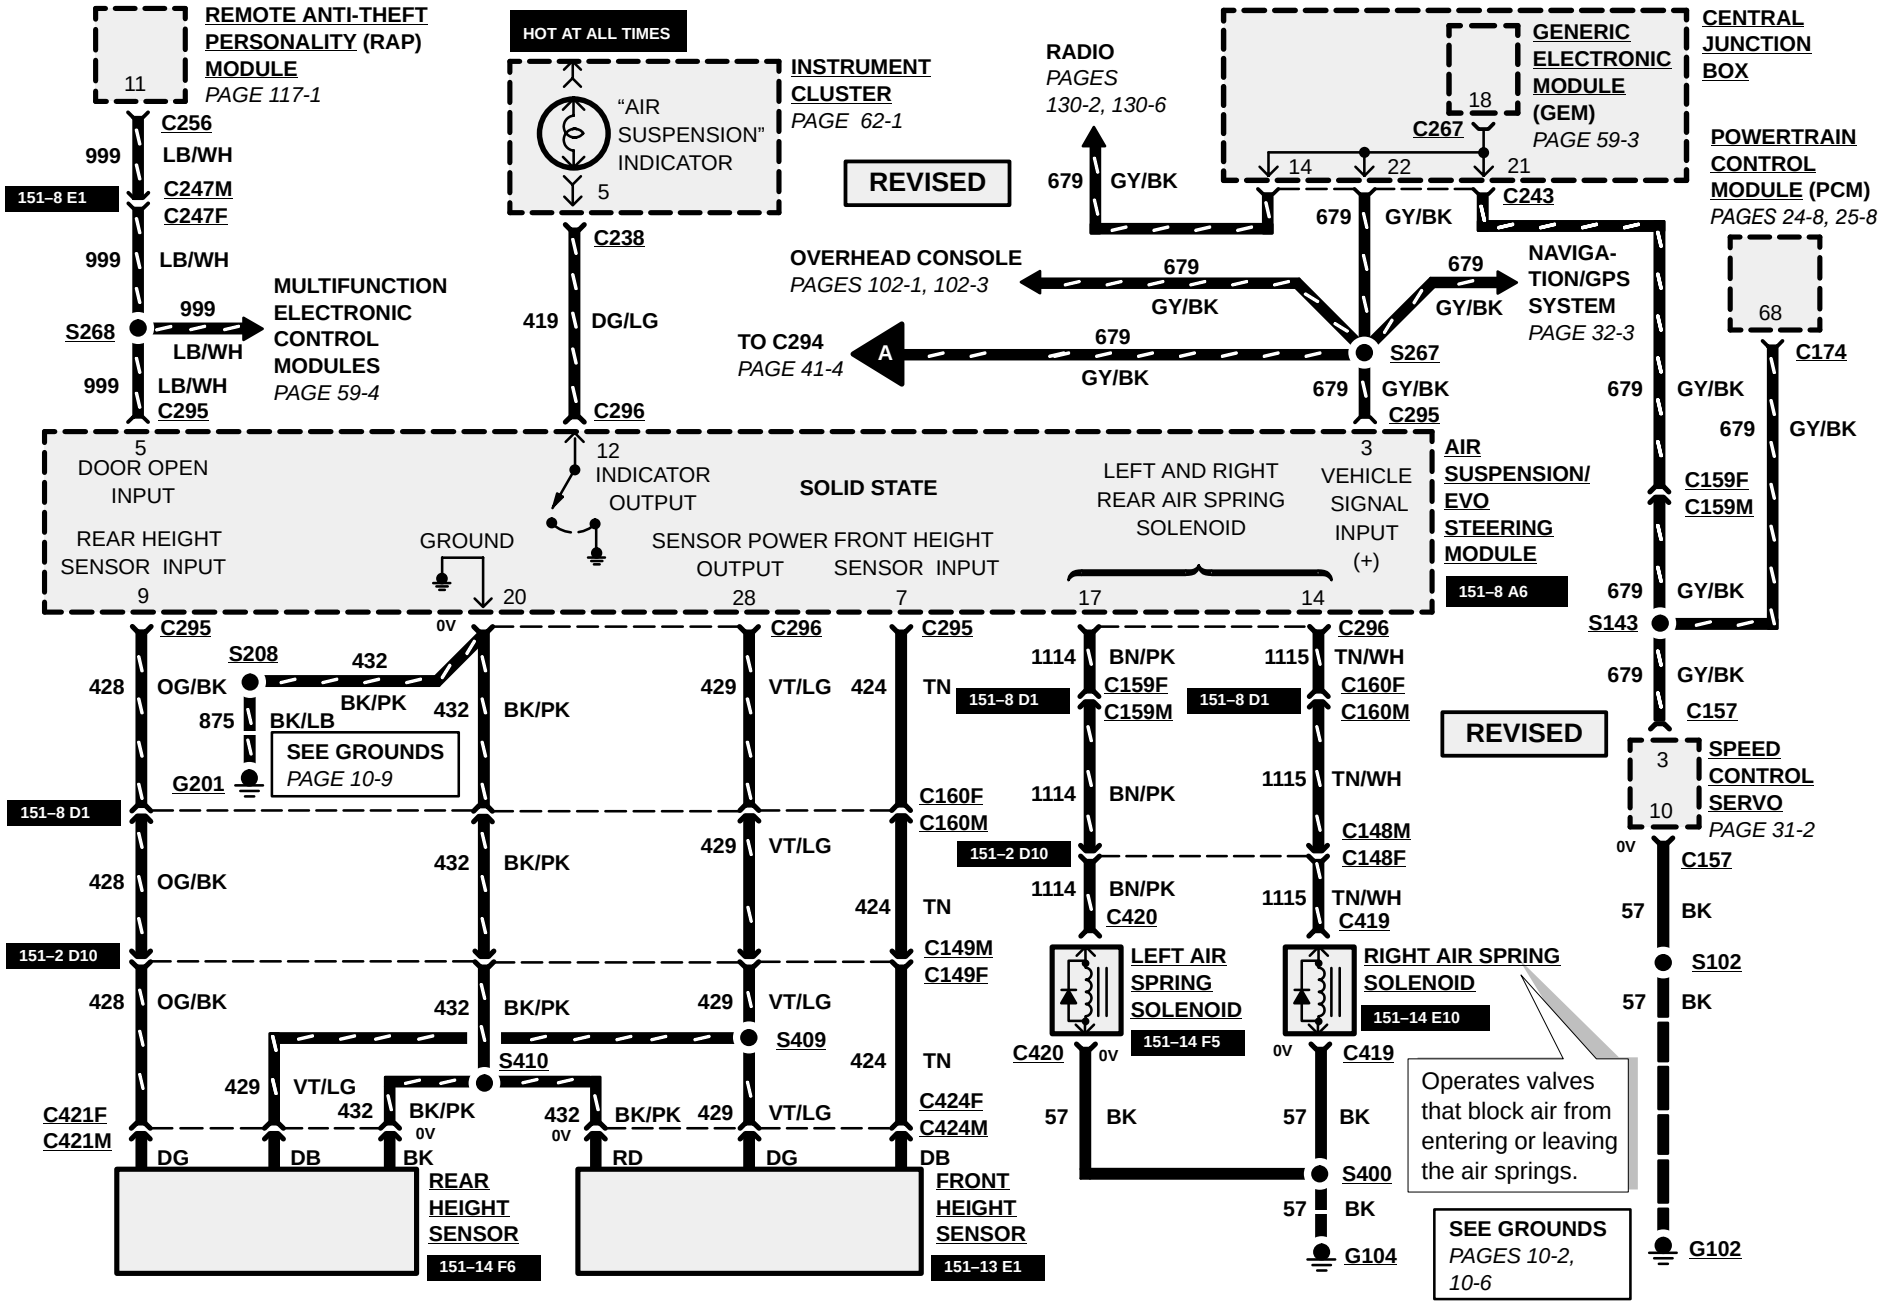
REMOTE ANTI-THEFT PERSONALITY (RAP) MODULE
PAGE 117-1
11
C256
999 LB/WH
151–8 E1
C247M
C247F
999 LB/WH
S268
999 LB/WH
MULTIFUNCTION ELECTRONIC CONTROL MODULES
PAGE 59-4
999 LB/WH
C295
5
DOOR OPEN INPUT
REAR HEIGHT SENSOR INPUT
9
HOT AT ALL TIMES
"AIR SUSPENSION" INDICATOR
5
INSTRUMENT CLUSTER
PAGE 62-1
C238
419 DG/LG
C296
12
INDICATOR OUTPUT
GROUND
20
SOLID STATE
SENSOR POWER OUTPUT
28
FRONT HEIGHT SENSOR INPUT
7
LEFT AND RIGHT REAR AIR SPRING SOLENOID
17
14
3
VEHICLE SIGNAL INPUT (+)
AIR SUSPENSION/ EVO STEERING MODULE
151–8 A6
REVISED
RADIO
PAGES 130-2, 130-6
679 GY/BK
OVERHEAD CONSOLE
PAGES 102-1, 102-3
679 GY/BK
679 GY/BK
TO C294
PAGE 41-4
A
679 GY/BK
S267
679 GY/BK
C295
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-3
18
C267
14
22
21
C243
679 GY/BK
679 GY/BK
NAVIGA-TION/GPS SYSTEM
PAGE 32-3
CENTRAL JUNCTION BOX
POWERTRAIN CONTROL MODULE (PCM)
PAGES 24-8, 25-8
68
C174
679 GY/BK
679 GY/BK
C159F
C159M
679 GY/BK
S143
679 GY/BK
C157
3
10
SPEED CONTROL SERVO
PAGE 31-2
0V
C157
57 BK
S102
57 BK
G102
SEE GROUNDS
PAGES 10-2, 10-6
C296
1114 BN/PK
1115 TN/WH
C159F
C159M
151–8 D1
C160F
C160M
151–8 D1
C148M
C148F
151–2 D10
C420
C419
LEFT AIR SPRING SOLENOID
151–14 F5
RIGHT AIR SPRING SOLENOID
151–14 E10
Operates valves that block air from entering or leaving the air springs.
0V
0V
57 BK
57 BK
S400
57 BK
G104
C295
428 OG/BK
S208
432 BK/PK
875 BK/LB
G201
SEE GROUNDS
PAGE 10-9
151–8 D1
428 OG/BK
151–2 D10
428 OG/BK
C421F
C421M
DG
DB
BK
REAR HEIGHT SENSOR
151–14 F6
0V
0V
C296
429 VT/LG
432 BK/PK
C295
424 TN
C160F
C160M
151–2 D10
C149M
C149F
S409
S410
429 VT/LG
432 BK/PK
424 TN
C424F
C424M
RD
DG
DB
FRONT HEIGHT SENSOR
151–13 E1