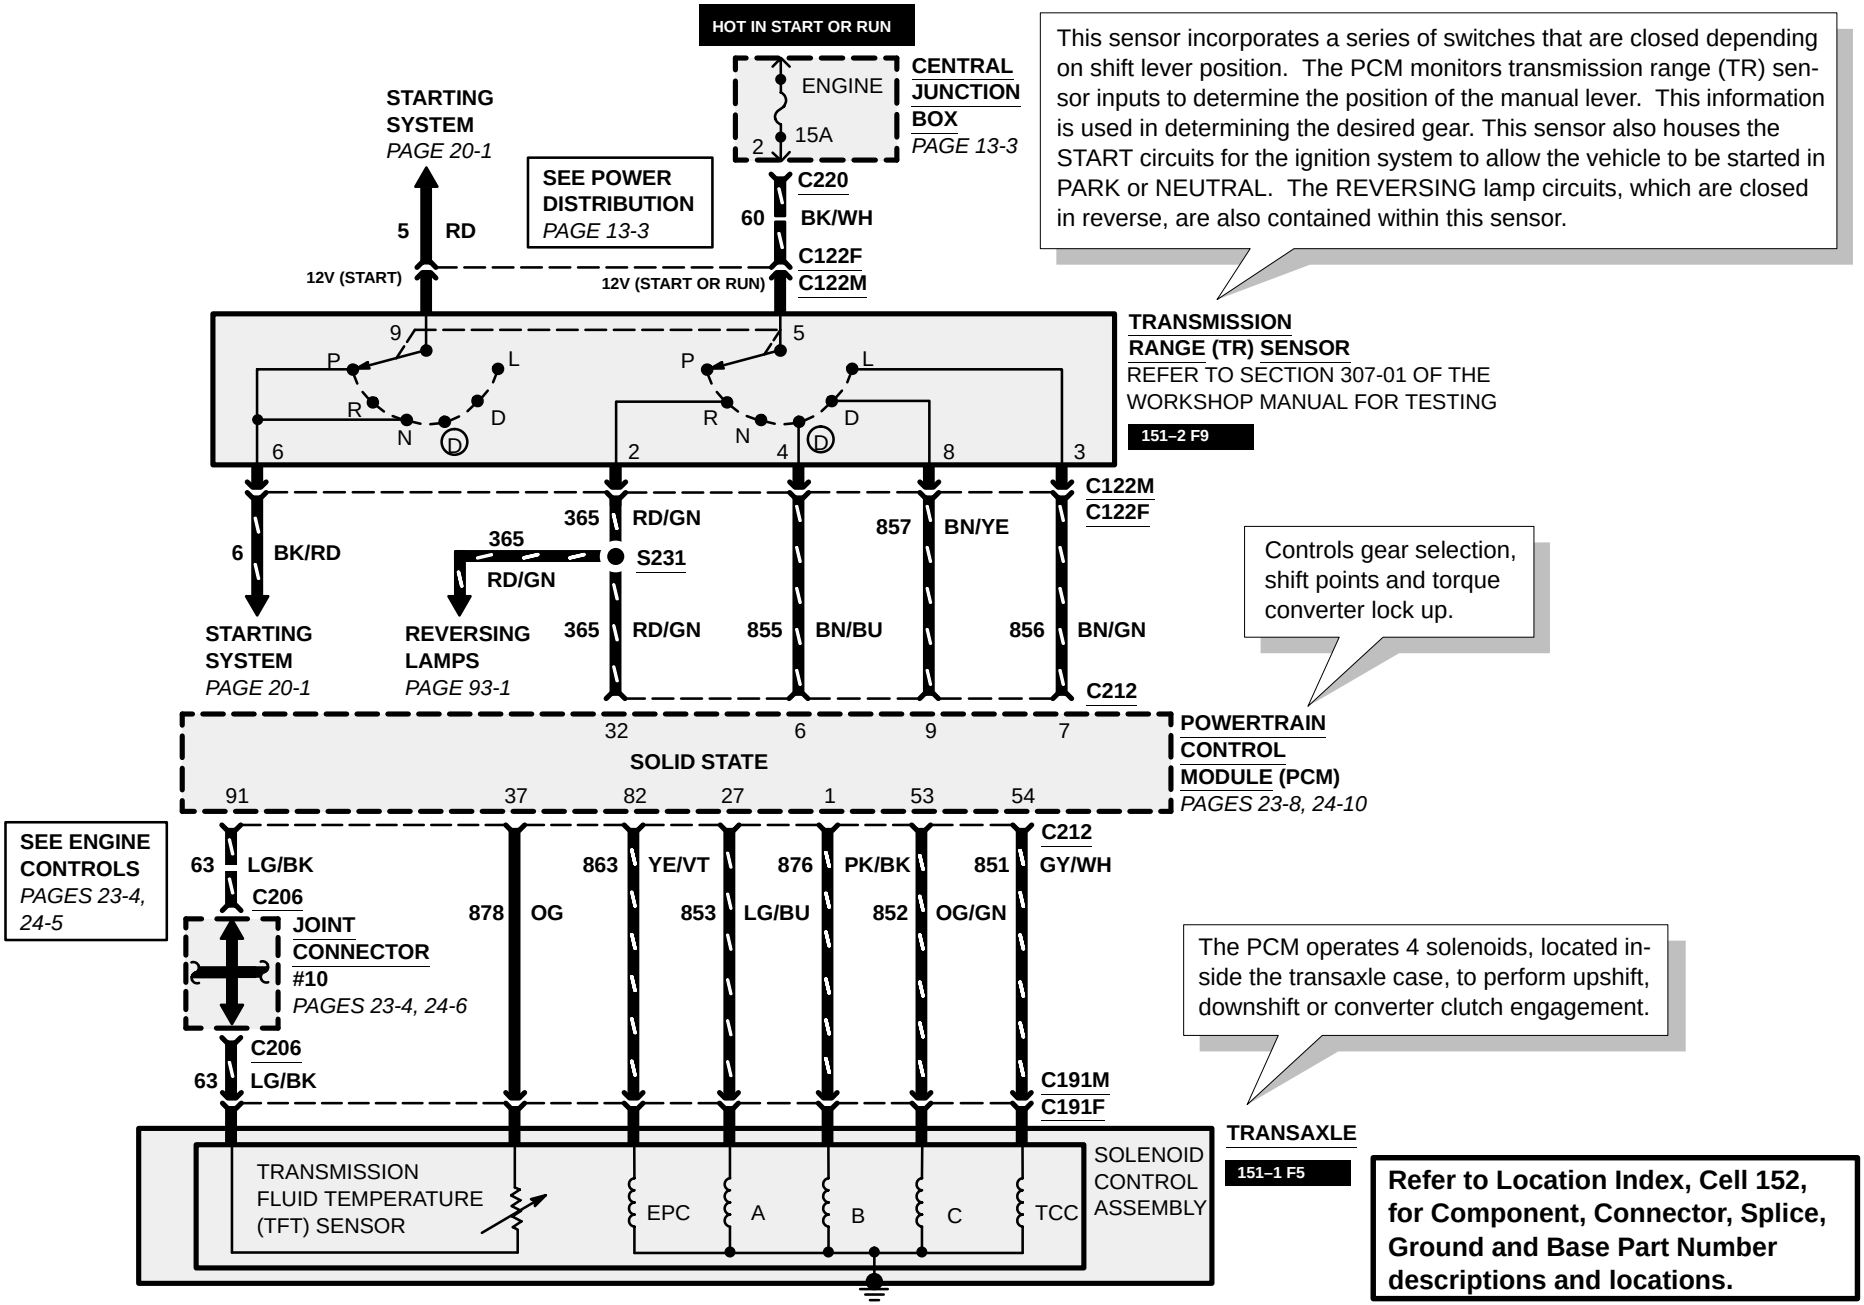
HOT IN START OR RUN
ENGINE
2
15A
CENTRAL JUNCTION BOX
PAGE 13-3
STARTING SYSTEM
PAGE 20-1
SEE POWER DISTRIBUTION
PAGE 13-3
5 RD
12V (START)
C220
60 BK/WH
C122F
C122M
12V (START OR RUN)
This sensor incorporates a series of switches that are closed depending on shift lever position. The PCM monitors transmission range (TR) sensor inputs to determine the position of the manual lever. This information is used in determining the desired gear. This sensor also houses the START circuits for the ignition system to allow the vehicle to be started in PARK or NEUTRAL. The REVERSING lamp circuits, which are closed in reverse, are also contained within this sensor.
TRANSMISSION RANGE (TR) SENSOR
REFER TO SECTION 307-01 OF THE WORKSHOP MANUAL FOR TESTING
151–2 F9
9
5
P
L
R
N
D
6
2
4
8
3
C122M
C122F
6 BK/RD
365 RD/GN
365 RD/GN
S231
857 BN/YE
STARTING SYSTEM
PAGE 20-1
REVERSING LAMPS
PAGE 93-1
365 RD/GN
855 BN/BU
856 BN/GN
C212
Controls gear selection, shift points and torque converter lock up.
32
6
9
7
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-8, 24-10
91
37
82
27
1
53
54
SEE ENGINE CONTROLS
PAGES 23-4, 24-5
63 LG/BK
C206
JOINT CONNECTOR #10
PAGES 23-4, 24-6
878 OG
863 YE/VT
853 LG/BU
876 PK/BK
852 OG/GN
851 GY/WH
C212
C206
63 LG/BK
C191M
C191F
The PCM operates 4 solenoids, located inside the transaxle case, to perform upshift, downshift or converter clutch engagement.
TRANSAXLE
151–1 F5
TRANSMISSION FLUID TEMPERATURE (TFT) SENSOR
EPC
A
B
C
TCC
SOLENOID CONTROL ASSEMBLY
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.