C3035

14C719

R112
Climate controlled seat cushion element, driver side

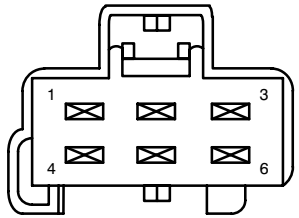

F06112

Pin	Circuit	Circuit function
1	–	not used
2	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
3	1548 (DG/LG)	Climate controlled seat module
4	1065 (WH/LB)	Seat cushion heater, driver side, heater, feed
5	–	not used
6	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed

C3036a

14C719

A292
Climate controlled seat module, passenger side

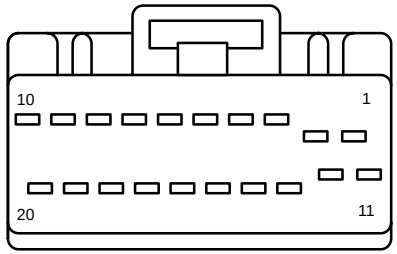

F20017

Pin	Circuit	Circuit function
1	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
2	1065 (WH/LB)	Seat cushion heater, passenger side, heater, feed
3	1553 (BK)	Seat position sensor – horizontal sense
4	1255 (WH/RD)	Climate controlled seat switch, passenger side, input
5	–	not used
6	1551 (VT/WH)	Climate controlled seat fan, passenger side, to Driver seat module (+)
7	1018 (LG/OG)	Climate controlled seat switch, passenger side, Temperature (+)
8	–	not used
9	–	not used
10	1565 (VT)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, Sensor
11	1066 (GY/LB)	Seat back heater, passenger side, feed
12	1067 (VT/LB)	Seat back heater, passenger side, heater, return
13	1552 (RD)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, Sensor
14	1554 (WH)	Climate controlled seat module, to, Climate controlled seat fan, passenger side, Sensor
15	1019 (TN/LB)	Climate controlled seat switch, passenger side, Temperature (–)
16	1550 (WH/OG)	Climate controlled seat switch, passenger side, input
17	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, Other
18	1548 (DG/LG)	Climate controlled seat module, to, Seat cushion temperature module
19	1549 (DB/OG)	Climate controlled seat module, to, Seat back temperature module
20	1062 (RD/LB)	Seat cushion heater, passenger side, Sensor, return