G15

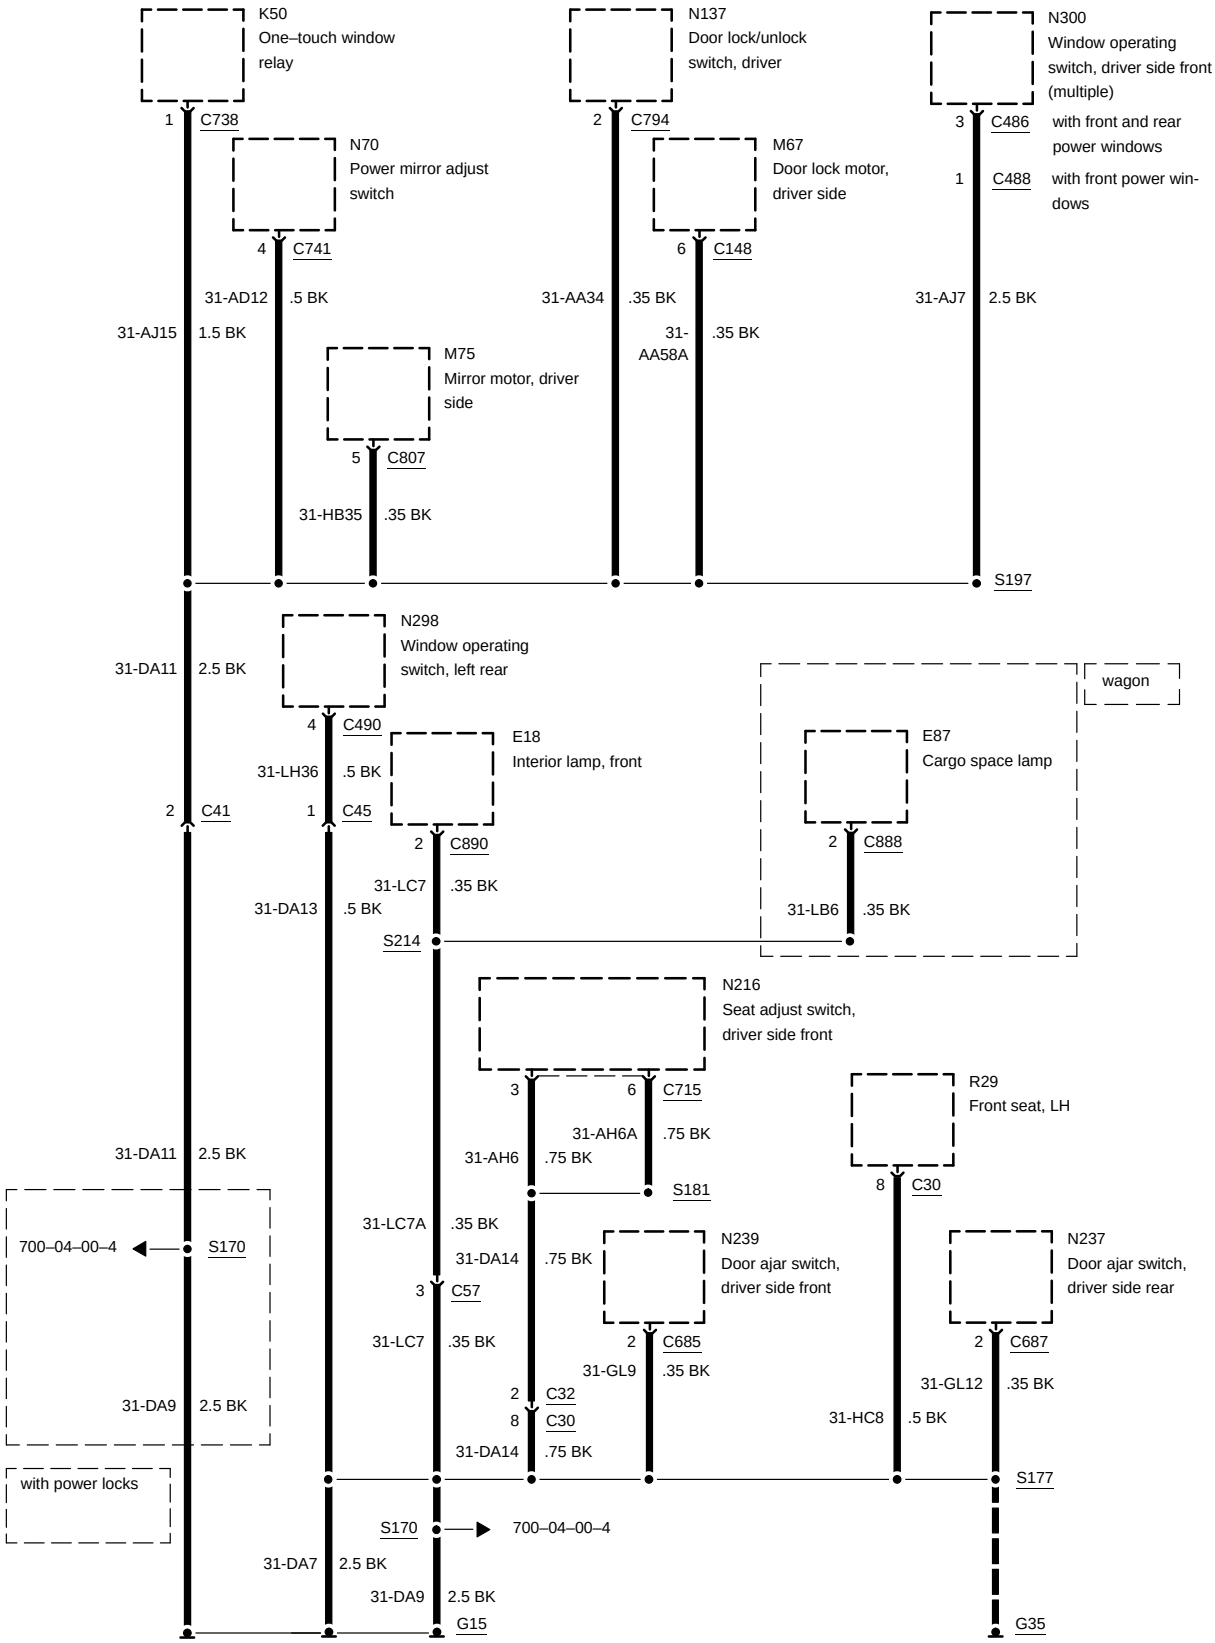
K50
One–touch window relay
1 C738
N70
Power mirror adjust switch
4 C741
31-AD12 .5 BK
31-AJ15 1.5 BK
M75
Mirror motor, driver side
5 C807
31-HB35 .35 BK
N137
Door lock/unlock switch, driver
2 C794
M67
Door lock motor, driver side
6 C148
31-AA34 .35 BK
31-AA58A .35 BK
N300
Window operating switch, driver side front (multiple)
3 C486 with front and rear power windows
1 C488 with front power windows
31-AJ7 2.5 BK
S197
N298
Window operating switch, left rear
31-DA11 2.5 BK
4 C490
31-LH36 .5 BK
E18
Interior lamp, front
2 C41
1 C45
2 C890
31-LC7 .35 BK
31-DA13 .5 BK
S214
wagon
E87
Cargo space lamp
2 C888
31-LB6 .35 BK
N216
Seat adjust switch, driver side front
3 6 C715
31-AH6A .75 BK
31-AH6 .75 BK
S181
R29
Front seat, LH
8 C30
31-DA11 2.5 BK
700–04–00–4 S170
31-LC7A .35 BK
31-DA14 .75 BK
3 C57
N239
Door ajar switch, driver side front
2 C685
31-LC7 .35 BK
31-GL9 .35 BK
2 C32
8 C30
31-DA14 .75 BK
N237
Door ajar switch, driver side rear
2 C687
31-GL12 .35 BK
31-HC8 .5 BK
31-DA9 2.5 BK
with power locks
S177
S170 700–04–00–4
31-DA7 2.5 BK
31-DA9 2.5 BK
G15
G35