59-13 MULTIFUNCTION ELECTRONIC CONTROL MODULES

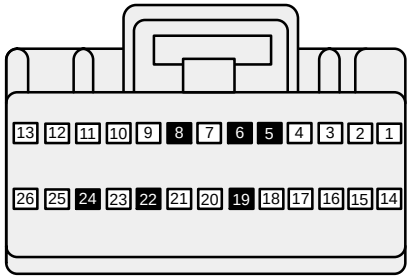

REVISED

C342

REAR ELECTRONIC MODULE (REM)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1380 (TN/YE)	Auxiliary Air Mode Door Closed
2	1375 (PK/YE)	Air Temperature Blend Door Open
3	1376 (BK/LB)	Air Temperature Blend Door Closed
4	1387 (VT)	Left Sliding Door Lock Output
5	–	NOT USED
6	–	NOT USED
7	1388 (GY)	Left Sliding Door Unlock Output
8	–	NOT USED
9	1385 (LG)	Right Sliding Door Lock Output
10	1386 (OG)	Right Sliding Door Unlock Output
11	*1205 (BK)	Power Ground #4
12	*1205 (BK)	Power Ground #5
13	1454 (TN/RD)	Battery Feed
14	374 (DB/WH)	Trailer Tow Left Stop/Turn Lamp Output
15	378 (BN/YE)	Trailer Tow Right Stop/Turn Lamp Output
16	1432 (WH/VT)	Left Siding Door Ajar Status
17	1381 (WH/LB)	Auxiliary Air Mode Position Input
18	1377 (TN/LG)	Air Temperature Blend Position Input
19	–	NOT USED
20	121 (YE/BK)	Keypad Switch Assembly Input B
21	79 (LG/RD)	Keypad Switch Assembly Input C
22	–	NOT USED
23	1357 (LB/YE)	Fuel Sender Signal Return
24	–	NOT USED
25	1205 (BK)	Power Ground #6
26	1205 (BK)	Power Ground #7

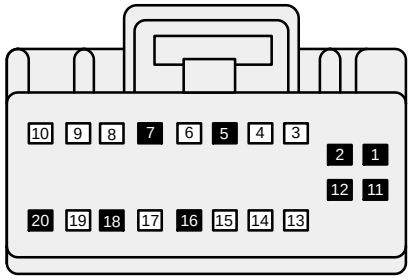

REVISED

C343

REAR ELECTRONIC MODULE (REM)

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	–	NOT USED
3	10 (LG/RD)	Battery Feed
4	1330 (YE/LB)	Switched System Power Relay Drive
5	–	NOT USED
6	1371 (TN/OG)	Auxiliary A/C Blower Motor Relay Output
7	–	NOT USED
8	1382 (BK/OG)	Auxiliary Air Mode Position Reference
9	1378 (GY/WH)	Auxiliary Air Temperature Blend Door Position Reference
10	1379 (PK/LB)	Auxiliary Air Mode Door Open
11	–	NOT USED
12	–	NOT USED
13	1372 (PK/BK)	Auxiliary Climate Control Speed 1
14	1373 (GY/YE)	Auxiliary Climate Control Speed 2
15	1356 (LG/VT)	Fuel Sender Signal A
16	–	NOT USED
17	1433 (DB/LG)	Right Sliding Door Ajar Status
18	–	NOT USED
19	78 (LB/YE)	Keypad Switch Assembly Input A
20	–	NOT USED

*** EARLY PRODUCTION**