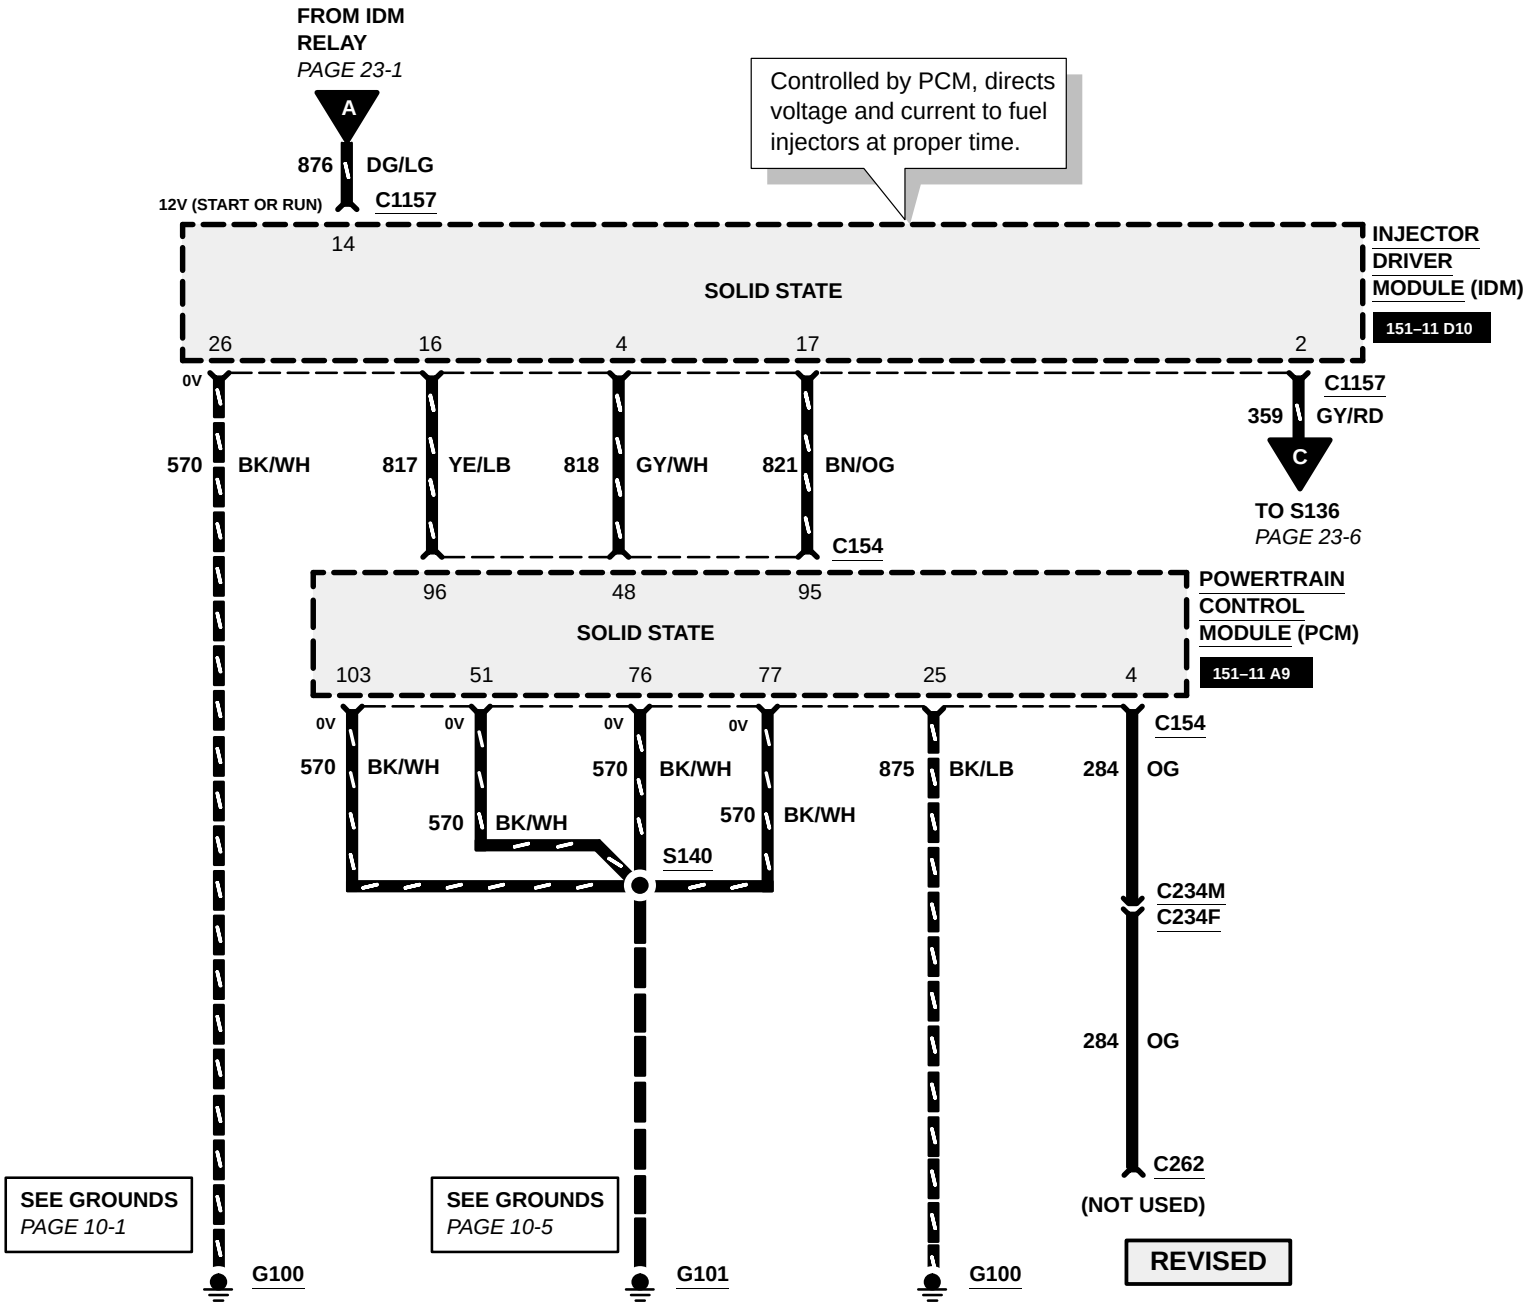
FROM IDM RELAY
PAGE 23-1
A
876 DG/LG
12V (START OR RUN)
C1157
14
Controlled by PCM, directs voltage and current to fuel injectors at proper time.
SOLID STATE
INJECTOR DRIVER MODULE (IDM)
151–11 D10
26
16
4
17
2
0V
570 BK/WH
817 YE/LB
818 GY/WH
821 BN/OG
C154
C1157
359 GY/RD
C
TO S136
PAGE 23-6
96
48
95
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
103
51
76
77
25
4
0V
570 BK/WH
570 BK/WH
570 BK/WH
570 BK/WH
S140
875 BK/LB
284 OG
C154
C234M
C234F
284 OG
C262
(NOT USED)
SEE GROUNDS
PAGE 10-1
SEE GROUNDS
PAGE 10-5
G100
G101
G100
REVISED