## C888

### 14335

E87
Cargo space lamp




F02009

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-LB6 (BK/YE) | Ground, switched |
| 2 | 31-LB6 (BK) | Ground |

## C890

### 14335

E18
Interior lamp, front




F02009

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31S-LC7 (BK/BU) + | Ground, switched |
| | 31S-LC17 (BK/YE) | Ground, switched |
| 2 | 31-LC7 (BK) | Ground |

## C894

### 12A522

B22
Mass Air Flow (MAF) sensor

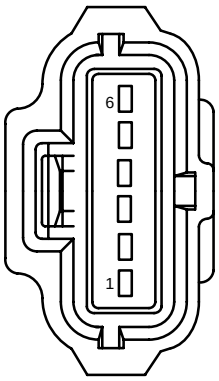


F06077

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 8-RJ17 (WH/VT) | Sensor signal |
| | 8-PA23 (WH) | Sensor signal |
| 2 | 15-RJ22 (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected) |
| 3 | 91-RJ22 (BK/OG) | Ground |
| 4 | 9-RJ22 (BN/BU) | Sensor signal return (reference/ground) |
| 5 | 8-RJ22 (WH/BU) | Sensor signal |
| 6 | 9-RJ17 (BN/WH) | Sensor signal return (reference/ground) |
| | 9-PA23 (BN) | Sensor signal return (reference/ground) |