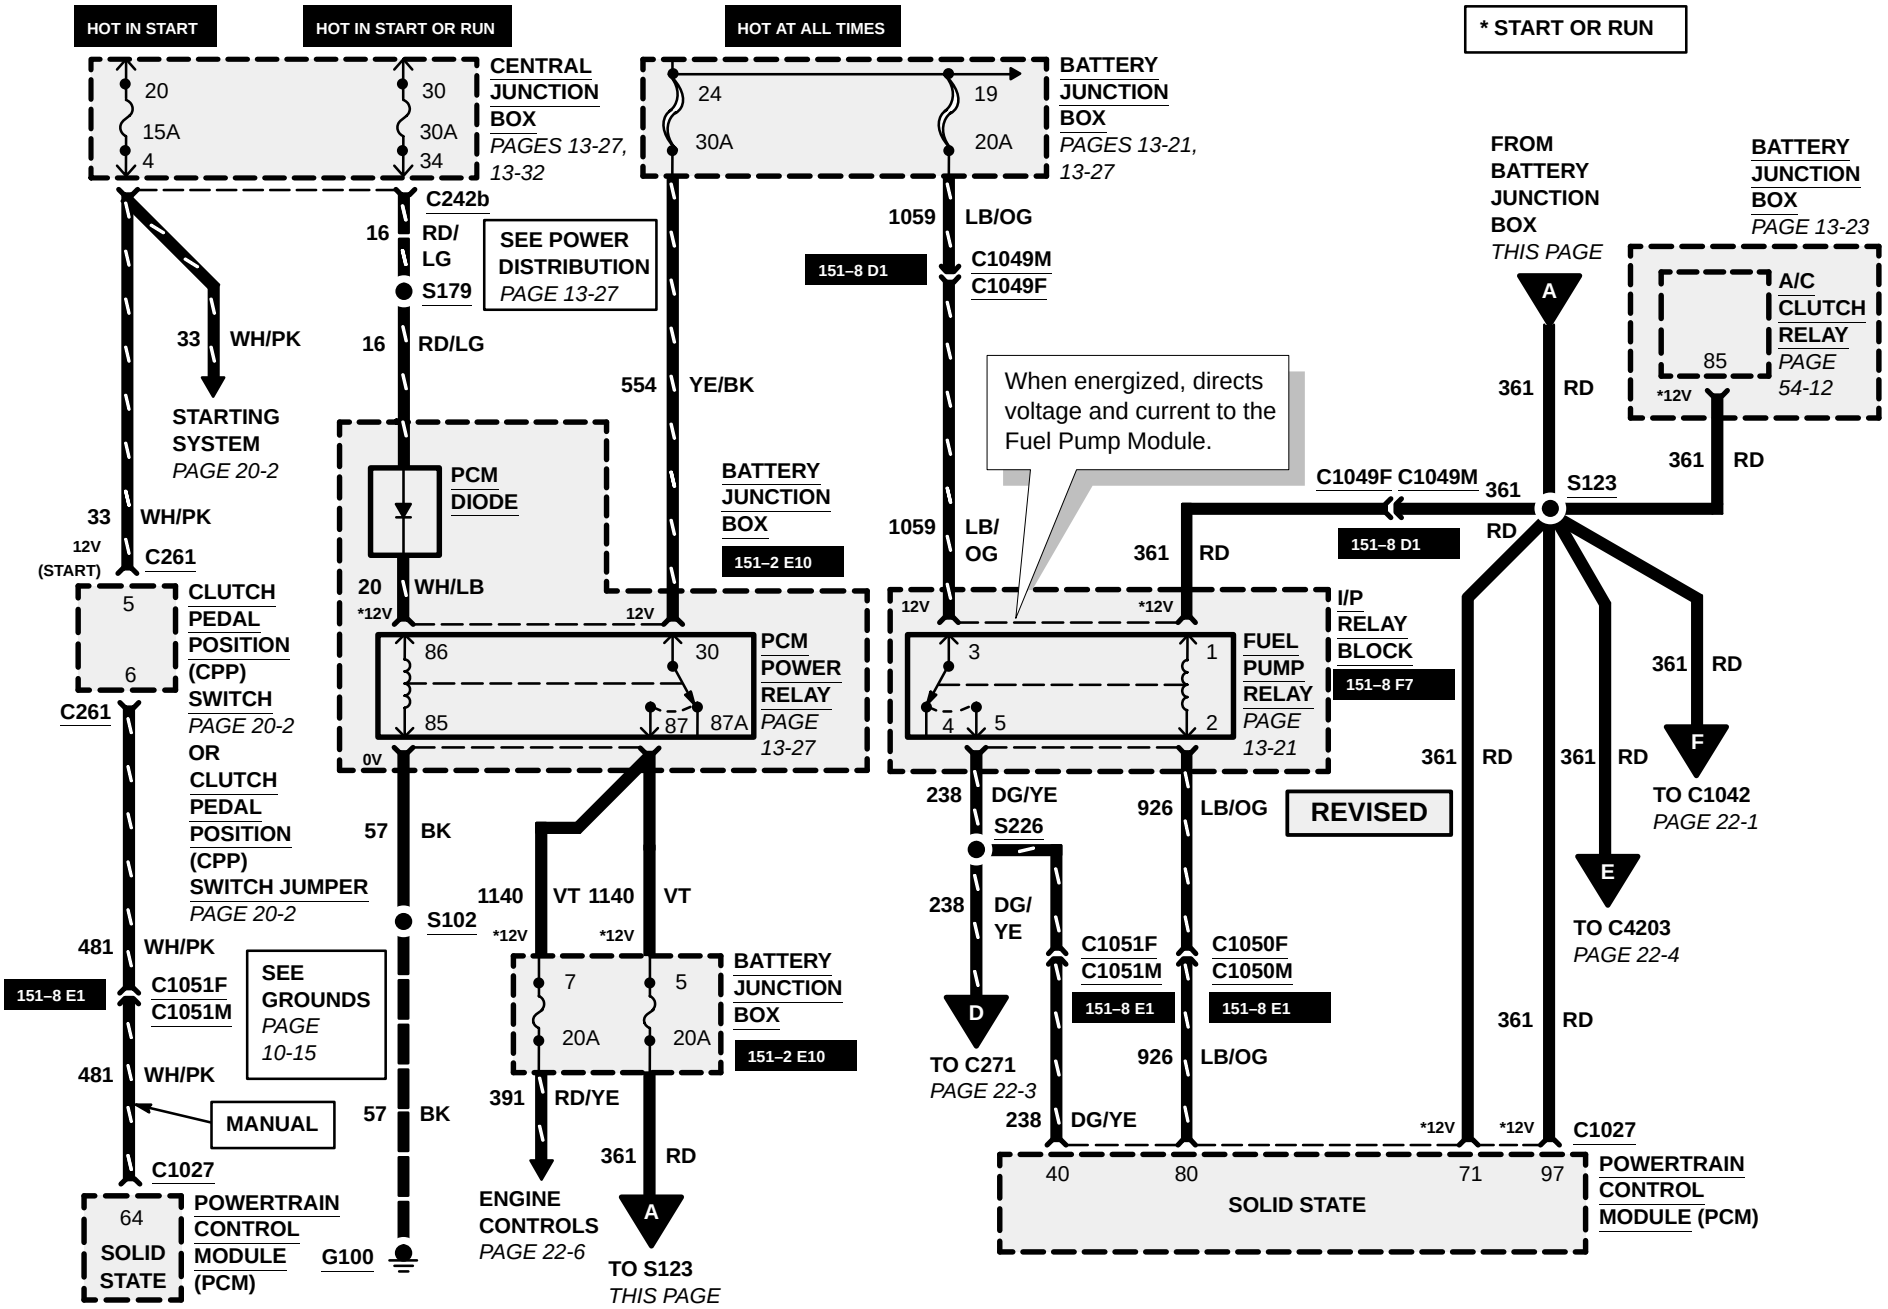
HOT IN START
HOT IN START OR RUN
HOT AT ALL TIMES
* START OR RUN
CENTRAL JUNCTION BOX
PAGES 13-27, 13-32
BATTERY JUNCTION BOX
PAGES 13-21, 13-27
FROM BATTERY JUNCTION BOX
THIS PAGE
BATTERY JUNCTION BOX
PAGE 13-23
20
15A
4
30
30A
34
24
30A
19
20A
C242b
16
RD/LG
S179
SEE POWER DISTRIBUTION
PAGE 13-27
1059
LB/OG
151–8 D1
C1049M
C1049F
A
361
RD
A/C CLUTCH RELAY
PAGE 54-12
85
*12V
33
WH/PK
STARTING SYSTEM
PAGE 20-2
16
RD/LG
554
YE/BK
When energized, directs voltage and current to the Fuel Pump Module.
PCM DIODE
BATTERY JUNCTION BOX
151–2 E10
C1049F C1049M
361
S123
RD
33
WH/PK
12V (START)
C261
1059
LB/OG
361
RD
151–8 D1
20
WH/LB
*12V
12V
*12V
I/P RELAY BLOCK
151–8 F7
5
6
C261
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGE 20-2
OR
CLUTCH PEDAL POSITION (CPP) SWITCH JUMPER
PAGE 20-2
86
30
85
87
87A
PCM POWER RELAY
PAGE 13-27
3
1
4
5
2
FUEL PUMP RELAY
PAGE 13-21
361
RD
F
TO C1042
PAGE 22-1
0V
238
DG/YE
926
LB/OG
REVISED
S226
57
BK
1140
VT
1140
VT
*12V
*12V
S102
238
DG/YE
D
TO C271
PAGE 22-3
C1051F
C1051M
C1050F
C1050M
E
TO C4203
PAGE 22-4
481
WH/PK
151–8 E1
C1051F
C1051M
SEE GROUNDS
PAGE 10-15
7
5
20A
20A
BATTERY JUNCTION BOX
151–2 E10
926
LB/OG
481
WH/PK
MANUAL
57
BK
391
RD/YE
361
RD
238
DG/YE
*12V
*12V
C1027
C1027
64
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
G100
ENGINE CONTROLS
PAGE 22-6
A
TO S123
THIS PAGE
40
80
71
97
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)