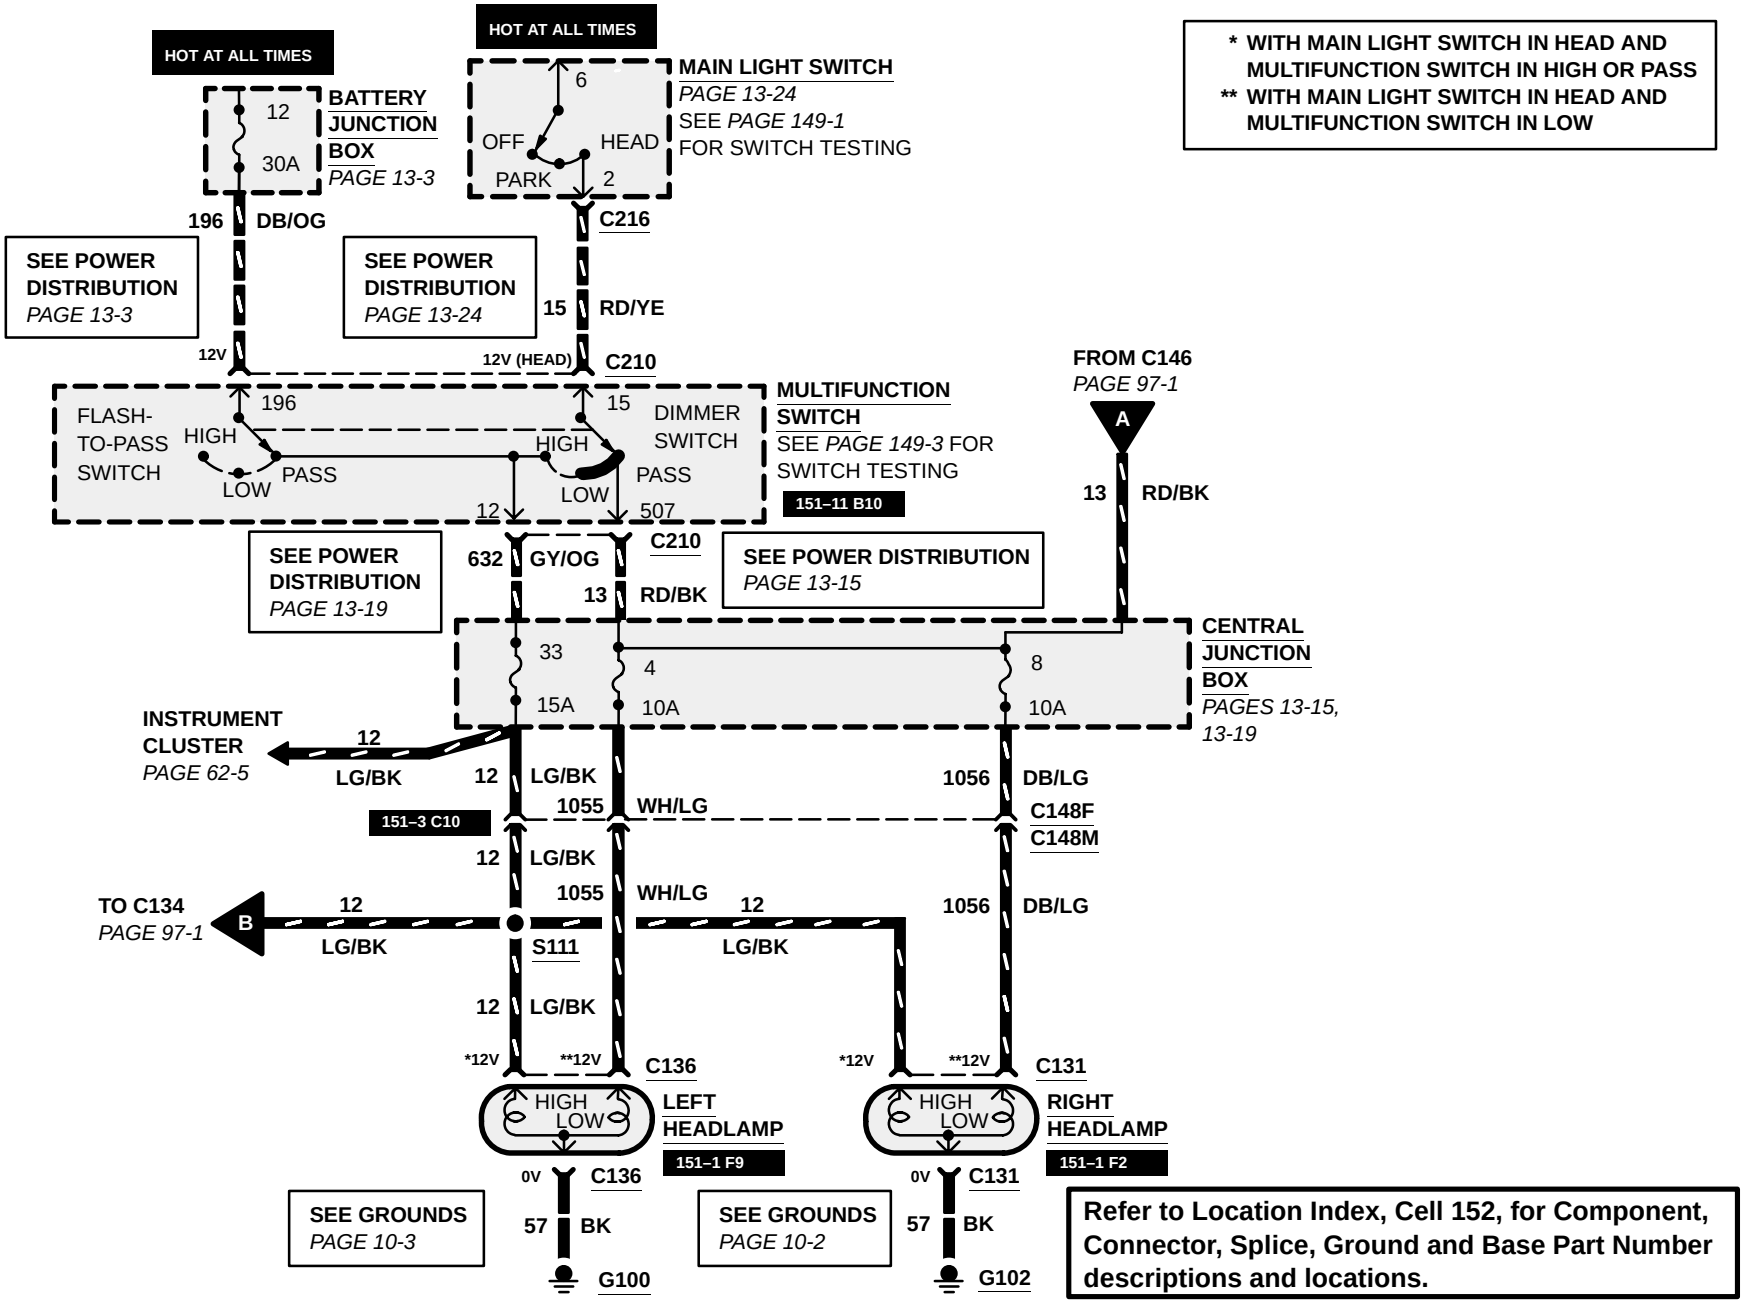
HOT AT ALL TIMES
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-3
12
30A
MAIN LIGHT SWITCH
PAGE 13-24
SEE PAGE 149-1 FOR SWITCH TESTING
6
OFF
HEAD
PARK
2
* WITH MAIN LIGHT SWITCH IN HEAD AND MULTIFUNCTION SWITCH IN HIGH OR PASS
** WITH MAIN LIGHT SWITCH IN HEAD AND MULTIFUNCTION SWITCH IN LOW
196 DB/OG
C216
SEE POWER DISTRIBUTION PAGE 13-3
SEE POWER DISTRIBUTION PAGE 13-24
15 RD/YE
12V
12V (HEAD)
C210
FROM C146
PAGE 97-1
A
MULTIFUNCTION SWITCH
SEE PAGE 149-3 FOR SWITCH TESTING
151–11 B10
FLASH-TO-PASS SWITCH
HIGH
LOW
PASS
196
15
DIMMER SWITCH
HIGH
LOW
PASS
12
507
13 RD/BK
SEE POWER DISTRIBUTION PAGE 13-19
632 GY/OG
C210
13 RD/BK
SEE POWER DISTRIBUTION PAGE 13-15
CENTRAL JUNCTION BOX
PAGES 13-15, 13-19
33
15A
4
10A
8
10A
INSTRUMENT CLUSTER
PAGE 62-5
12 LG/BK
12 LG/BK
1055 WH/LG
1056 DB/LG
C148F
C148M
151–3 C10
12 LG/BK
1055 WH/LG
1056 DB/LG
TO C134
PAGE 97-1
B
12 LG/BK
S111
12 LG/BK
12 LG/BK
*12V
**12V
C136
*12V
**12V
C131
HIGH
LOW
LEFT HEADLAMP
151–1 F9
HIGH
LOW
RIGHT HEADLAMP
151–1 F2
0V
C136
57 BK
G100
0V
C131
57 BK
G102
SEE GROUNDS PAGE 10-3
SEE GROUNDS PAGE 10-2
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.