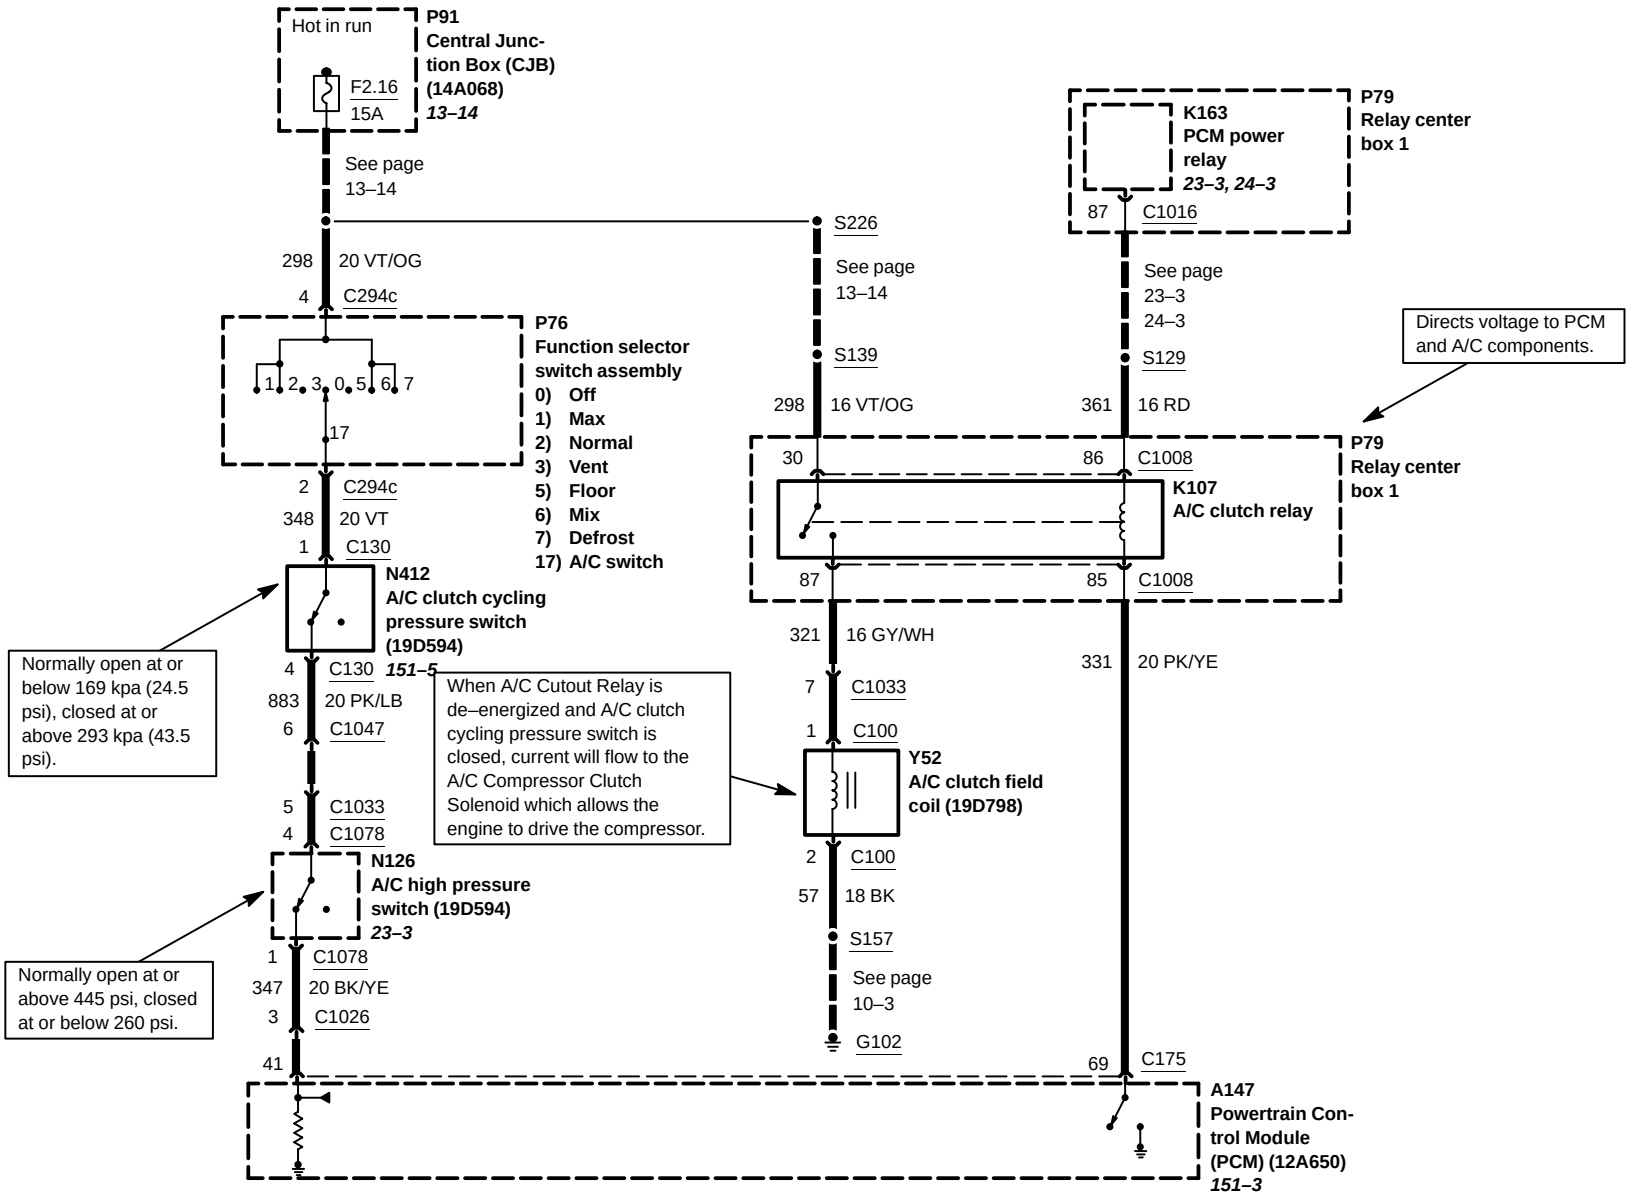
Hot in run
P91
Central Junction Box (CJB) (14A068)
13–14
F2.16
15A
See page 13–14
298
20 VT/OG
4
C294c
P76
Function selector switch assembly
0) Off
1) Max
2) Normal
3) Vent
5) Floor
6) Mix
7) Defrost
17) A/C switch
1 2 3 0 5 6 7
17
2
C294c
348
20 VT
1
C130
N412
A/C clutch cycling pressure switch (19D594)
4
C130
151–5
883
20 PK/LB
6
C1047
5
C1033
4
C1078
N126
A/C high pressure switch (19D594)
23–3
1
C1078
347
20 BK/YE
3
C1026
41
Normally open at or below 169 kpa (24.5 psi), closed at or above 293 kpa (43.5 psi).
Normally open at or above 445 psi, closed at or below 260 psi.
When A/C Cutout Relay is de–energized and A/C clutch cycling pressure switch is closed, current will flow to the A/C Compressor Clutch Solenoid which allows the engine to drive the compressor.
S226
See page 13–14
S139
298
16 VT/OG
321
16 GY/WH
7
C1033
1
C100
Y52
A/C clutch field coil (19D798)
2
C100
57
18 BK
S157
See page 10–3
G102
K163
PCM power relay
23–3, 24–3
87
C1016
P79
Relay center box 1
See page 23–3 24–3
S129
361
16 RD
Directs voltage to PCM and A/C components.
30
86
C1008
K107
A/C clutch relay
87
85
C1008
P79
Relay center box 1
331
20 PK/YE
69
C175
A147
Powertrain Control Module (PCM) (12A650)
151–3