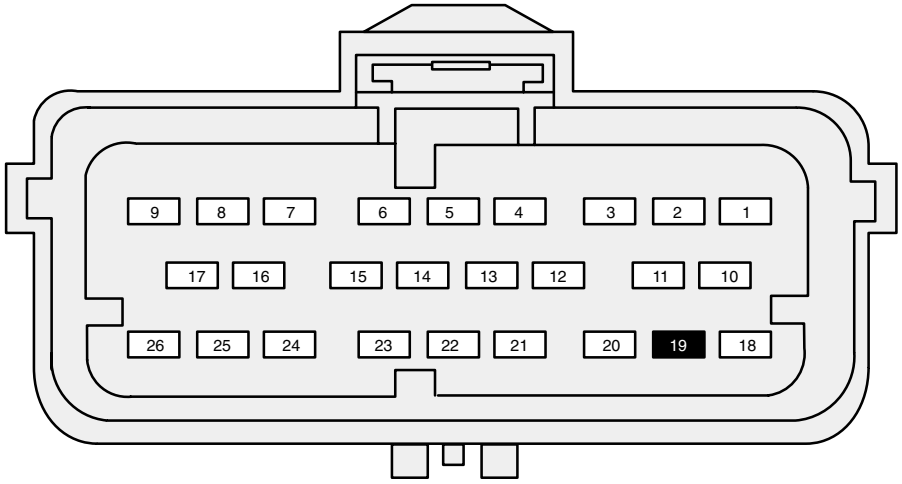

C276

RESTRAINT CONTROL MODULE (RCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1556 (DG/VT)	Passenger Seat Weight Module Feed	14	1262 (BN/LG)	Driver Side Impact Satellite Sensor
2	1557 (DB/OG)	Passenger Seat Weight Module Return	15	1257 (WH/LB)	Driver Side Air Bag Ignitor Feed
3	1079 (LG/RD)	Driver Safety Belt Pretensioner Feed	16	1258 (RD)	Driver Side Air Bag Ignitor Return
4	1080 (LG/BK)	Driver Safety Belt Pretensioner Return	17	1263 (WH)	Passenger Side Impact Satellite Sensor
5	85 (LG/OG)	Driver Buckle Switch	18	1264 (BN)	Passenger Side Impact Satellite Sensor
6	1081 (YE/RD)	Passenger Safety Belt Pretensioner Feed	19	–	NOT USED
7	1082 (YE/BK)	Passenger Safety Belt Pretensioner Return	20	1518 (RD/WH)	Passenger Air Bag Ignitor #2 Feed
8	1520 (LG)	Driver Seat Track Sensor Feed	21	1519 (GY/RD)	Passenger Air Bag Ignitor #2 Return
9	1558 (TN/BK)	Driver Seat Track Sensor Return	22	629 (BN)	Pad Lamp
10	1514 (RD/BK)	Passenger Buckle Switch	23	1259 (WH/YE)	Passenger Air Bag Ignitor Feed
11	1516 (YE/WH)	Driver Air Bag Ignitor #2 Feed	24	1260 (BN/YE)	Passenger Air Bag Ignitor Return
12	1517 (RD/OG)	Driver Air Bag Ignitor #2 Return	25	617 (PK/OG)	Front Crash Sensor Feed
13	1261 (WH/LG)	Driver Side Impact Satellite Sensor	26	618 (VT/LG)	Front Crash Sensor Return