Duratec–VE

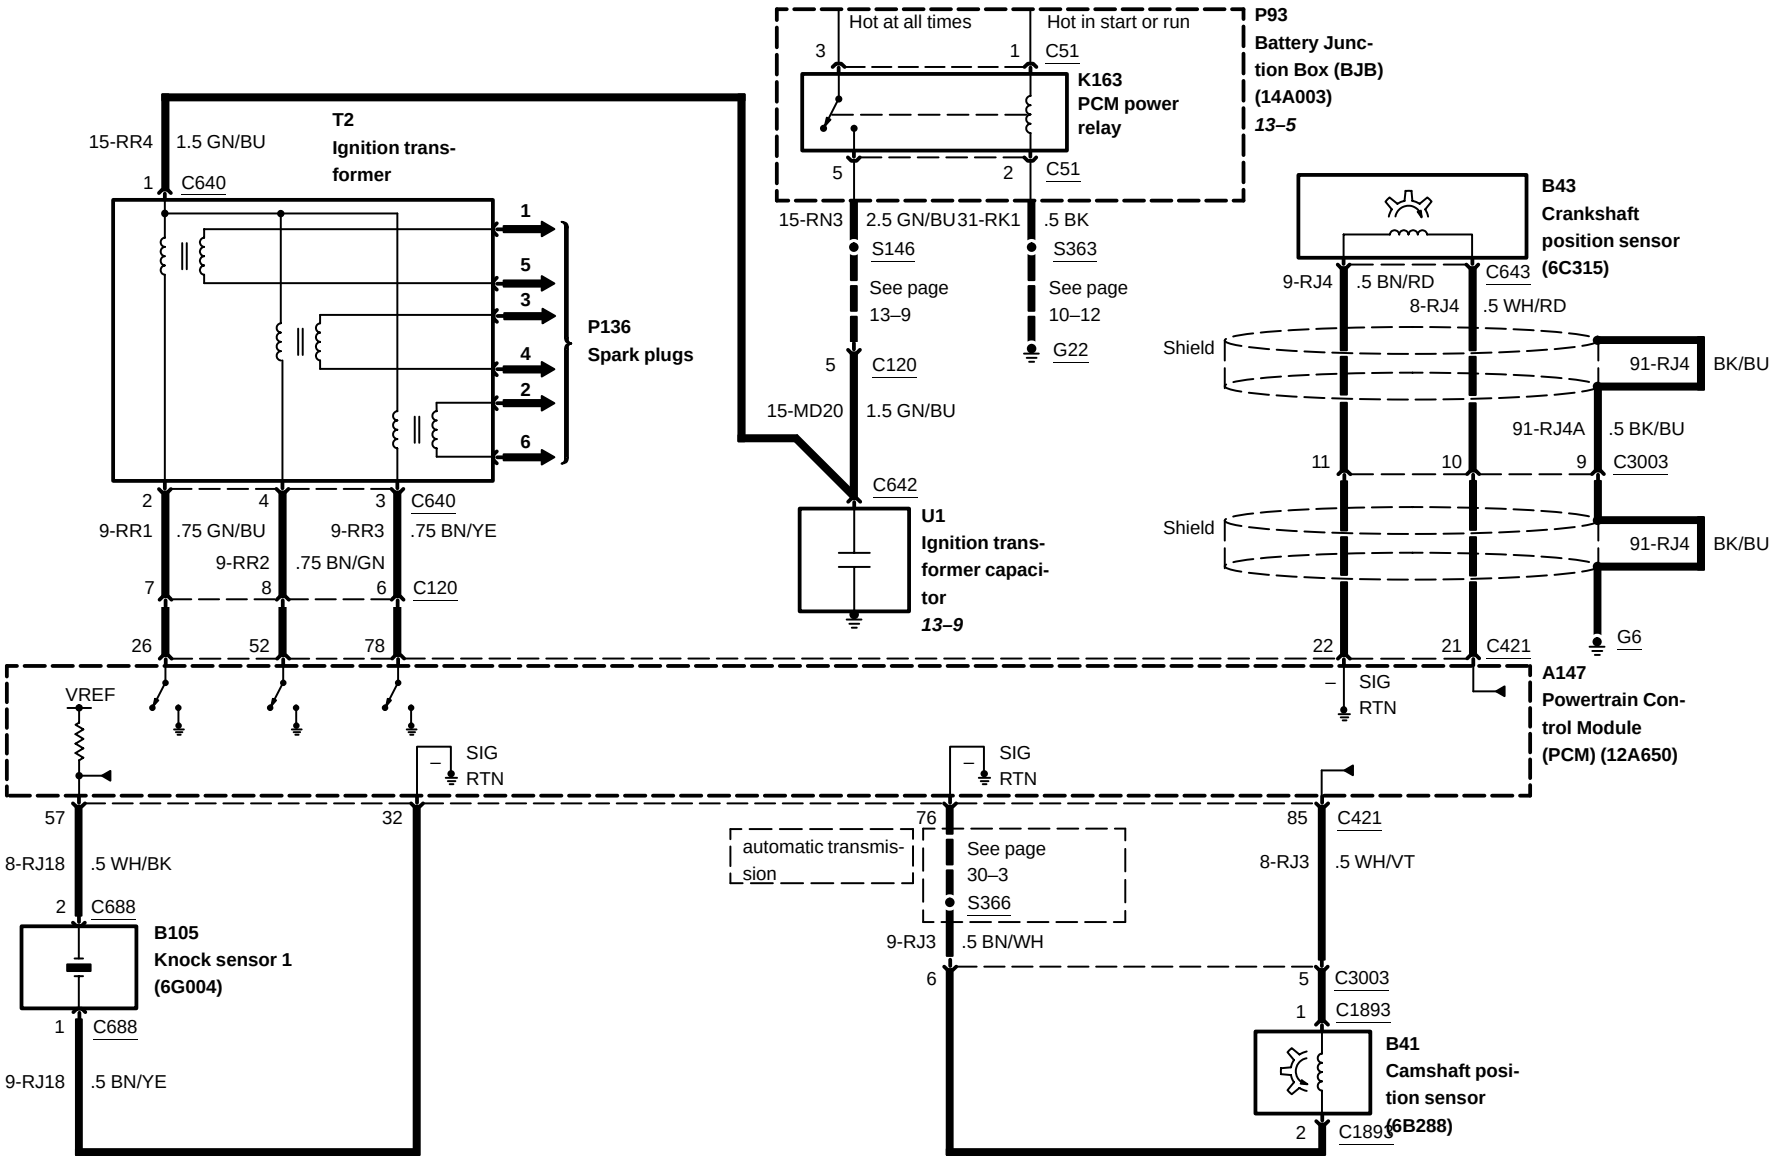
Hot at all times
Hot in start or run
P93
Battery Junction Box (BJB)
(14A003)
13–5
K163
PCM power relay
T2
Ignition transformer
15-RR4 1.5 GN/BU
C640
P136
Spark plugs
15-RN3 2.5 GN/BU
S146
See page 13–9
C120
15-MD20 1.5 GN/BU
C642
U1
Ignition transformer capacitor
13–9
31-RK1 .5 BK
S363
See page 10–12
G22
B43
Crankshaft position sensor
(6C315)
9-RJ4 .5 BN/RD
8-RJ4 .5 WH/RD
C643
Shield
91-RJ4 BK/BU
91-RJ4A .5 BK/BU
C3003
G6
9-RR1 .75 GN/BU
9-RR2 .75 BN/GN
9-RR3 .75 BN/YE
C640
C120
VREF
SIG RTN
A147
Powertrain Control Module
(PCM) (12A650)
automatic transmission
See page 30–3
S366
8-RJ18 .5 WH/BK
C688
B105
Knock sensor 1
(6G004)
9-RJ18 .5 BN/YE
9-RJ3 .5 BN/WH
8-RJ3 .5 WH/VT
C421
C1893
B41
Camshaft position sensor
(6B288)