39-1 EXHAUST BRAKE SYSTEM
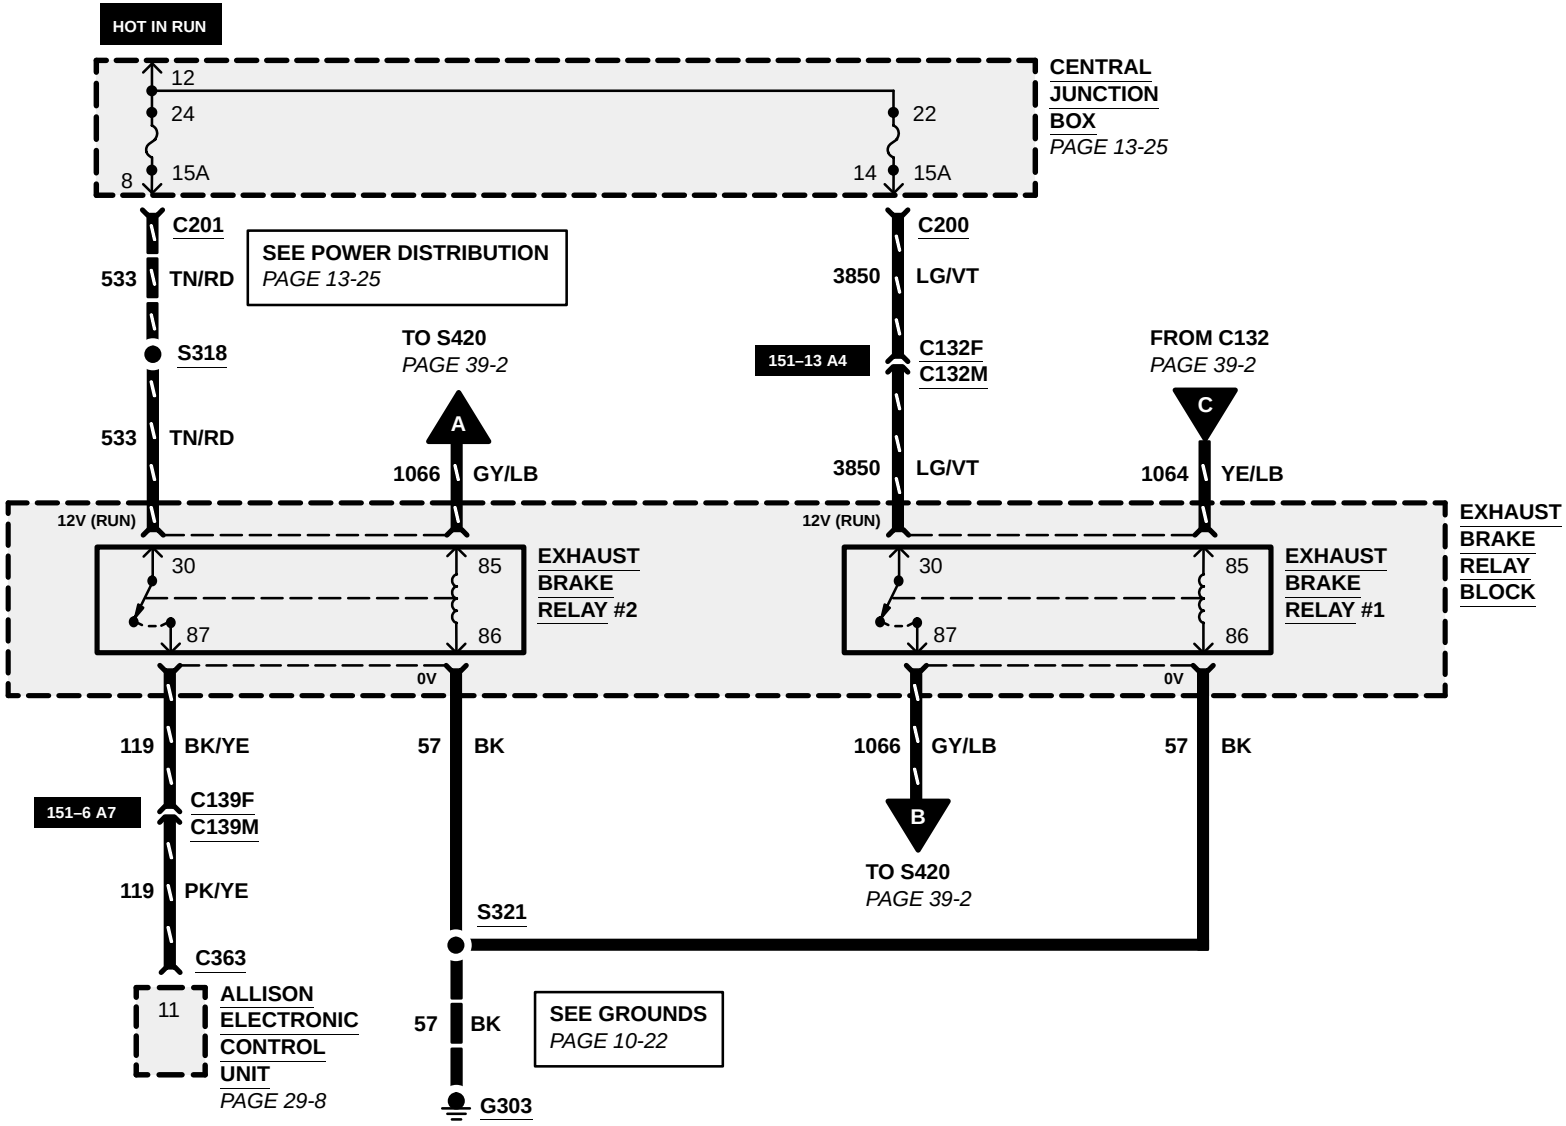
For diagnostic information, refer to Section 309-00 of the Workshop Manual.