C341a

14B719

A207
Driver seat module

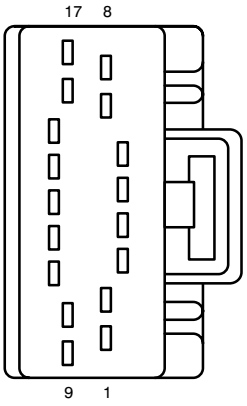

F17005

Pin	Circuit	Circuit Function
1	33-AH37 (YE/GN)	Switched between: Battery voltage, Ground or Open
2	32-AH36 (WH/RD)	Switched between: Battery voltage, Ground or Open
3	9-AH30 (BN/BU)	Sensor signal return (reference/ground)
4	8-AH26 (WH/RD)	Sensor signal
5	8-AH24 (WH/BK)	Sensor signal
6	7-AH30 (YE/BU)	Voltage D.C. supplied at all times (sensor)
7	33-AH38 (YE/BK)	Switched between: Battery voltage, Ground or Open
8	33-AH41 (YE/VT)	Switched between: Battery voltage, Ground or Open
9	33-AH36 (YE/RD)	Switched between: Battery voltage, Ground or Open
10	32-AH37 (WH/GN)	Switched between: Battery voltage, Ground or Open
11	9-AH80 (BN/WH)	Sensor signal return (reference/ground)
12	–	not used
13	8-AH30 (WH/BU)	Sensor signal
14	8-AH25 (WH/GN)	Sensor signal
15	7-AH80 (YE/VT)	Voltage D.C. supplied at all times (sensor)
16	32-AH41 (WH/VT)	Switched between: Battery voltage, Ground or Open
17	32-AH38 (WH/BK)	Switched between: Battery voltage, Ground or Open

C341b

14B719

A207
Driver seat module

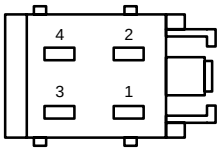

F04137

Pin	Circuit	Circuit Function
1	–	not used
2	30-AH80 (RD)	Voltage supplied at all times (not overload protected)
3	–	not used
4	31-AH80 (BK)	Ground