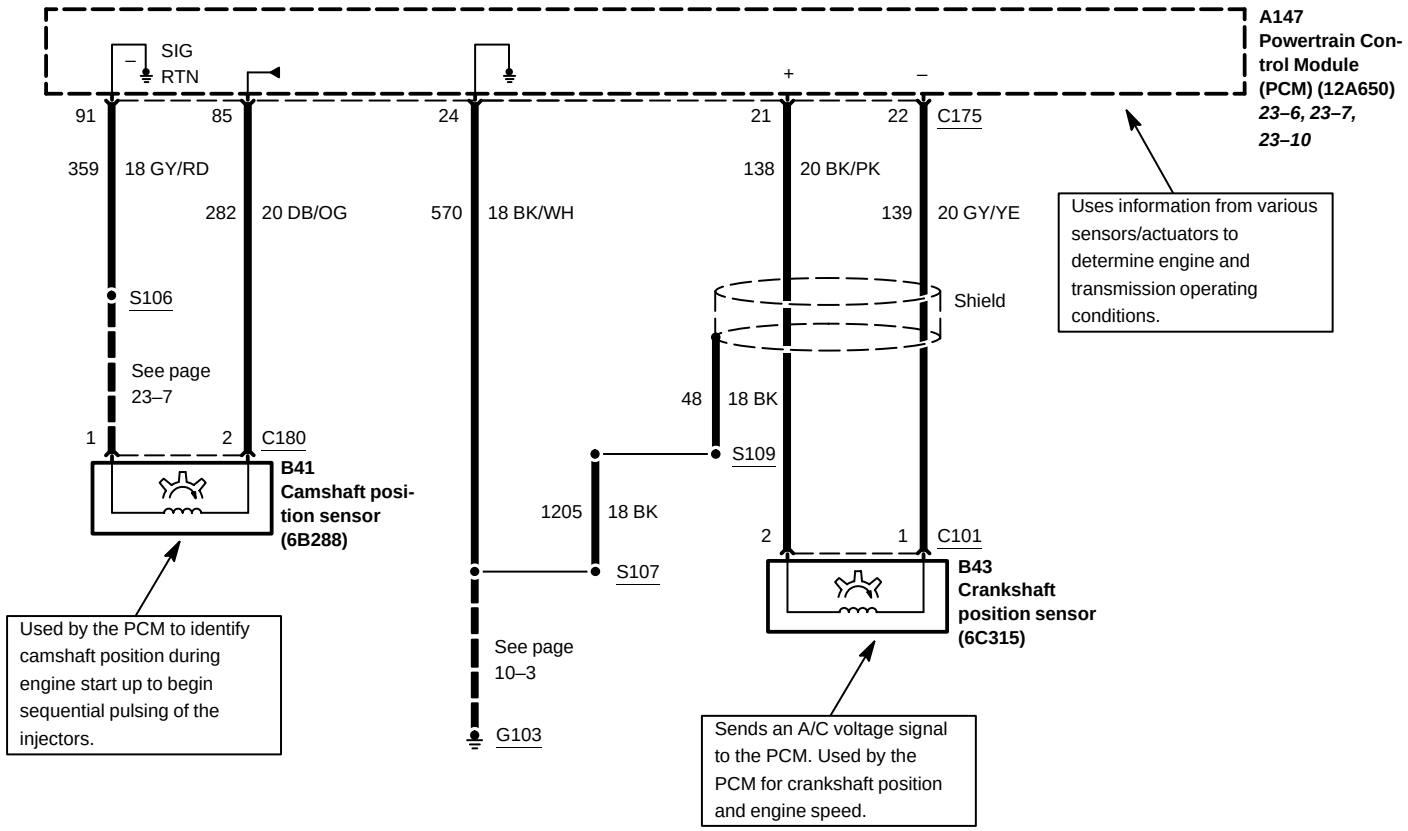
A147
Powertrain Control Module
(PCM) (12A650)
23–6, 23–7,
23–10
SIG
RTN
91
85
24
21
22
C175
359
18 GY/RD
282
20 DB/OG
570
18 BK/WH
138
20 BK/PK
139
20 GY/YE
Uses information from various sensors/actuators to determine engine and transmission operating conditions.
S106
See page 23–7
Shield
48
18 BK
S109
1
2
C180
B41
Camshaft position sensor
(6B288)
1205
18 BK
S107
2
1
C101
B43
Crankshaft position sensor
(6C315)
Used by the PCM to identify camshaft position during engine start up to begin sequential pulsing of the injectors.
See page 10–3
G103
Sends an A/C voltage signal to the PCM. Used by the PCM for crankshaft position and engine speed.