C740

14A584

N70
Power mirror adjust switch

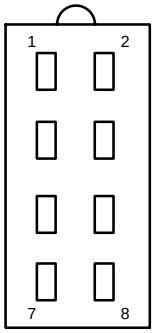

F08013

Pin	Circuit	Circuit Function
1	32-AD11 (WH/VT)	Switched between: Battery voltage, Ground or Open
2	–	not used
3	32-AD8 (WH/BU)	Switched between: Battery voltage, Ground or Open
4	31-AD12 (BK) + 31-HB37 (BK)	Ground
5	33-AD1 (YE/RD)	Switched between: Battery voltage, Ground or Open
6	29-AD12 (OG/YE)	Voltage supplied at all times (overload protected)
7	32-AD10 (WH/BK)	Switched between: Battery voltage, Ground or Open
8	32-AD7 (WH/RD)	Switched between: Battery voltage, Ground or Open

C748

14335

A167
Sliding roof opening panel unit

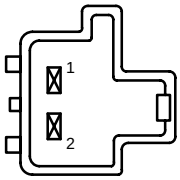

F02050

Pin	Circuit	Circuit Function
1	31-AG12 (BK)	Ground
2	15-AG12 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)

C751

8C290

R27
Engine cooling fan resistor

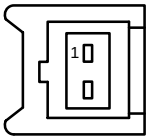

F02012

Pin	Circuit	Circuit Function
1	15S-PA2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15S-PA9 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched

C753

14K733

E40
Side lamp, left front

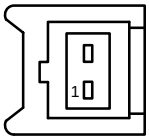

F02012

Pin	Circuit	Circuit Function
1	31-LF8 (BK)	Ground
2	29S-LF8 (OG)	Voltage supplied at all times (overload protected), switched

C754

14K733

E32
Side lamp, right front

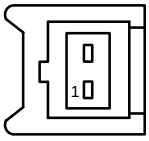

F02012

Pin	Circuit	Circuit Function
1	31-LF17 (BK)	Ground
2	29S-LF17 (OG/WH)	Voltage supplied at all times (overload protected), switched