## C440

### 14A005

B17
Wheel speed sensor, left rear

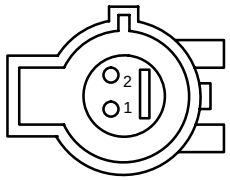


F02078

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 519 (LG/BK) | Wheel speed sensor, left rear – |
| 2 | 518 (LG/RD) | Wheel speed sensor, left rear + |

## C487

### 13412

E105
Reversing lamp, left (13411)

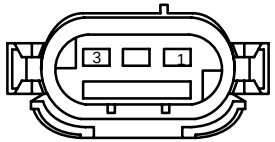


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | – | not used |
| 3 | 57 (BK) | Ground |

## C488

### 13412

E109
Reversing lamp, right (13411)

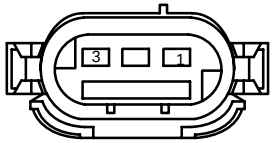


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 140 (BK/PK) | Voltage supplied in reverse |
| 2 | – | not used |
| 3 | 57 (BK) | Ground |

## C500

### 14A005

A244
Key pad switch assembly

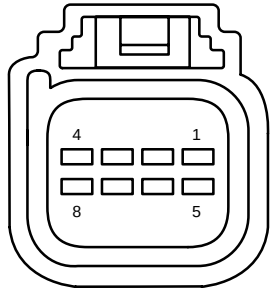


F08203

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 78 (LB/YE) | Key pad button 1/2, output |
| 2 | 797 (LG/VT) | Voltage supplied at all times (overload protected) |
| 3 | 79 (LG/RD) | Key pad button 3/4, output |
| 4 | – | not used |
| 5 | 66 (LB) | Key pad illumination |
| 6 | 57 (BK) | Ground |
| 7 | 121 (YE/BK) | Key pad button 5/6, output |
| 8 | – | not used |