Marauder

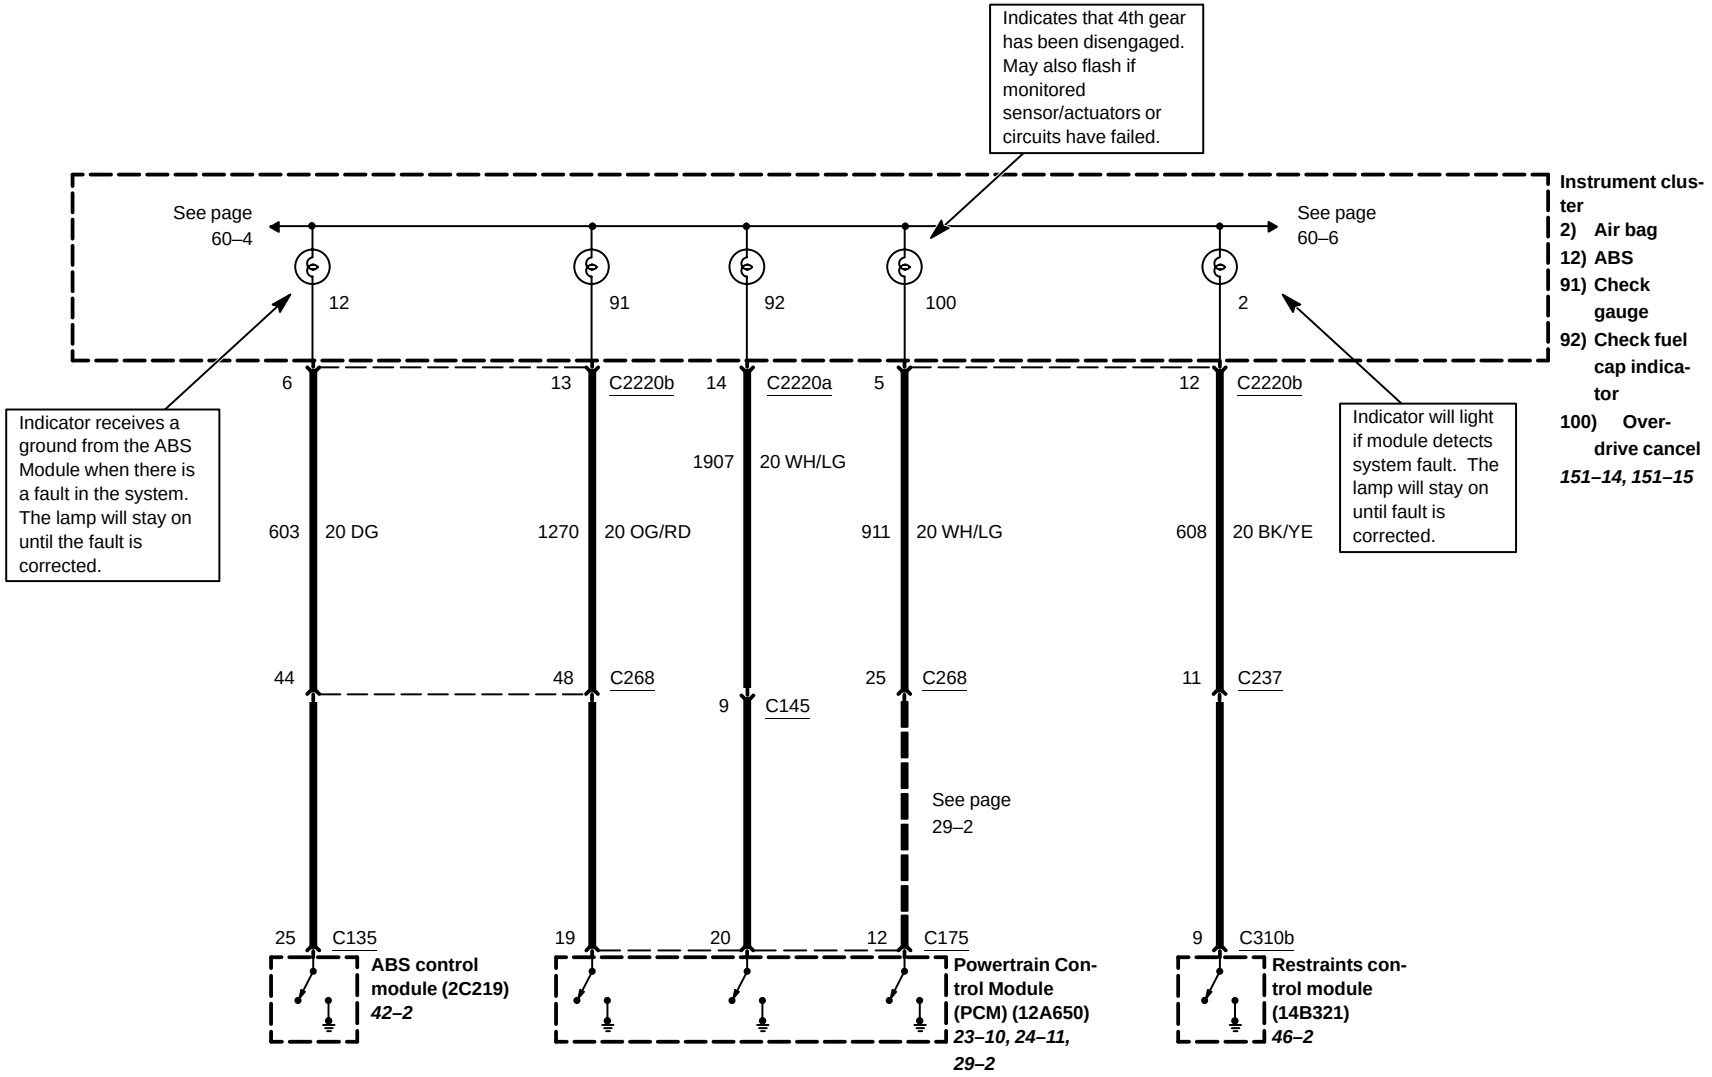
Indicates that 4th gear has been disengaged. May also flash if monitored sensor/actuators or circuits have failed.
Instrument cluster
2) Air bag
12) ABS
91) Check gauge
92) Check fuel cap indicator
100) Overdrive cancel
151–14, 151–15
See page 60–4
See page 60–6
12
91
92
100
2
Indicator receives a ground from the ABS Module when there is a fault in the system. The lamp will stay on until the fault is corrected.
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
6
13
C2220b
14
C2220a
5
12
C2220b
1907
20 WH/LG
603
20 DG
1270
20 OG/RD
911
20 WH/LG
608
20 BK/YE
44
48
C268
9
C145
25
C268
11
C237
See page 29–2
25
C135
19
20
12
C175
9
C310b
ABS control module (2C219)
42–2
Powertrain Control Module (PCM) (12A650)
23–10, 24–11, 29–2
Restraints control module (14B321)
46–2