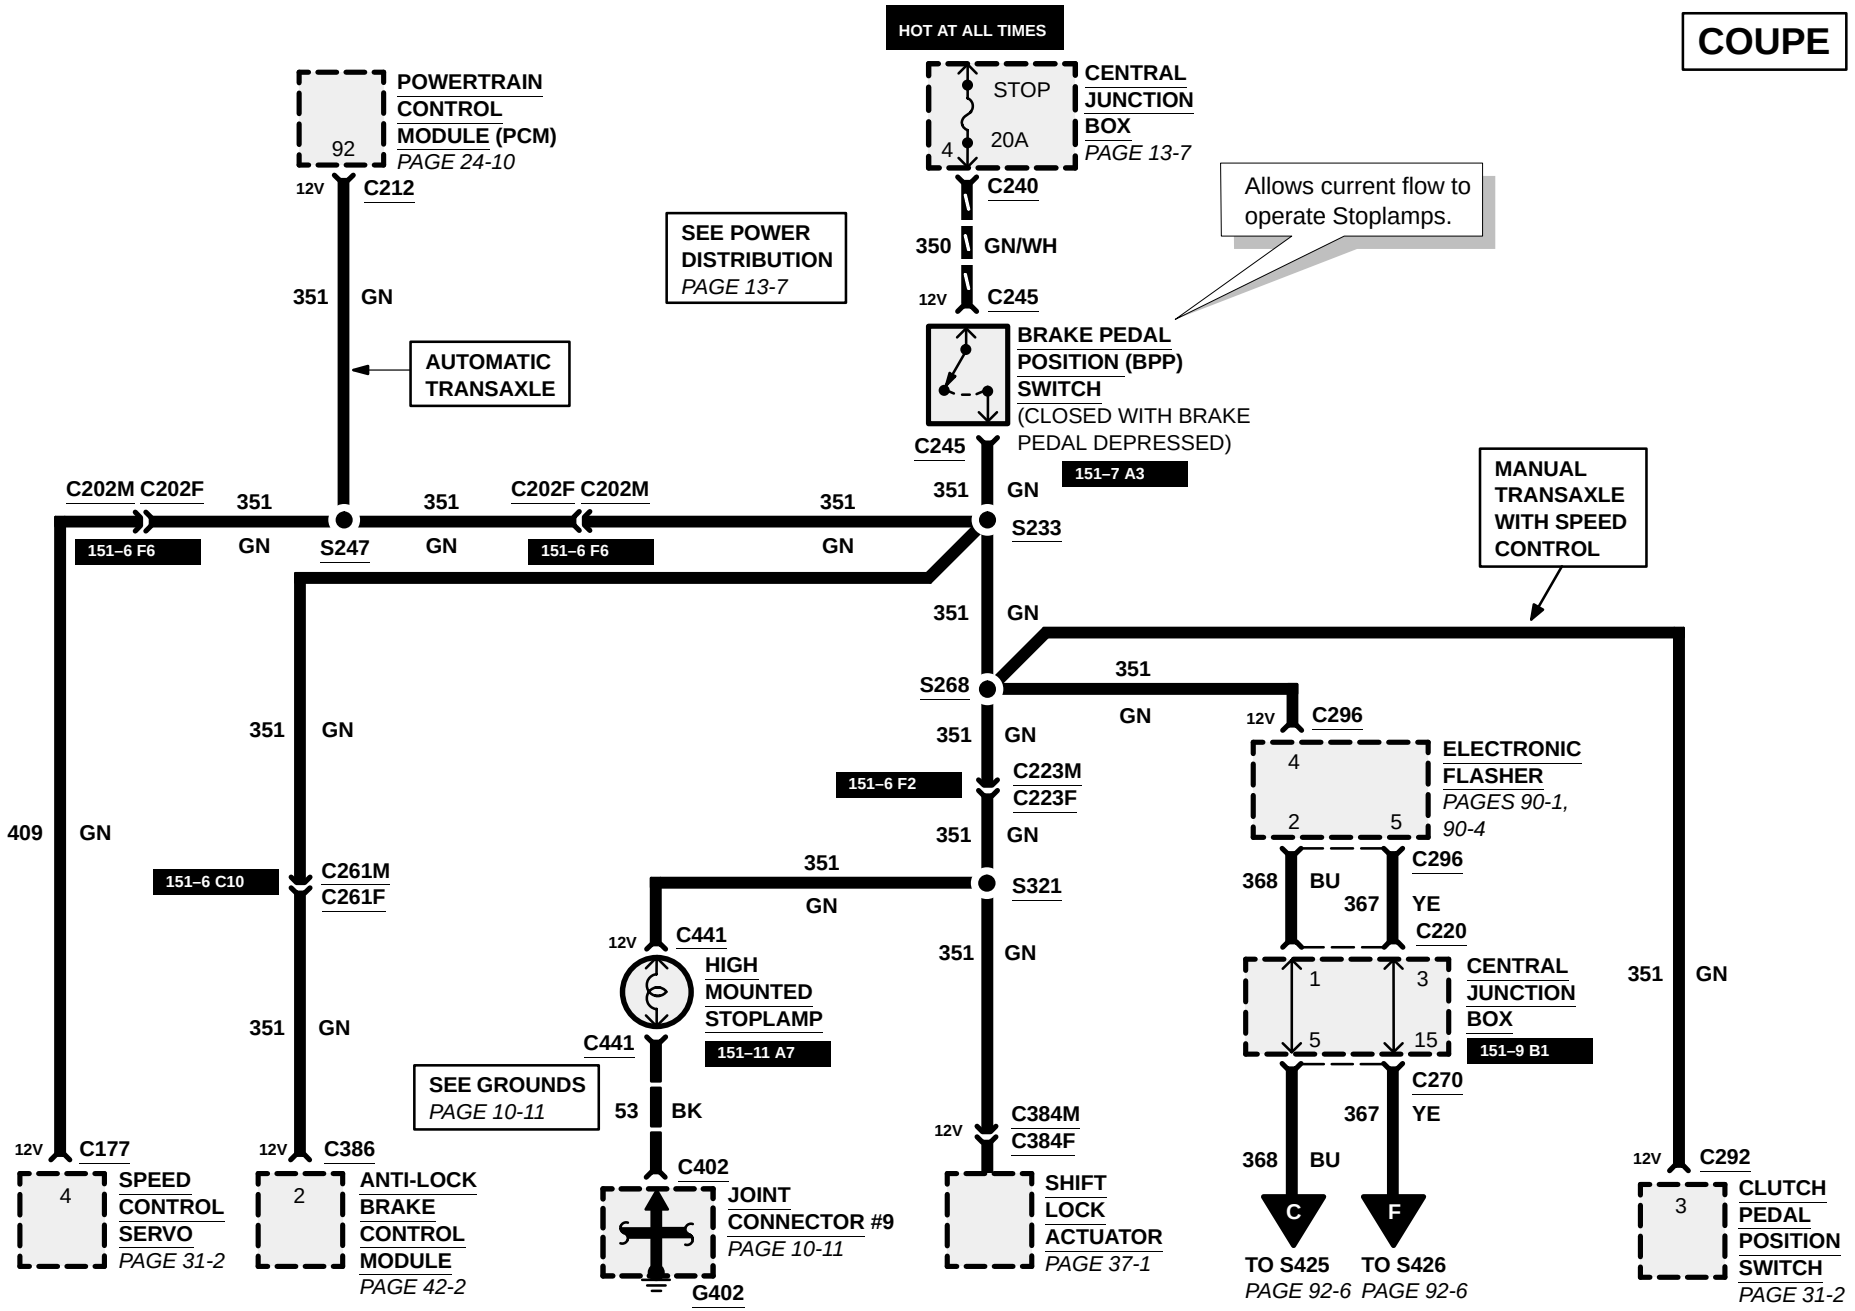
COUPE
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGE 13-7
STOP
20A
4
C240
350 GN/WH
12V C245
Allows current flow to operate Stoplamps.
BRAKE PEDAL POSITION (BPP) SWITCH
(CLOSED WITH BRAKE PEDAL DEPRESSED)
C245
351 GN
151–7 A3
POWERTRAIN CONTROL MODULE (PCM)
PAGE 24-10
92
12V C212
SEE POWER DISTRIBUTION
PAGE 13-7
351 GN
AUTOMATIC TRANSAXLE
MANUAL TRANSAXLE WITH SPEED CONTROL
C202M C202F
351 GN
151–6 F6
S247
C202F C202M
151–6 F6
S233
S268
C223M
C223F
151–6 F2
409 GN
151–6 C10
C261M
C261F
S321
C441
HIGH MOUNTED STOPLAMP
151–11 A7
SEE GROUNDS
PAGE 10-11
53 BK
C402
JOINT CONNECTOR #9
PAGE 10-11
G402
C384M
C384F
SHIFT LOCK ACTUATOR
PAGE 37-1
C177
SPEED CONTROL SERVO
PAGE 31-2
C386
ANTI-LOCK BRAKE CONTROL MODULE
PAGE 42-2
C296
ELECTRONIC FLASHER
PAGES 90-1, 90-4
368 BU
367 YE
C220
CENTRAL JUNCTION BOX
151–9 B1
C270
TO S425
PAGE 92-6
TO S426
PAGE 92-6
C292
CLUTCH PEDAL POSITION SWITCH
PAGE 31-2