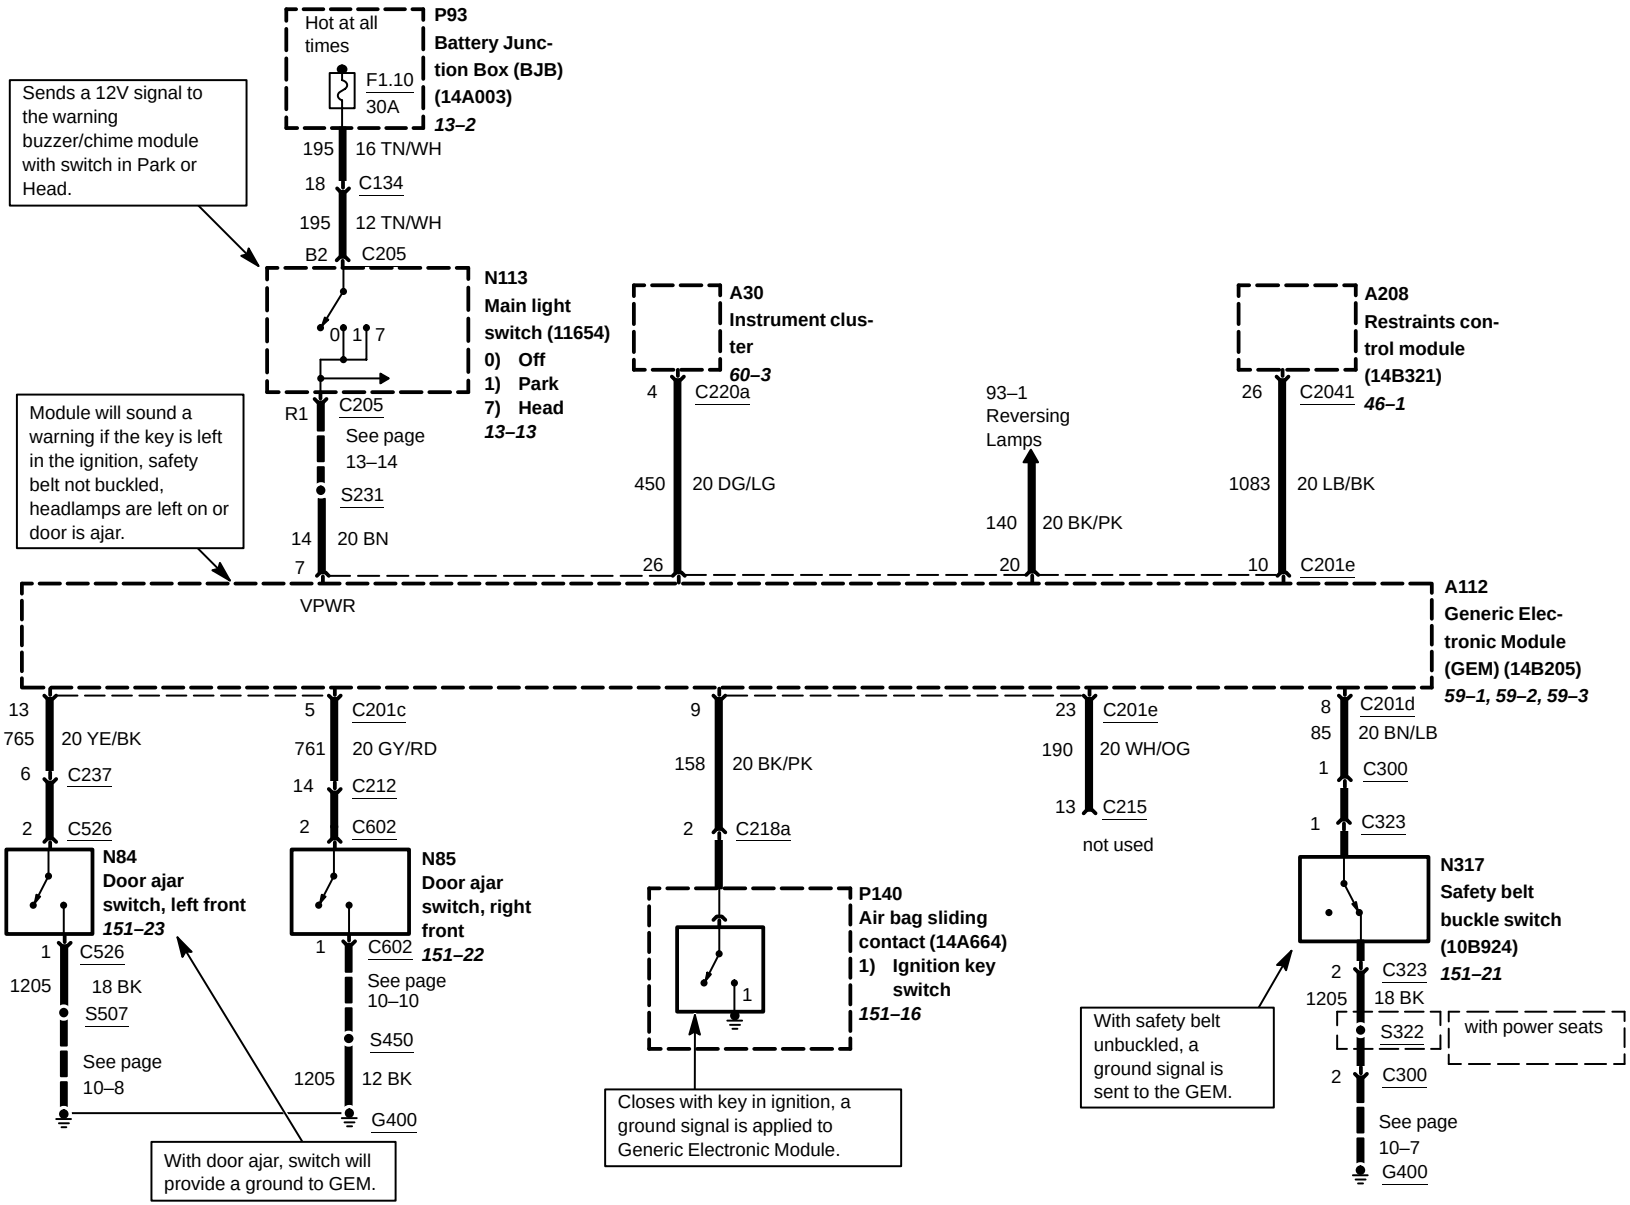
Hot at all times
P93
Battery Junction Box (BJB) (14A003)
13–2
F1.10
30A
195 16 TN/WH
18 C134
195 12 TN/WH
B2 C205
Sends a 12V signal to the warning buzzer/chime module with switch in Park or Head.
N113
Main light switch (11654)
0) Off
1) Park
7) Head
13–13
0 1 7
R1 C205
See page 13–14
S231
14 20 BN
7
VPWR
Module will sound a warning if the key is left in the ignition, safety belt not buckled, headlamps are left on or door is ajar.
A30
Instrument cluster
60–3
4 C220a
450 20 DG/LG
26
93–1 Reversing Lamps
140 20 BK/PK
20
A208
Restraints control module (14B321)
46–1
26 C2041
1083 20 LB/BK
10 C201e
A112
Generic Electronic Module (GEM) (14B205)
59–1, 59–2, 59–3
13
765 20 YE/BK
6 C237
2 C526
N84
Door ajar switch, left front
151–23
1 C526
1205 18 BK
S507
See page 10–8
5 C201c
761 20 GY/RD
14 C212
2 C602
N85
Door ajar switch, right front
151–22
1 C602
See page 10–10
S450
1205 12 BK
G400
With door ajar, switch will provide a ground to GEM.
9
158 20 BK/PK
2 C218a
P140
Air bag sliding contact (14A664)
1) Ignition key switch
151–16
1
Closes with key in ignition, a ground signal is applied to Generic Electronic Module.
23 C201e
190 20 WH/OG
13 C215
not used
8 C201d
85 20 BN/LB
1 C300
1 C323
N317
Safety belt buckle switch (10B924)
151–21
2 C323
1205 18 BK
S322
with power seats
2 C300
See page 10–7
G400
With safety belt unbuckled, a ground signal is sent to the GEM.