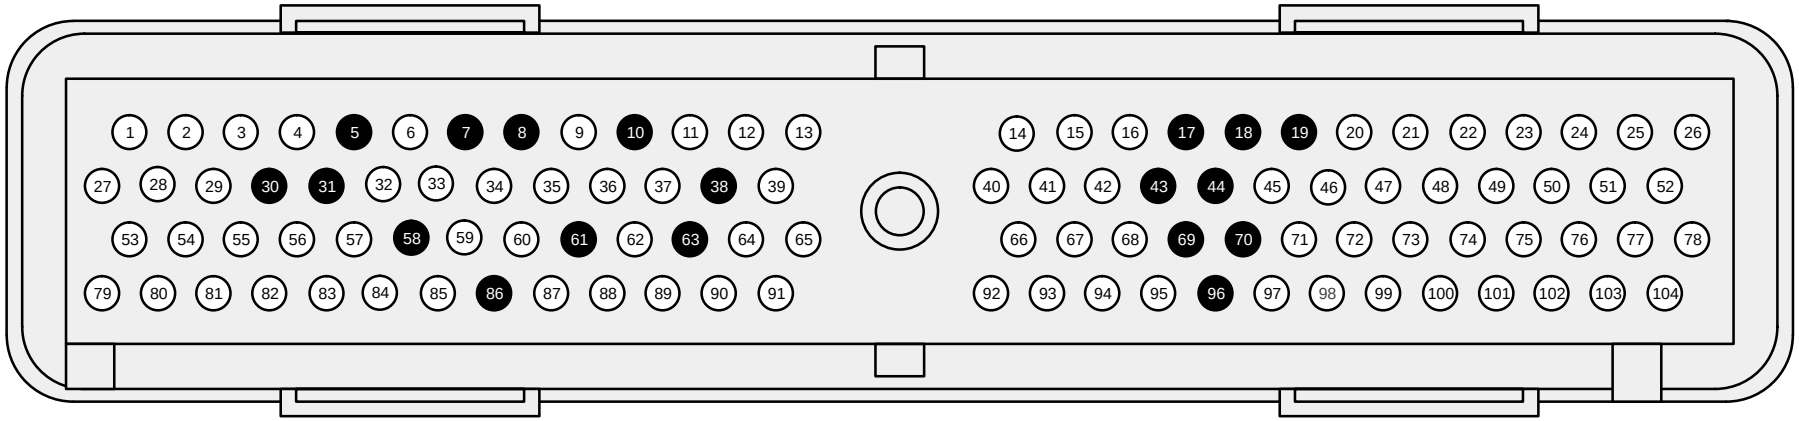

C154

POWERTRAIN CONTROL MODULE (PCM)

6.8L

*** STRIPPED CHASSIS**

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	1025 (OG/YE)	Coil On Plug #6	17	–	NOT USED
2	658 (PK/LG)	MIL Lamp Control	18	–	NOT USED
3	570 (BK/WH)	Ground	19	–	NOT USED
4	828 (VT/LB)	Power Take Off (PTO)	20	924 (BN/OG)	Coast Clutch Solenoid
5	–	NOT USED	21	349 (DB)	Crankshaft Position Sensor (+)
6	237 (OG/YE)	Shift Solenoid A	22	350 (GY)	Crankshaft Position Sensor (–)
7	–	NOT USED	23	570 (BK/WH)	Ground
8	–	NOT USED	24	570 (BK/WH)	Ground
9	29 (YE/WH)	Fuel Pump Sender	25	875 (BK/LB)	Ground
10	–	NOT USED	26	1024 (LG/WH)	Coil On Plug #1
11	315 (VT/OG)	Shift Solenoid B	27	1142 (WH/RD)	Coil On Plug #10
12	911 (WH/LG)	Overdrive Cancel Switch	28	*911 (WH/LG)	Overdrive Cancel Switch
13	107 (VT)	Generic Scan Tool Input	29	224 (TN/WH)	Transmission Control Switch
14	781 (OG/LB)	4 Low Switch	30	–	NOT USED
15	915 (PK/LB)	Bus (–)	31	–	NOT USED
16	914 (TN/OG)	Bus (+)	32	311 (DG/VT)	Knock Sensor (KS)

PIN	CIRCUIT	CIRCUIT FUNCTION
33	676 (PK/OG)	Ground
34	1144 (YE/BK)	Digital Transmission Range (DTR) Sensor (TR1)
35	392 (RD/LG)	Heated Oxygen Sensor (HO2S) #12
36	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
37	923 (OG/BK)	Transmission Fluid Temperature Sensor
38	–	NOT USED
39	743 (GY)	Intake Air Temperature Input
40	238 (DG/YE)	Fuel Pump Monitor
41	347 (BK/YE)	A/C ON Input Signal
42	1101 (GY/RD)	Fuel Injector #10
43	–	NOT USED
44	–	NOT USED
45	1105 (YE/LB)	Feed to Instrument Cluster
46	679 (GY/BK)	Vehicle Speed Control
47	360 (BN/PK)	Exhaust Gas Recirculation (EGR) Solenoid
48	648 (WH/PK)	Clean Tach Output (CTO)
49	1145 (LB/BK)	Digital Transmission Range (DTR) Sensor (TR2)
50	1146 (LG/RD)	Digital Transmission Range (DTR) Sensor (TR4)
51	570 (BK/WH)	Ground
52	1021 (LG/YE)	Coil On Plug #5
53	1027 (PK/LB)	Coil On Plug #7
54	480 (VT/YE)	Torque Converter Clutch (TCC) Solenoid
55	37 (YE)	Keep Alive Power Input
56	191 (LG/BK)	Evaporative Emissions (EVAP) Canister Purge Valve
57	310 (YE/RD)	Knock Sensor (KS)
58	–	NOT USED
59	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor
60	74 (GY/LB)	HEGO #11

PIN	CIRCUIT	CIRCUIT FUNCTION
61	–	NOT USED
62	791 (RD/PK)	Fuel Tank Pressure Transducer
63	–	NOT USED
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)
65	352 (BN/LG)	Delta Pressure Feedback EGR (DPFE) Sensor
66	1102 (YE/LG)	Cylinder Head Temperature Sensor
67	91 (VT/WH)	Canister Vent Solenoid
68	1100 (GY/BK)	Fuel Injector #9
69	–	NOT USED
70	–	NOT USED
71	361 (RD)	Power Input
72	561 (TN/RD)	Fuel Injector #7
73	559 (TN/BK)	Fuel Injector #5
74	557 (BN/YE)	Fuel Injector #3
75	555 (TN)	Fuel Injector #1
76	570 (BK/WH)	Ground
77	570 (BK/WH)	Ground
78	1026 (PK/WH)	Coil On Plug #2
79	1029 (WH/RD)	Coil On Plug #8
80	926 (LB/OG)	Fuel Pump Relay Control
81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid
82	1141 (YE/BK)	Coil On Plug #9
83	264 (WH/LB)	Idle Air Control (IAC) Valve
84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor
85	795 (DG)	Camshaft Position Sensor
86	–	NOT USED
87	94 (RD/BK)	HEGO #21
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Output Voltage
91	359 (GY/RD)	Signal Return

PIN	CIRCUIT	CIRCUIT FUNCTION
92	511 (LG)	Brake Pedal Position (BPP) Switch Input
93	387 (RD/WH)	HEGO #11 Voltage Monitor
94	388 (YE/LB)	HEGO #21 Voltage Monitor
95	389 (WH/BK)	HEGO #12 Voltage Monitor
96	–	NOT USED
97	361 (RD)	Power Input
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LB)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	1030 (DG/VT)	Coil On Plug #4
103	570 (BK/WH)	Ground
104	1028 (WH/PK)	Coil On Plug #3

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C114	30-8
C115	29-5, 30-8
C224	60-7
C225	60-7

6.8L

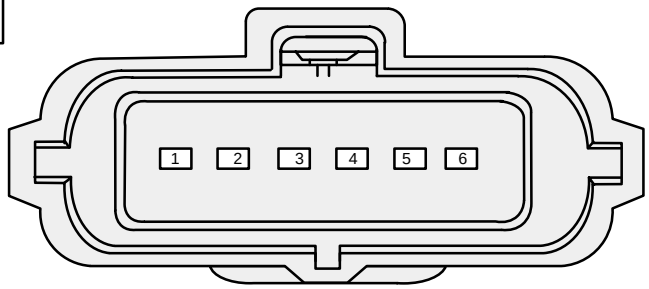

C1029

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	359 (GY/RD)	Sensor Signal Return
2	361 (RD)	Power Input
3	570 (BK/WH)	Ground
4	968 (TN/LB)	Mass Air Flow (MAF) Sensor Return
5	967 (LB/RD)	Mass Air Flow (MAF) Sensor
6	743 (GY)	Intake Air Temperature (IAT Sensor)