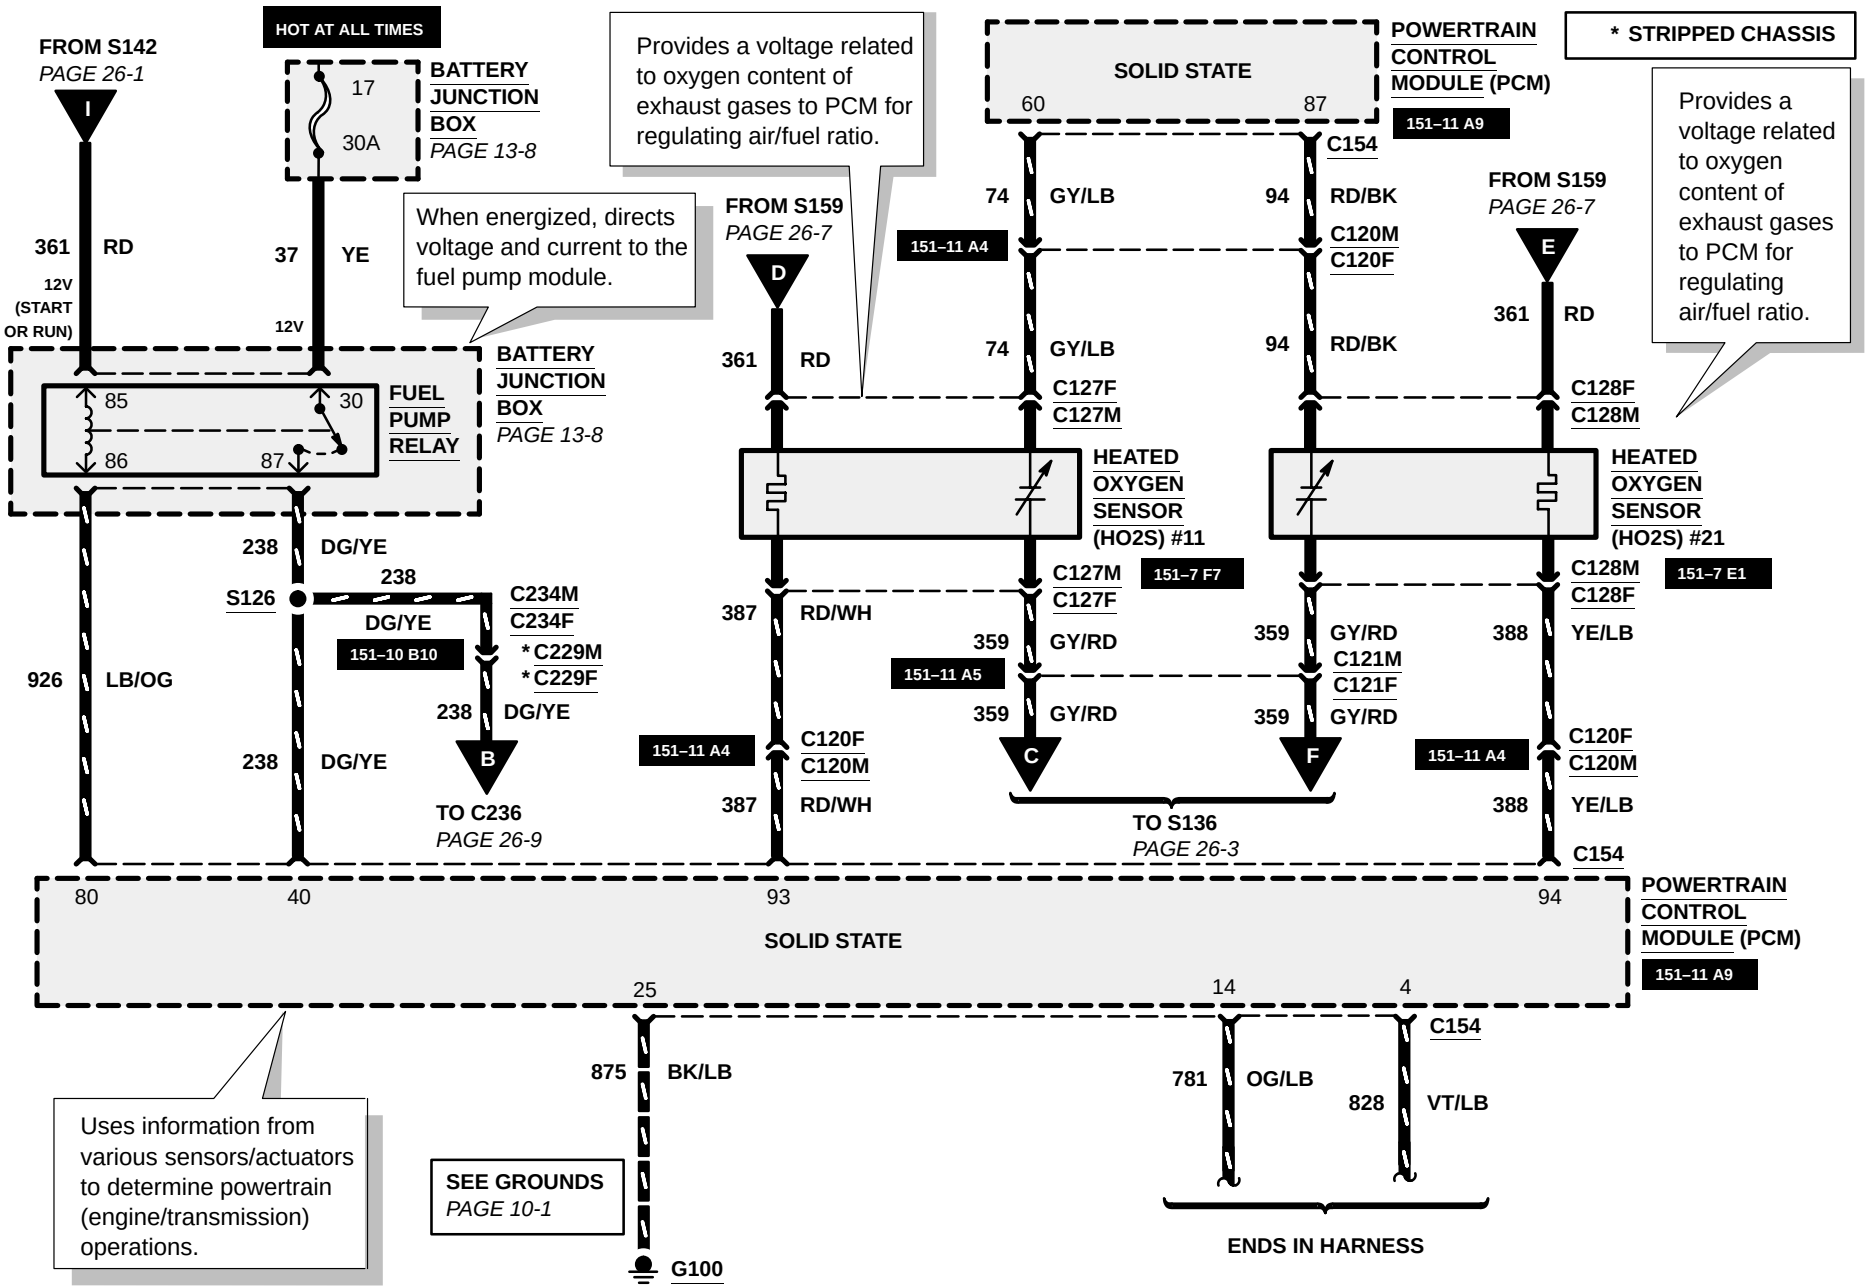
FROM S142
PAGE 26-1
I
HOT AT ALL TIMES
17
30A
BATTERY JUNCTION BOX
PAGE 13-8
361 RD
12V (START OR RUN)
37 YE
12V
When energized, directs voltage and current to the fuel pump module.
85
30
86
87
FUEL PUMP RELAY
BATTERY JUNCTION BOX
PAGE 13-8
238 DG/YE
238
S126
C234M
C234F
DG/YE
151–10 B10
*C229M
*C229F
926 LB/OG
238 DG/YE
B
TO C236
PAGE 26-9
238 DG/YE
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
FROM S159
PAGE 26-7
D
361 RD
387 RD/WH
151–11 A4
C120F
C120M
387 RD/WH
SOLID STATE
60
87
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
74 GY/LB
151–11 A4
74 GY/LB
C127F
C127M
HEATED OXYGEN SENSOR (HO2S) #11
C127M
C127F
151–7 F7
359 GY/RD
151–11 A5
359 GY/RD
C
TO S136
PAGE 26-3
94 RD/BK
C120M
C120F
94 RD/BK
C128F
C128M
HEATED OXYGEN SENSOR (HO2S) #21
C128M
C128F
151–7 E1
359 GY/RD
C121M
C121F
359 GY/RD
F
151–11 A4
C120F
C120M
388 YE/LB
388 YE/LB
C154
FROM S159
PAGE 26-7
E
361 RD
C128F
C128M
Provides a voltage related to oxygen content of exhaust gases to PCM for regulating air/fuel ratio.
* STRIPPED CHASSIS
80
40
93
94
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
25
14
4
875 BK/LB
781 OG/LB
828 VT/LB
C154
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
SEE GROUNDS
PAGE 10-1
G100
ENDS IN HARNESS