C503

14B121

Memory set switch (14776)

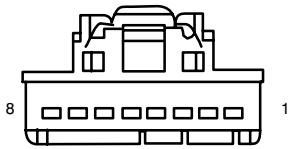

F08279

Pin	Circuit	Circuit function
1	–	not used
2	31-AH27A (BK/YE)	Illumination, Ground
3	8-AH32 (WH/BU)	Memory set switch (14776) - Set 2
4	8-AH27 (WH)	Memory set switch (14776) - Set
5	31-AH27 (BK)	Ground
6	64S-AH27 (BU)	Illumination, feed
7	8-AH31 (WH/RD)	Memory set switch (14776) - Set 1
8	7S-AH27 (YE)	Memory set switch (14776) - indicator

C504a

14B121

Master window adjust switch (14529)

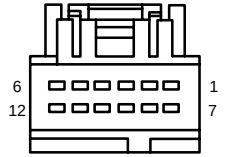

F12185

Pin	Circuit	Circuit function
1	–	not used
2	8-AJ56 (WH/GN)	Passenger front window circuit - one–touch up, one–touch down, switch sense
3	7S-AJ47 (YE/BK)	Passenger front window circuit - Up, switch sense
4	64S-LH14 (BU)	Illumination, feed
5	7S-AJ40 (YE/GN)	Driver front window circuit - Down, switch sense
6	–	not used
7	–	not used
8	31-AJ7 (BK/BU)	Ground
9	7S-AJ48 (YE/VT)	Passenger front window circuit - Down, switch sense
10	–	not used
11	8-AJ42 (WH/GN)	Driver front window circuit - one–touch up, one–touch down, switch sense
12	–	not used