C503

14A005

N440
Memory set switch
(14776)

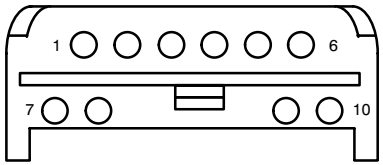

F10009

Pin	Circuit	Circuit function
1	270 (BN/OG)	Memory set switch (14776)
2	–	not used
3	268 (BK/OG)	Memory seat switch, position (2)
4	267 (BN/LG)	Memory seat switch, position (1)
5	–	not used
6	956 (OG/LG)	Voltage supplied at all times (overload protected)
7	–	not used
8	272 (WH/OG)	Memory set switch (14776), Illumination, input
9	875 (BK/LB)	Ground
10	–	not used

C504a

14A005

N447
Master window adjust switch (14529)

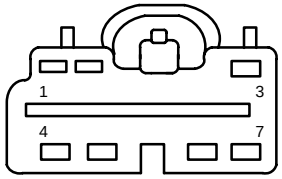

F07083

Pin	Circuit	Circuit function
1	19 (LB/RD)	Voltage supplied at all times (overload protected)
2	57 (BK)	Ground
3	193 (YE/LG)	Window safety relay, switched output
4	320 (RD/BK)	Window switch, feed, right rear, Down
5	319 (YE/BK)	Window switch, feed, right rear, Up
6	316 (YE/LB)	Window switch, feed, left rear, Up
7	317 (GY/OG)	Window switch, feed, left rear, Down