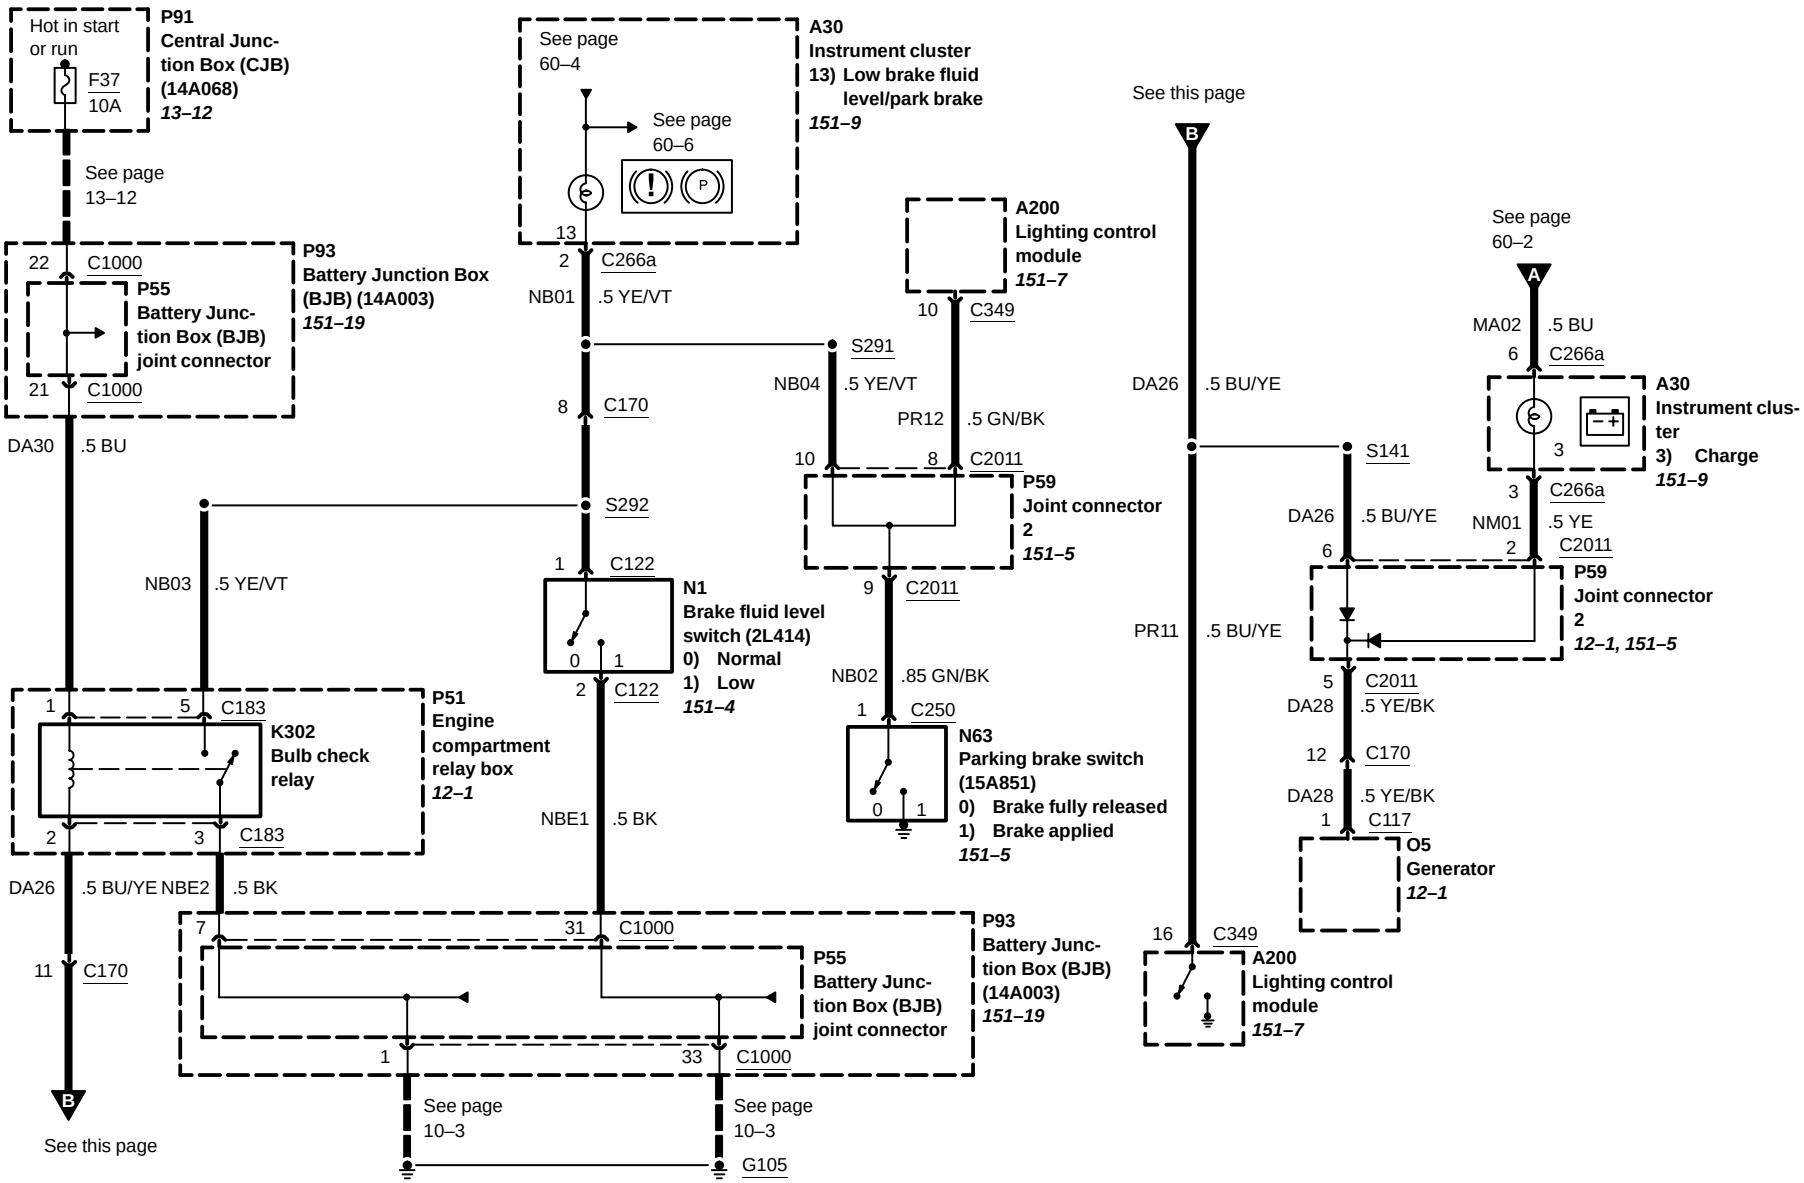
Hot in start or run
F37
10A
P91
Central Junction Box (CJB) (14A068)
13–12
See page 13–12
22 C1000
P55
Battery Junction Box (BJB) joint connector
21 C1000
P93
Battery Junction Box (BJB) (14A003)
151–19
DA30 .5 BU
See page 60–4
See page 60–6
13
2 C266a
NB01 .5 YE/VT
A30
Instrument cluster
13) Low brake fluid level/park brake
151–9
8 C170
S292
1 C122
NB03 .5 YE/VT
N1
Brake fluid level switch (2L414)
0) Normal
1) Low
151–4
2 C122
NBE1 .5 BK
A200
Lighting control module
151–7
10 C349
S291
NB04 .5 YE/VT
PR12 .5 GN/BK
10 8 C2011
P59
Joint connector 2
151–5
9 C2011
NB02 .85 GN/BK
1 C250
N63
Parking brake switch (15A851)
0) Brake fully released
1) Brake applied
151–5
See this page
B
DA26 .5 BU/YE
PR11 .5 BU/YE
16 C349
A200
Lighting control module
151–7
See page 60–2
A
MA02 .5 BU
6 C266a
A30
Instrument cluster
3) Charge
151–9
3 C266a
NM01 .5 YE
2 C2011
DA26 .5 BU/YE
6 S141
P59
Joint connector 2
12–1, 151–5
5 C2011
DA28 .5 YE/BK
12 C170
DA28 .5 YE/BK
1 C117
O5
Generator
12–1
1 5 C183
K302
Bulb check relay
2 3 C183
P51
Engine compartment relay box
12–1
DA26 .5 BU/YE NBE2 .5 BK
11 C170
B
See this page
7 31 C1000
P55
Battery Junction Box (BJB) joint connector
1 33 C1000
P93
Battery Junction Box (BJB) (14A003)
151–19
See page 10–3
See page 10–3
G105