C912 (GN)

14334

Roof opening panel switch (15B691)

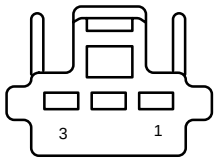

F03173

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	691 (DB)	Window motor, feed, Open
3	333 (YE/RD)	Window motor, feed, Up

C918 (WH)

14334

Interior lamps, front

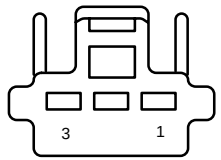

F03173

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	705 (LG/OG)	Battery saver relay, switched power

C913 (GY)

14334

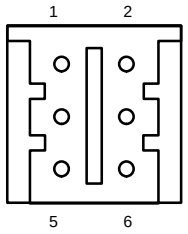

1) 691 (DB)
2) –
3) 57 (BK)
4) 333 (YG/RD)
5) 500 (LB/BK)
6) 334 (RD/YE)

F06329

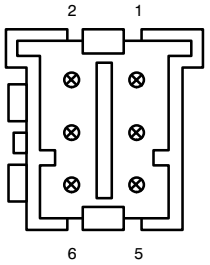

1) (PK)
2) –
3) (BK)
4) (TN)
5) (BK/LB)
6) (WH)

F06327

C919 (BK)

14335

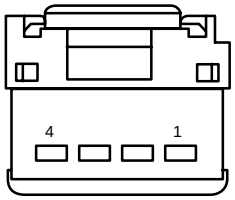

1) 705 (LG/OG)
2) 57 (BK)
3) 297 (BK/LG)
4) 140 (BK/PK)

F04321

14A005

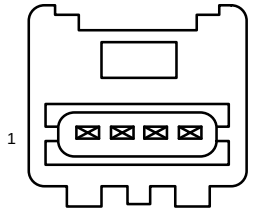

1) 705 (LG/OG)
2) 57 (BK)
3) 297 (BK/LG)
4) 140 (BK/PK)

F04403