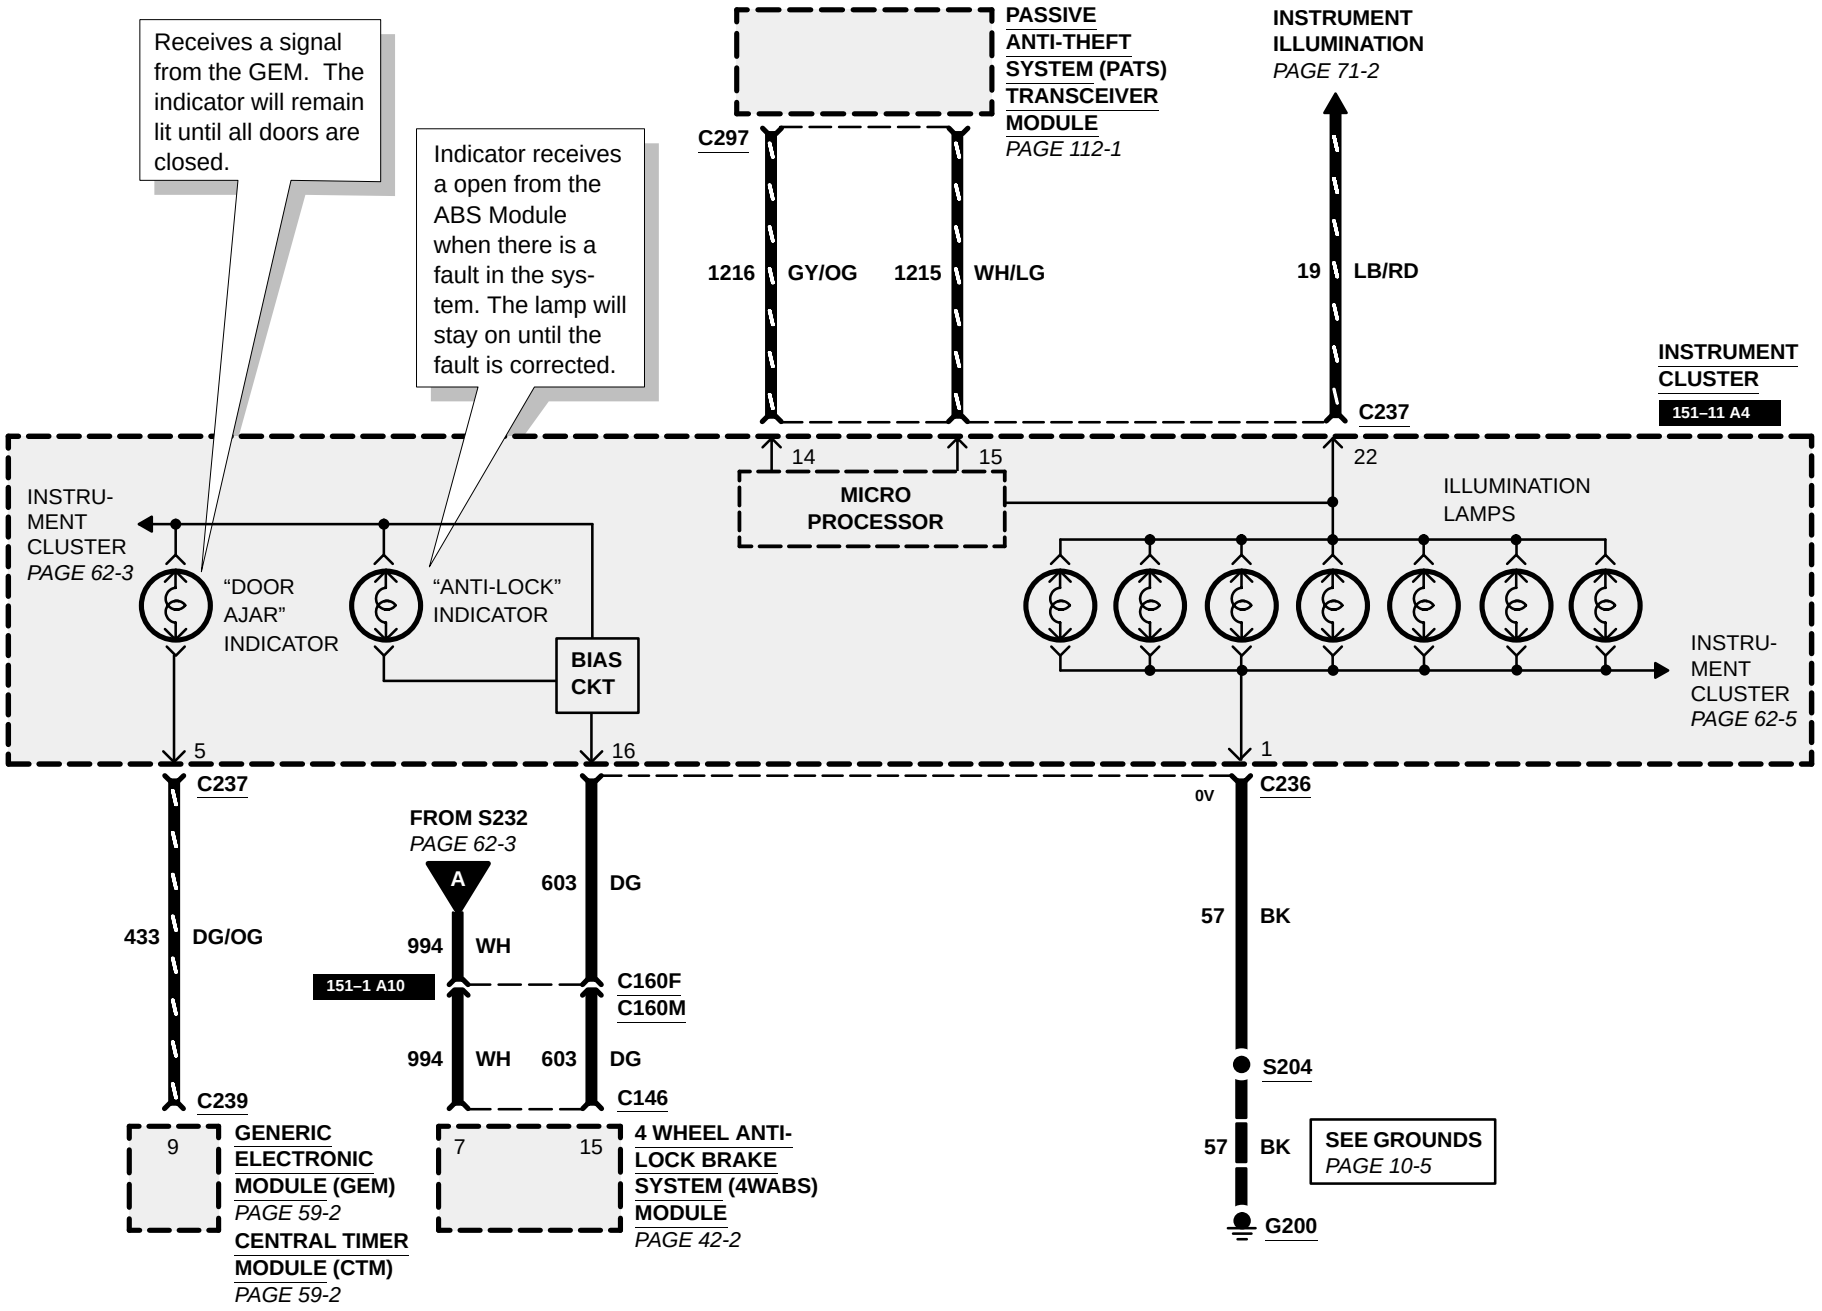
Receives a signal from the GEM. The indicator will remain lit until all doors are closed.
Indicator receives a open from the ABS Module when there is a fault in the system. The lamp will stay on until the fault is corrected.
PASSIVE ANTI-THEFT SYSTEM (PATS) TRANSCEIVER MODULE
PAGE 112-1
C297
1216 GY/OG
1215 WH/LG
INSTRUMENT ILLUMINATION
PAGE 71-2
19 LB/RD
INSTRUMENT CLUSTER
151–11 A4
C237
14
15
22
MICRO PROCESSOR
ILLUMINATION LAMPS
INSTRU-MENT CLUSTER
PAGE 62-3
"DOOR AJAR" INDICATOR
"ANTI-LOCK" INDICATOR
BIAS CKT
INSTRU-MENT CLUSTER
PAGE 62-5
5
16
1
C237
433 DG/OG
C239
9
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-2
CENTRAL TIMER MODULE (CTM)
PAGE 59-2
FROM S232
PAGE 62-3
A
603 DG
994 WH
151–1 A10
C160F
C160M
994 WH
603 DG
C146
7
15
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-2
0V
C236
57 BK
S204
57 BK
G200
SEE GROUNDS
PAGE 10-5