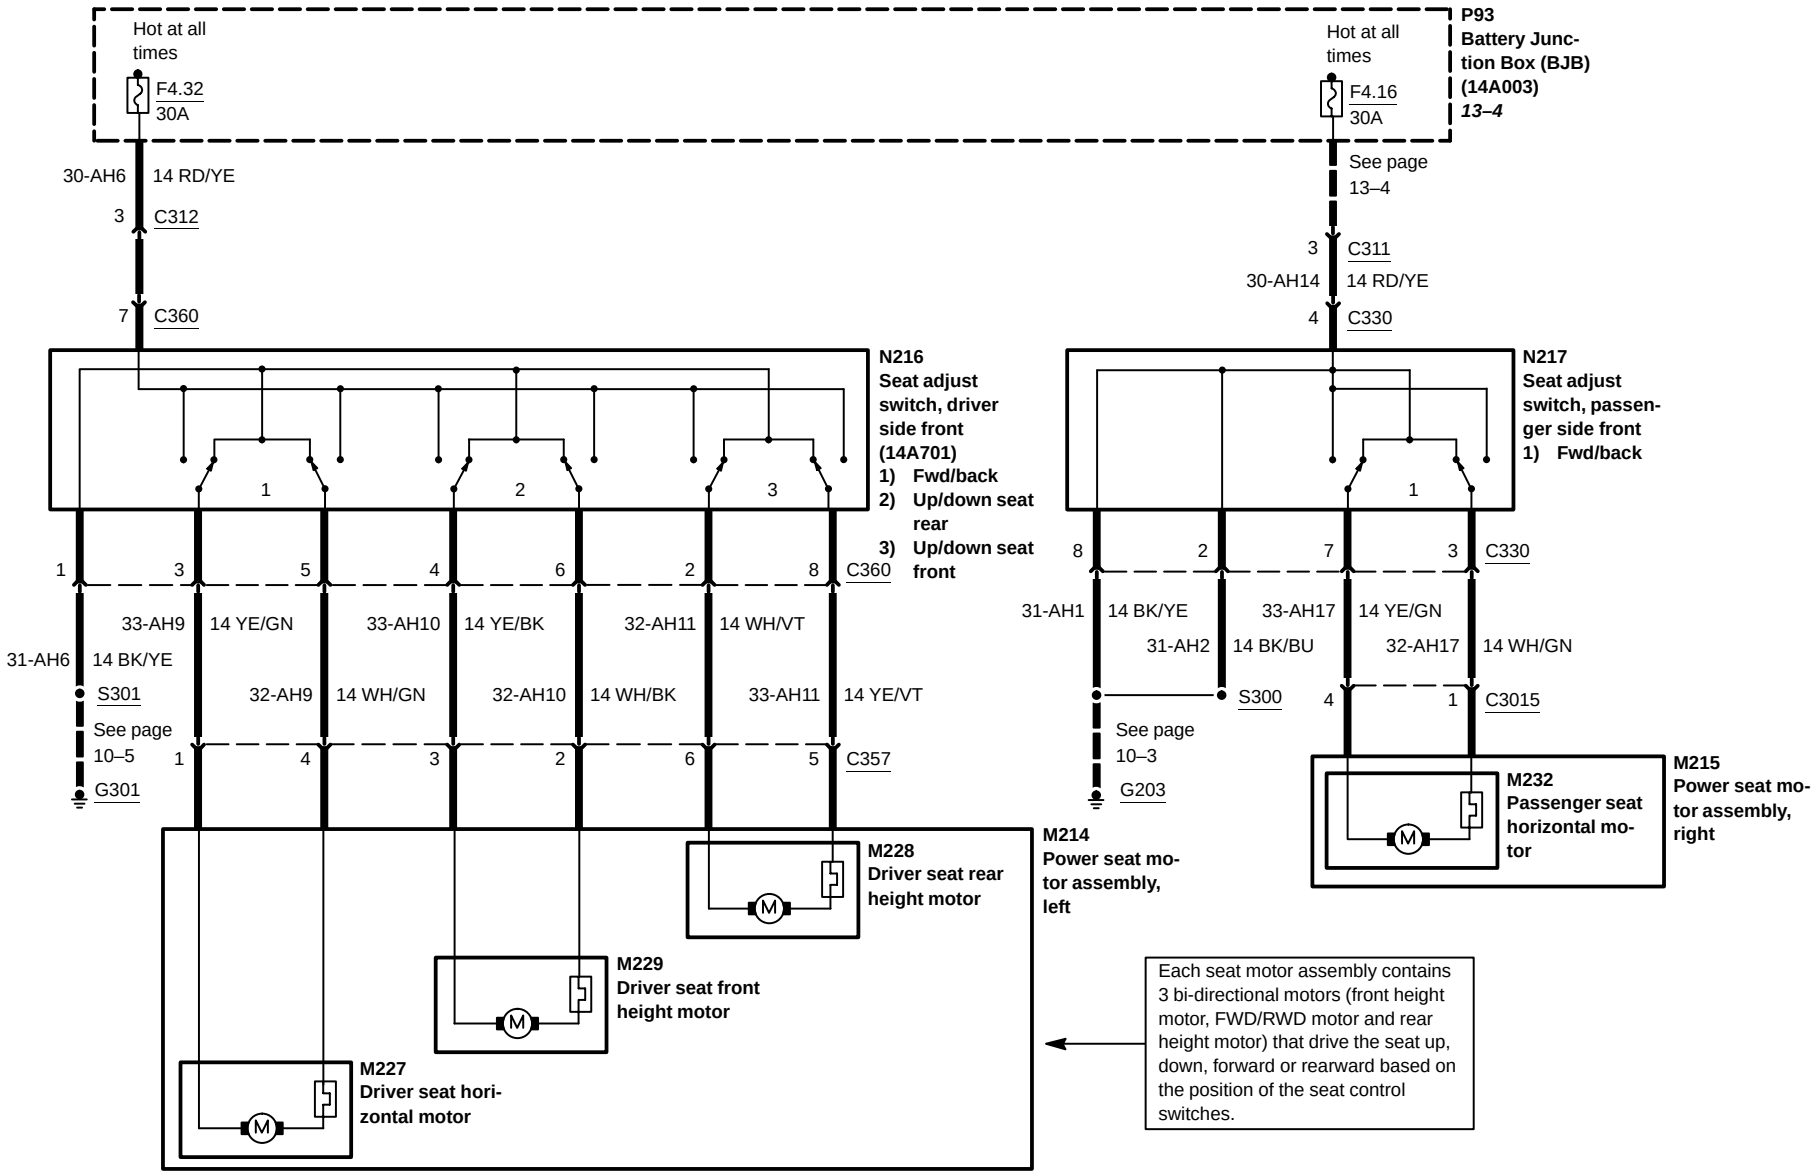
Hot at all times
F4.32
30A
Hot at all times
F4.16
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
See page 13–4
30-AH6 14 RD/YE
3 C312
7 C360
3 C311
30-AH14 14 RD/YE
4 C330
N216
Seat adjust switch, driver side front
(14A701)
1) Fwd/back
2) Up/down seat rear
3) Up/down seat front
N217
Seat adjust switch, passenger side front
1) Fwd/back
1 3 5 4 6 2 8 C360
33-AH9 14 YE/GN
33-AH10 14 YE/BK
32-AH11 14 WH/VT
31-AH6 14 BK/YE
S301
32-AH9 14 WH/GN
32-AH10 14 WH/BK
33-AH11 14 YE/VT
See page 10–5
G301
1 4 3 2 6 5 C357
8 2 7 3 C330
31-AH1 14 BK/YE
33-AH17 14 YE/GN
31-AH2 14 BK/BU
32-AH17 14 WH/GN
S300
4 1 C3015
See page 10–3
G203
M214
Power seat motor assembly, left
M228
Driver seat rear height motor
M229
Driver seat front height motor
M227
Driver seat horizontal motor
M232
Passenger seat horizontal motor
M215
Power seat motor assembly, right
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.