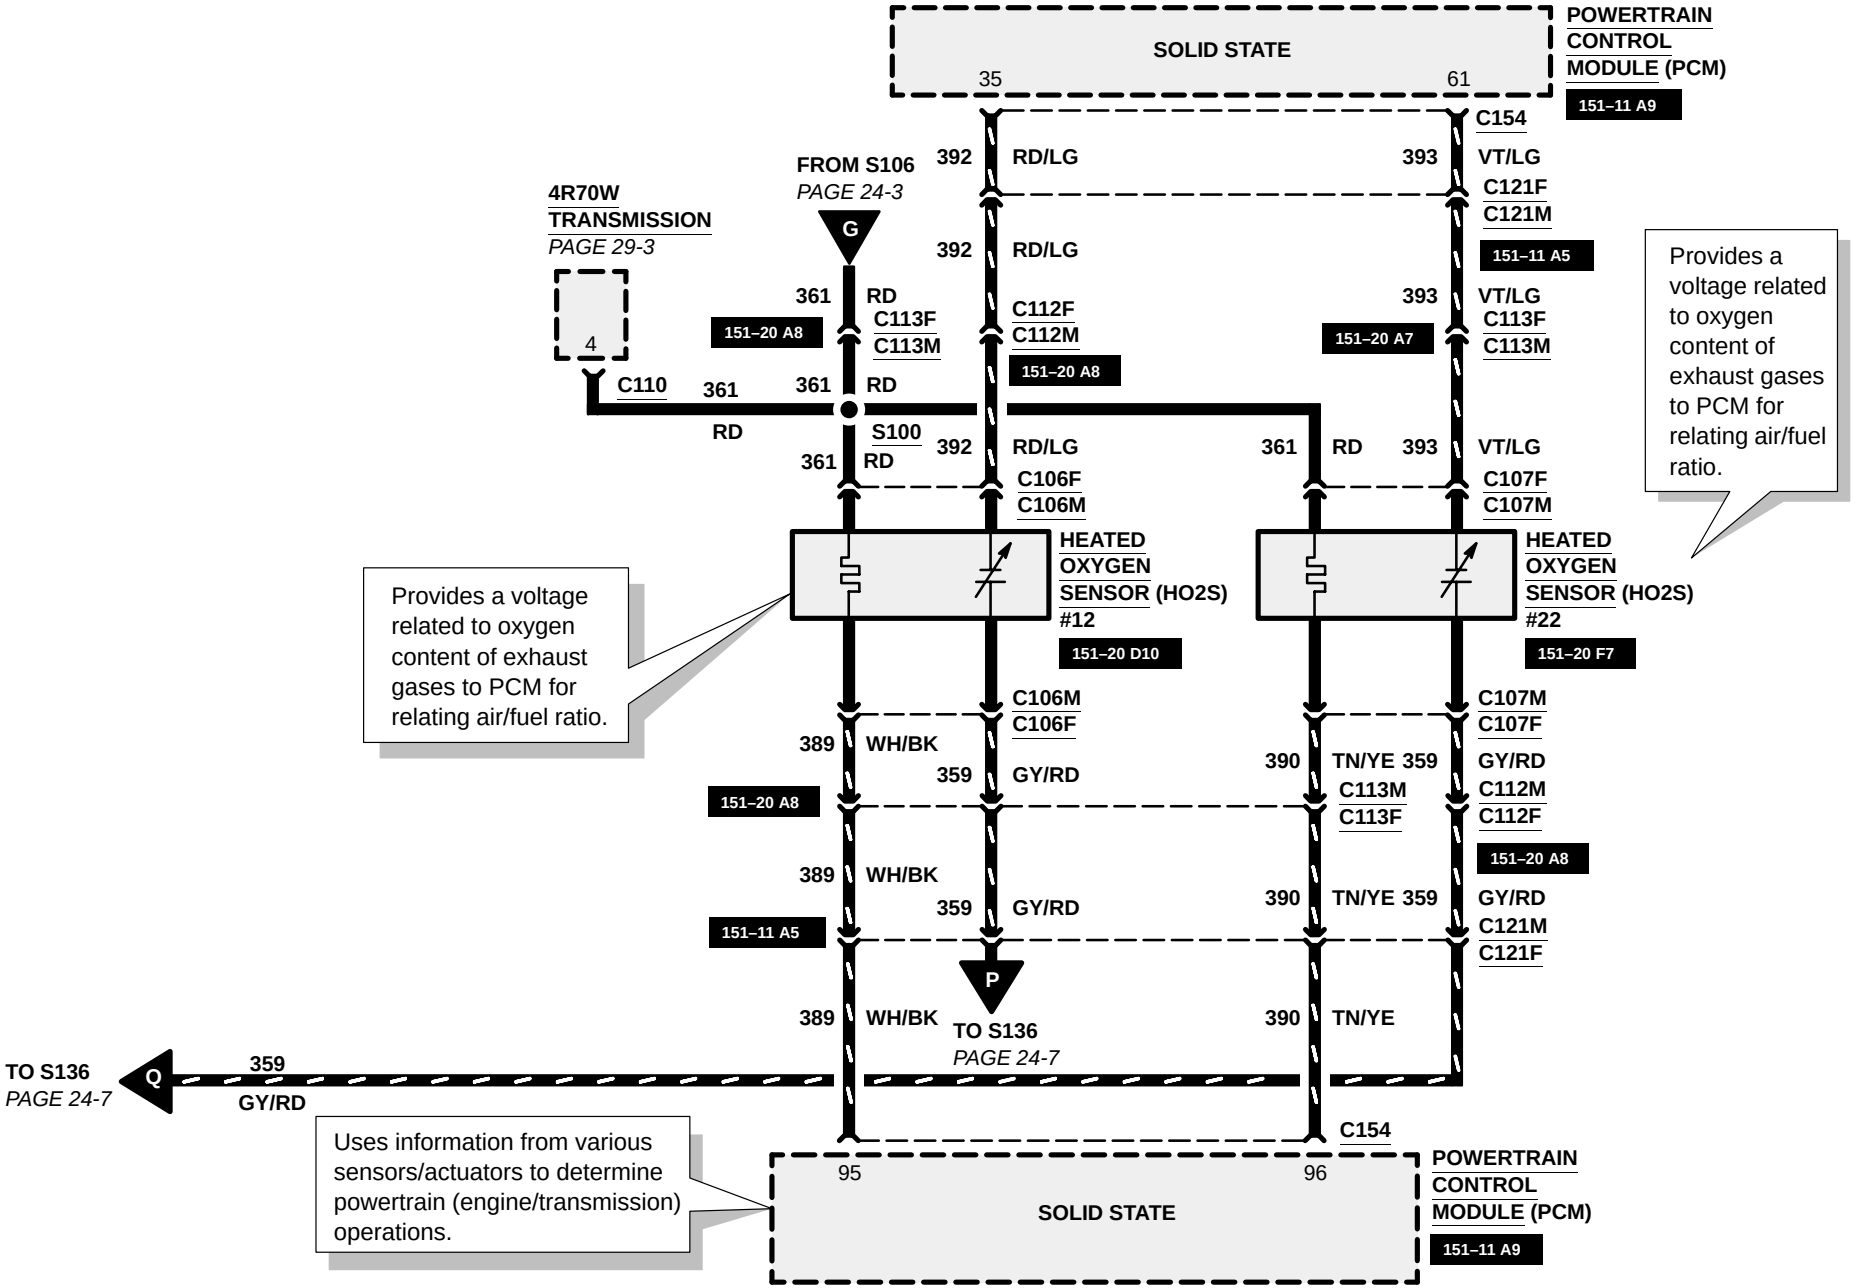
SOLID STATE
35
61
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
C154
FROM S106
PAGE 24-3
392 RD/LG
393 VT/LG
C121F
C121M
151–11 A5
4R70W TRANSMISSION
PAGE 29-3
G
392 RD/LG
361 RD
C113F
C113M
151–20 A8
C112F
C112M
151–20 A8
393 VT/LG
C113F
C113M
151–20 A7
4
C110
361 RD
361 RD
S100
361 RD
392 RD/LG
C106F
C106M
361 RD
393 VT/LG
C107F
C107M
Provides a voltage related to oxygen content of exhaust gases to PCM for relating air/fuel ratio.
HEATED OXYGEN SENSOR (HO2S) #12
151–20 D10
HEATED OXYGEN SENSOR (HO2S) #22
151–20 F7
Provides a voltage related to oxygen content of exhaust gases to PCM for relating air/fuel ratio.
C106M
C106F
C107M
C107F
389 WH/BK
359 GY/RD
151–20 A8
390 TN/YE
359 GY/RD
C113M
C113F
C112M
C112F
151–20 A8
389 WH/BK
359 GY/RD
151–11 A5
390 TN/YE
359 GY/RD
C121M
C121F
P
389 WH/BK
TO S136
PAGE 24-7
390 TN/YE
TO S136
PAGE 24-7
Q
359
GY/RD
C154
Uses information from various sensors/actuators to determine powertrain (engine/transmission) operations.
95
96
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9