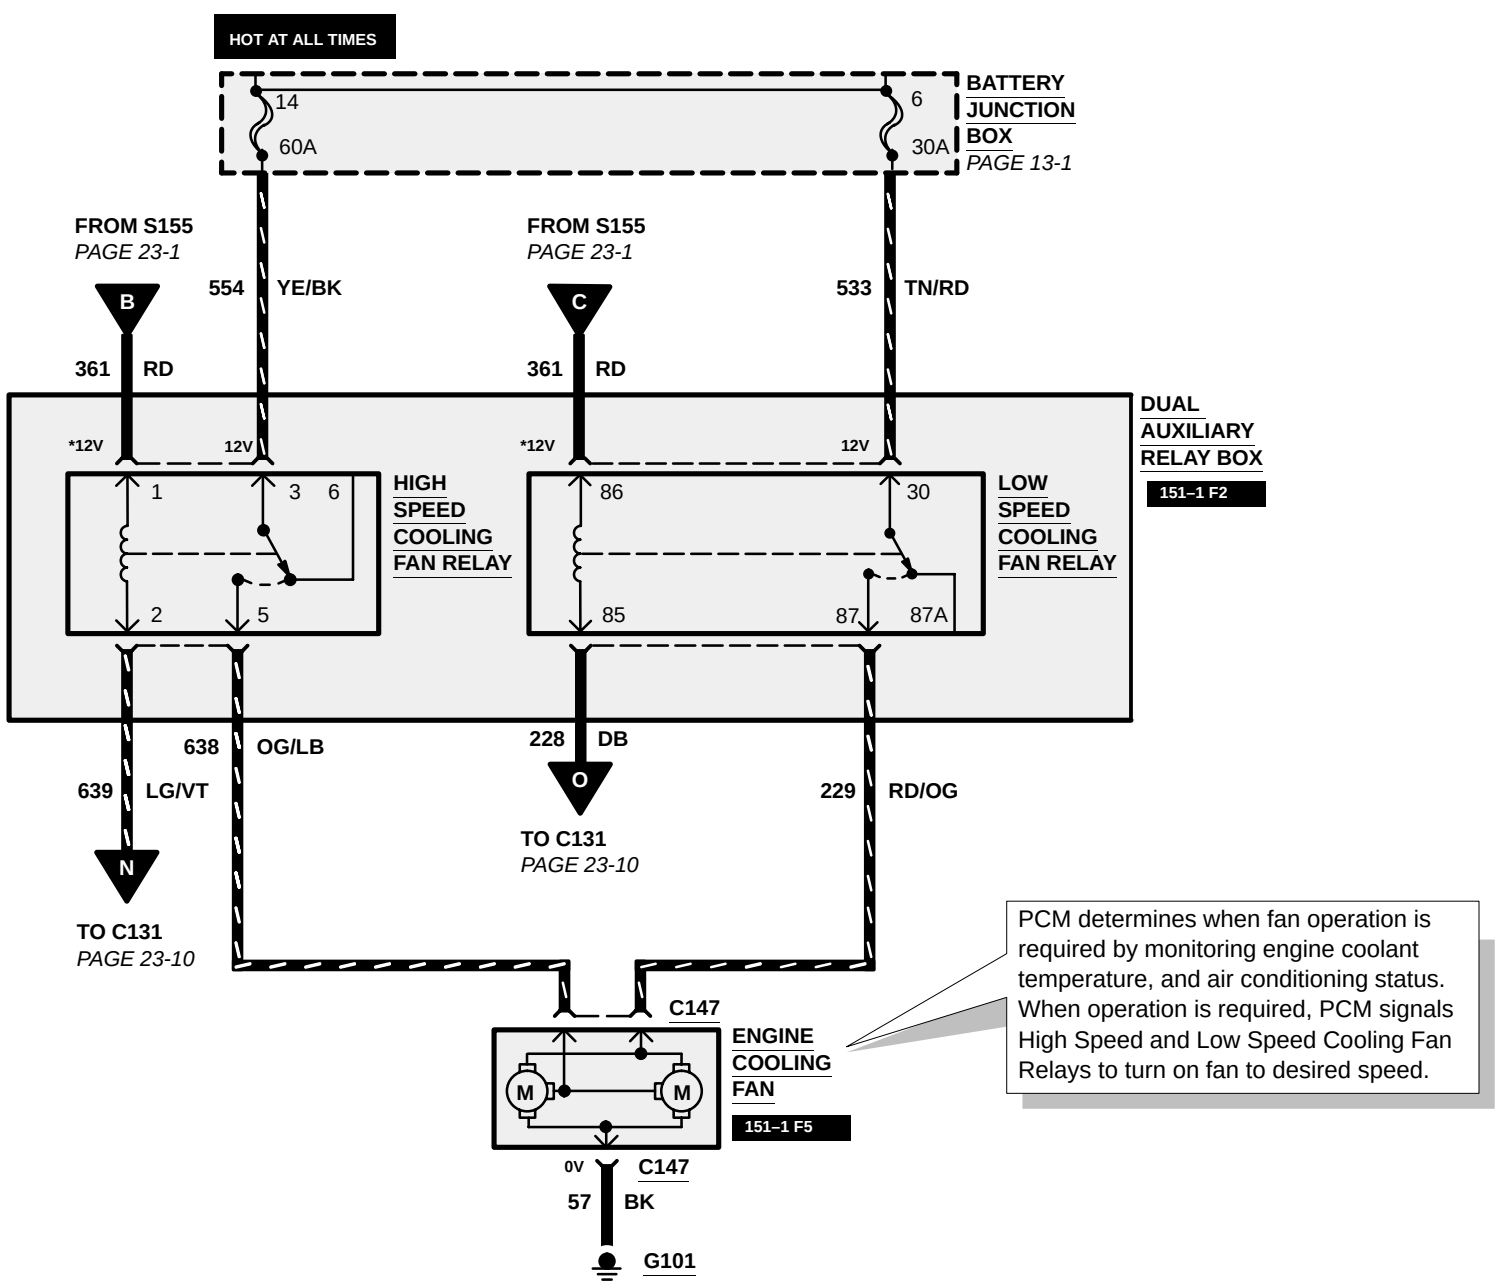
HOT AT ALL TIMES
* START OR RUN
BATTERY JUNCTION BOX
PAGE 13-1
14
60A
6
30A
FROM S155
PAGE 23-1
FROM S155
PAGE 23-1
554 YE/BK
533 TN/RD
B
C
361 RD
361 RD
*12V
12V
*12V
12V
DUAL AUXILIARY RELAY BOX
151–1 F2
HIGH SPEED COOLING FAN RELAY
LOW SPEED COOLING FAN RELAY
1
3
6
2
5
86
30
85
87
87A
638 OG/LB
639 LG/VT
228 DB
229 RD/OG
O
N
TO C131
PAGE 23-10
TO C131
PAGE 23-10
C147
ENGINE COOLING FAN
151–1 F5
M
M
0V
C147
57 BK
G101
PCM determines when fan operation is required by monitoring engine coolant temperature, and air conditioning status. When operation is required, PCM signals High Speed and Low Speed Cooling Fan Relays to turn on fan to desired speed.