C495 (BK)

14405

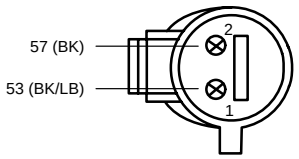

F02113

19F504

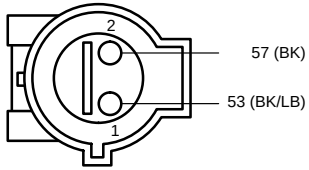

F02085

C500

14A631

A244
Key pad switch assembly

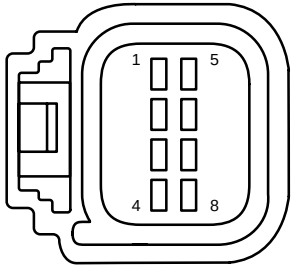

F08203

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad button 1/2, Key pad button 5/6
2	1013 (BN/LG)	Illumination
3	79 (LG/RD)	Key pad button 5/6
4	–	not used
5	57 (BK)	Ground
6	124 (BN)	Key pad common
7	121 (YE/BK)	Key pad button 5/6, Key pad button 9/0
8	–	not used

C503

14A005

N440
Memory set switch (14776)

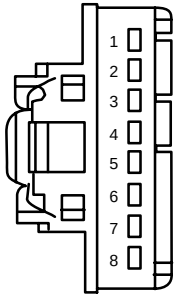

F08279

Pin	Circuit	Circuit function
1	272 (WH/OG)	Memory set switch (14776), Illumination, input
2	267 (BN/LG)	Memory seat switch, position, (1)
3	–	not used
4	–	not used
5	270 (BN/OG)	Memory set switch (14776)
6	268 (BK/OG)	Memory seat switch, position (2)
7	676 (PK/OG)	Ground
8	–	not used