10-1 GROUNDS

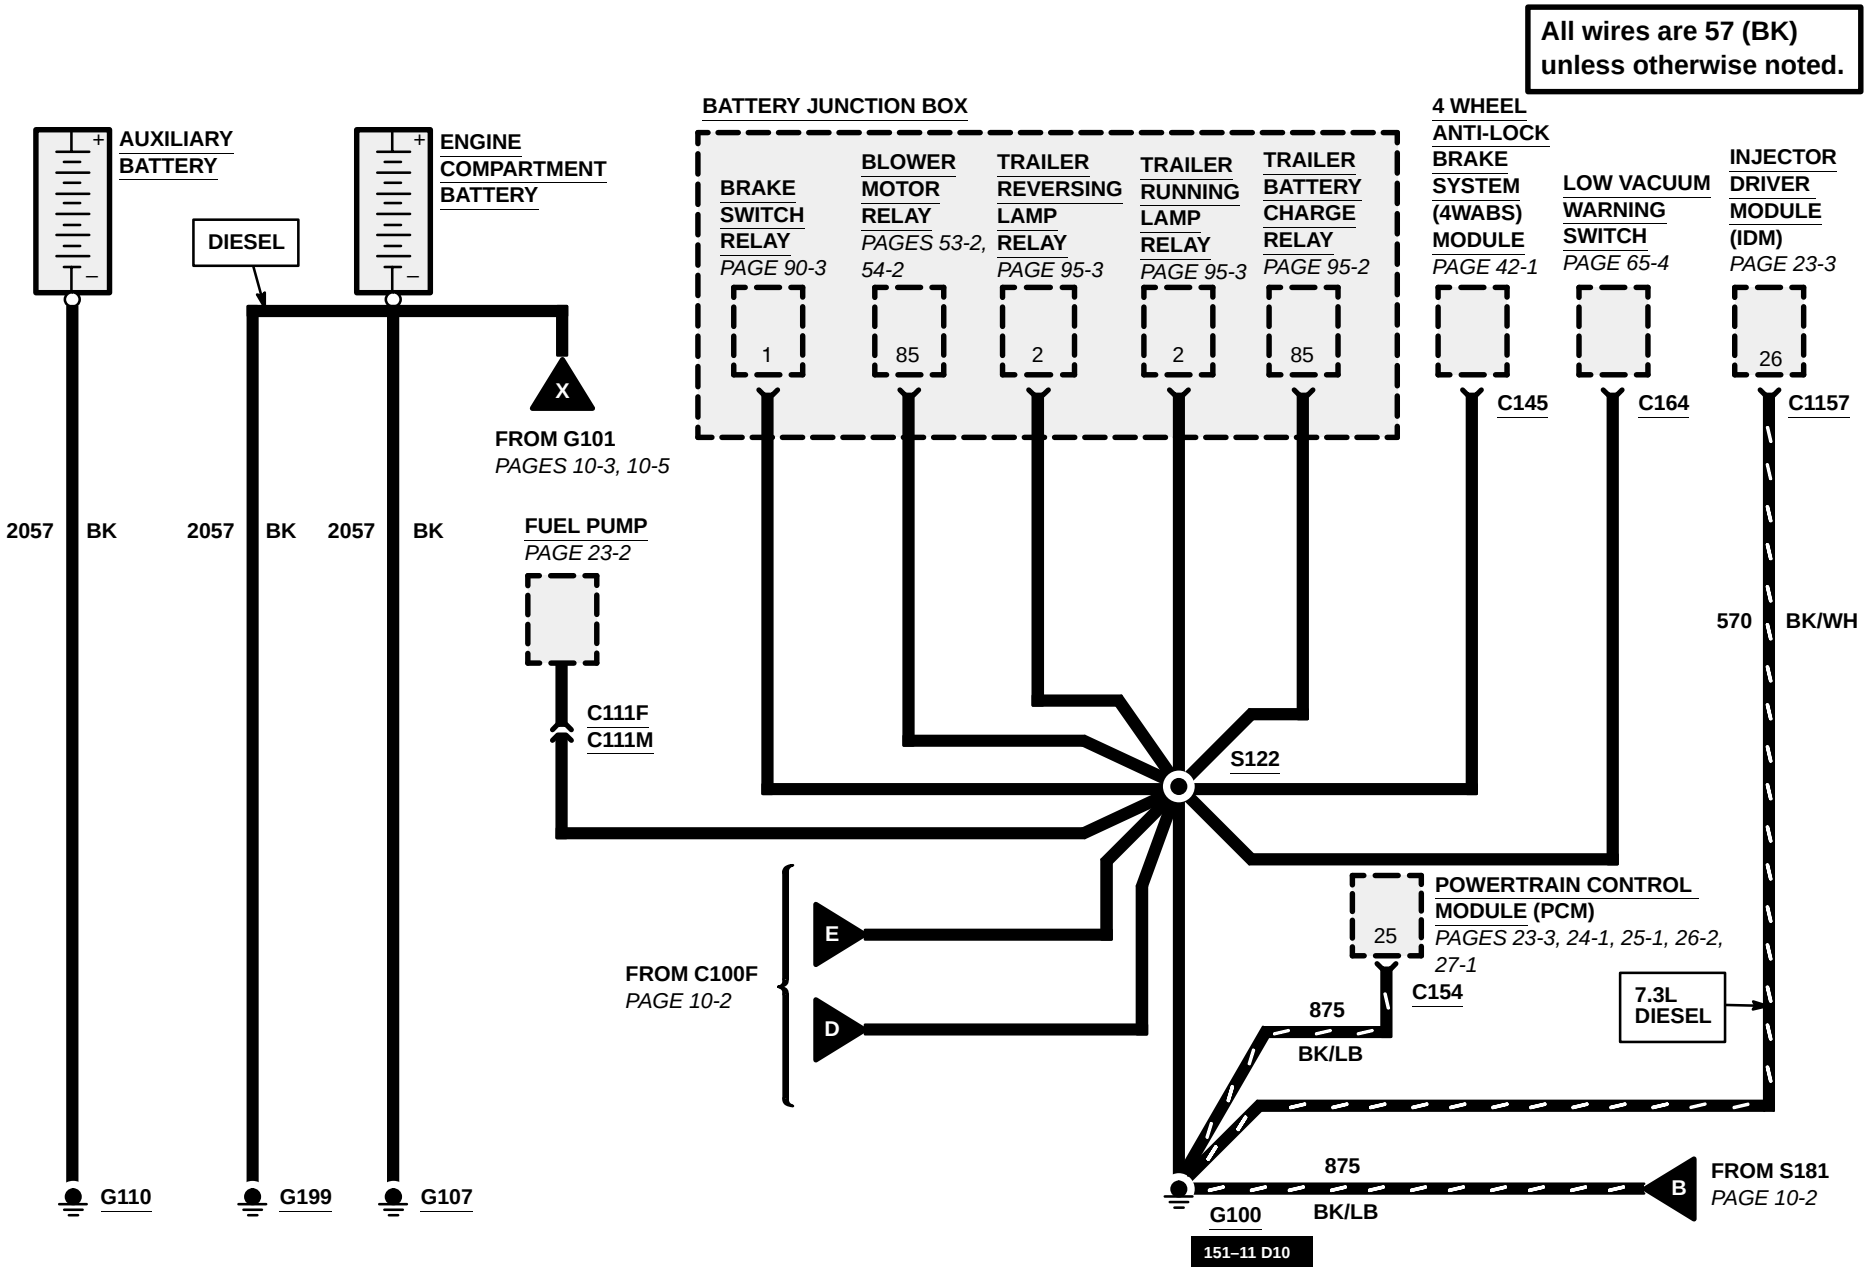
All wires are 57 (BK) unless otherwise noted.
AUXILIARY BATTERY
ENGINE COMPARTMENT BATTERY
DIESEL
BATTERY JUNCTION BOX
BRAKE SWITCH RELAY
PAGE 90-3
BLOWER MOTOR RELAY
PAGES 53-2, 54-2
TRAILER REVERSING LAMP RELAY
PAGE 95-3
TRAILER RUNNING LAMP RELAY
PAGE 95-3
TRAILER BATTERY CHARGE RELAY
PAGE 95-2
1
85
2
2
85
4 WHEEL ANTI-LOCK BRAKE SYSTEM (4WABS) MODULE
PAGE 42-1
LOW VACUUM WARNING SWITCH
PAGE 65-4
INJECTOR DRIVER MODULE (IDM)
PAGE 23-3
26
C145
C164
C1157
X
FROM G101
PAGES 10-3, 10-5
2057 BK
2057 BK
2057 BK
FUEL PUMP
PAGE 23-2
C111F
C111M
570 BK/WH
S122
FROM C100F
PAGE 10-2
E
D
25
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-3, 24-1, 25-1, 26-2, 27-1
C154
875
BK/LB
7.3L DIESEL
875
BK/LB
B
FROM S181
PAGE 10-2
G110
G199
G107
G100
151–11 D10