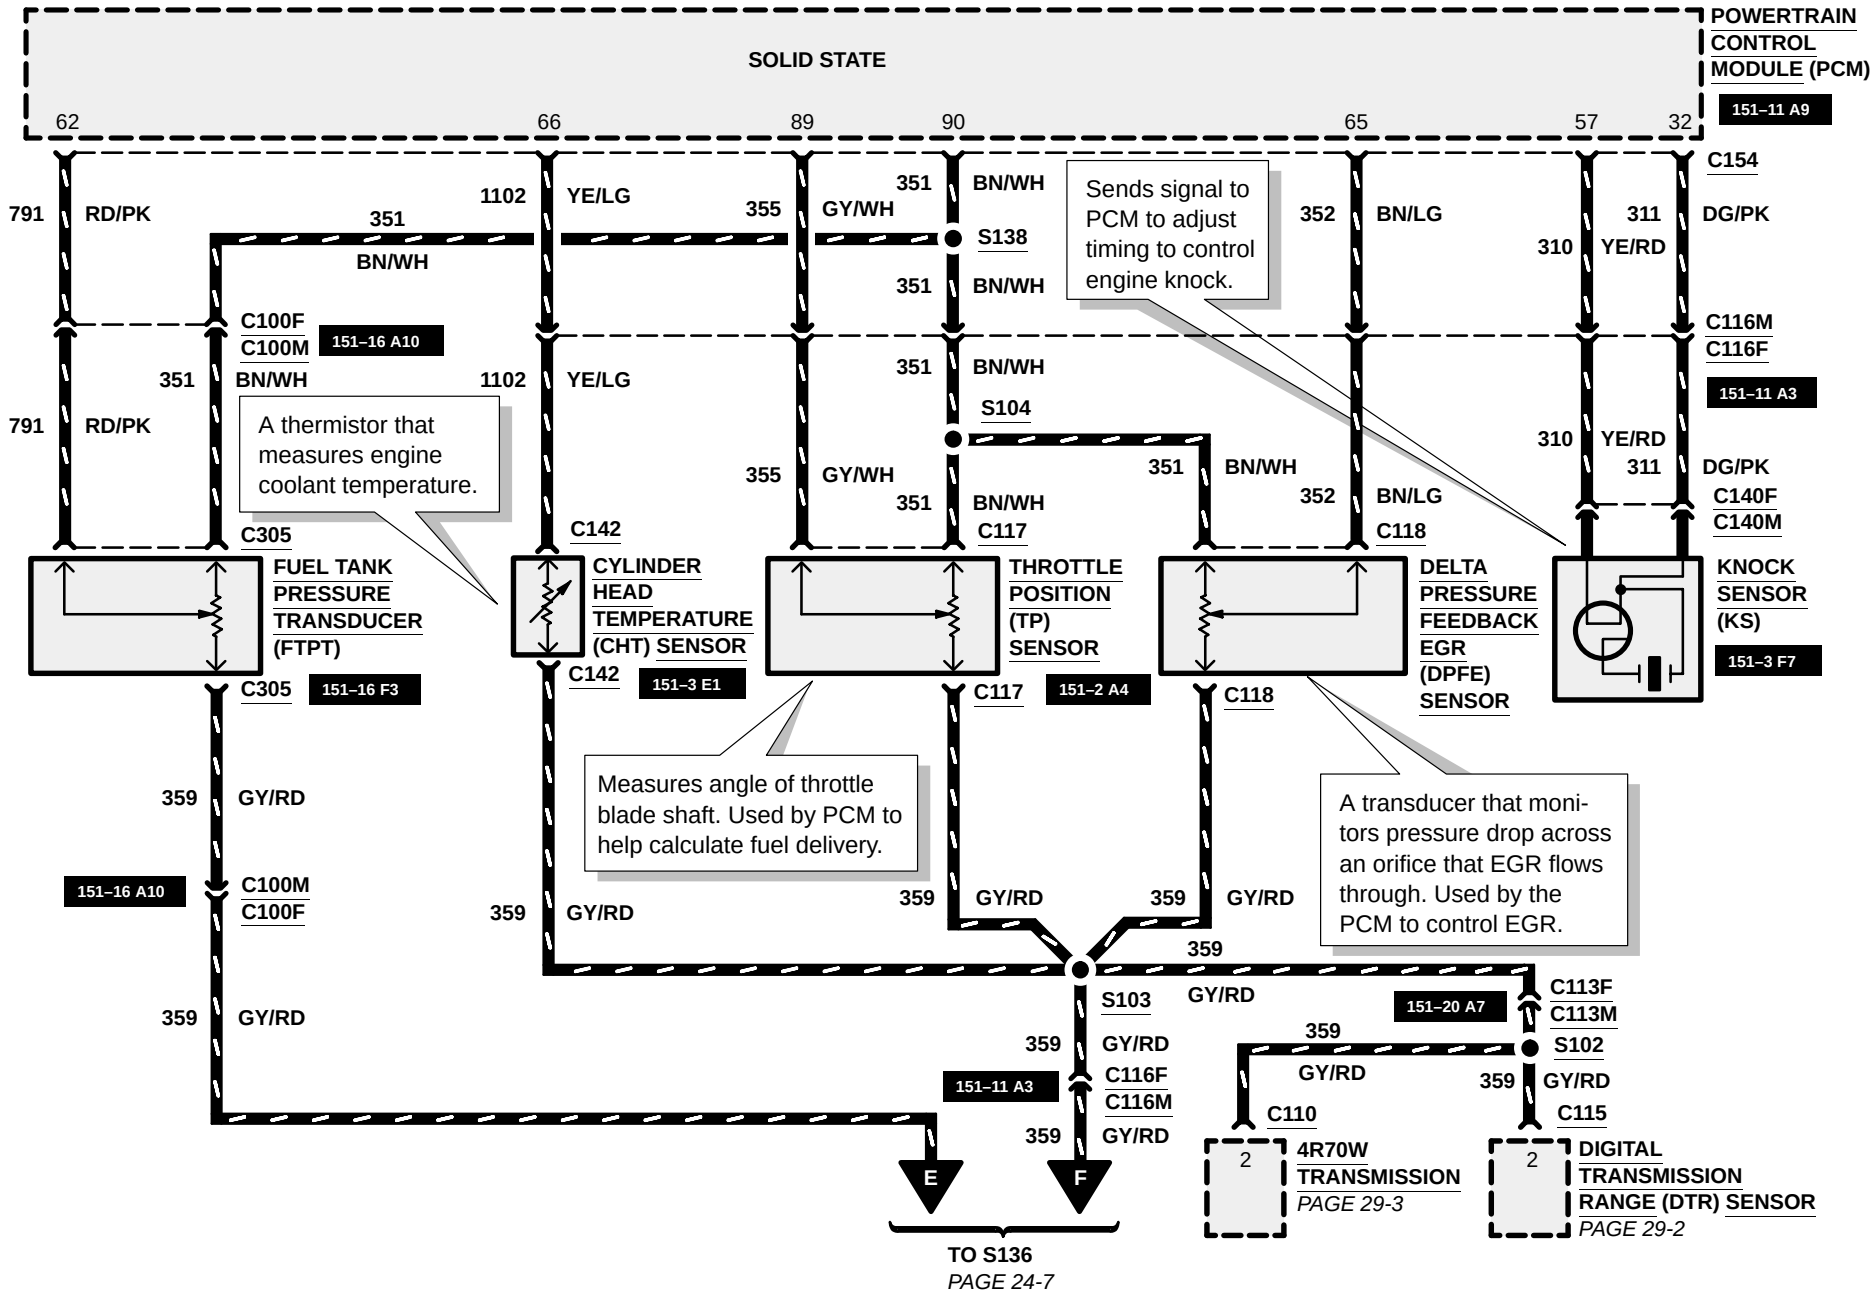
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–11 A9
62
66
89
90
65
57
32
791 RD/PK
1102 YE/LG
355 GY/WH
351 BN/WH
S138
352 BN/LG
311 DG/PK
310 YE/RD
C154
C116M
C116F
151–11 A3
C100F
C100M
151–16 A10
S104
Sends signal to PCM to adjust timing to control engine knock.
A thermistor that measures engine coolant temperature.
C305
C142
C117
C118
C140F
C140M
FUEL TANK PRESSURE TRANSDUCER (FTPT)
CYLINDER HEAD TEMPERATURE (CHT) SENSOR
THROTTLE POSITION (TP) SENSOR
DELTA PRESSURE FEEDBACK EGR (DPFE) SENSOR
KNOCK SENSOR (KS)
151–3 F7
151–3 E1
151–2 A4
359 GY/RD
Measures angle of throttle blade shaft. Used by PCM to help calculate fuel delivery.
A transducer that monitors pressure drop across an orifice that EGR flows through. Used by the PCM to control EGR.
S103
151–20 A7
C113F
C113M
S102
C115
C110
E
F
TO S136
PAGE 24-7
4R70W TRANSMISSION
PAGE 29-3
DIGITAL TRANSMISSION RANGE (DTR) SENSOR
PAGE 29-2