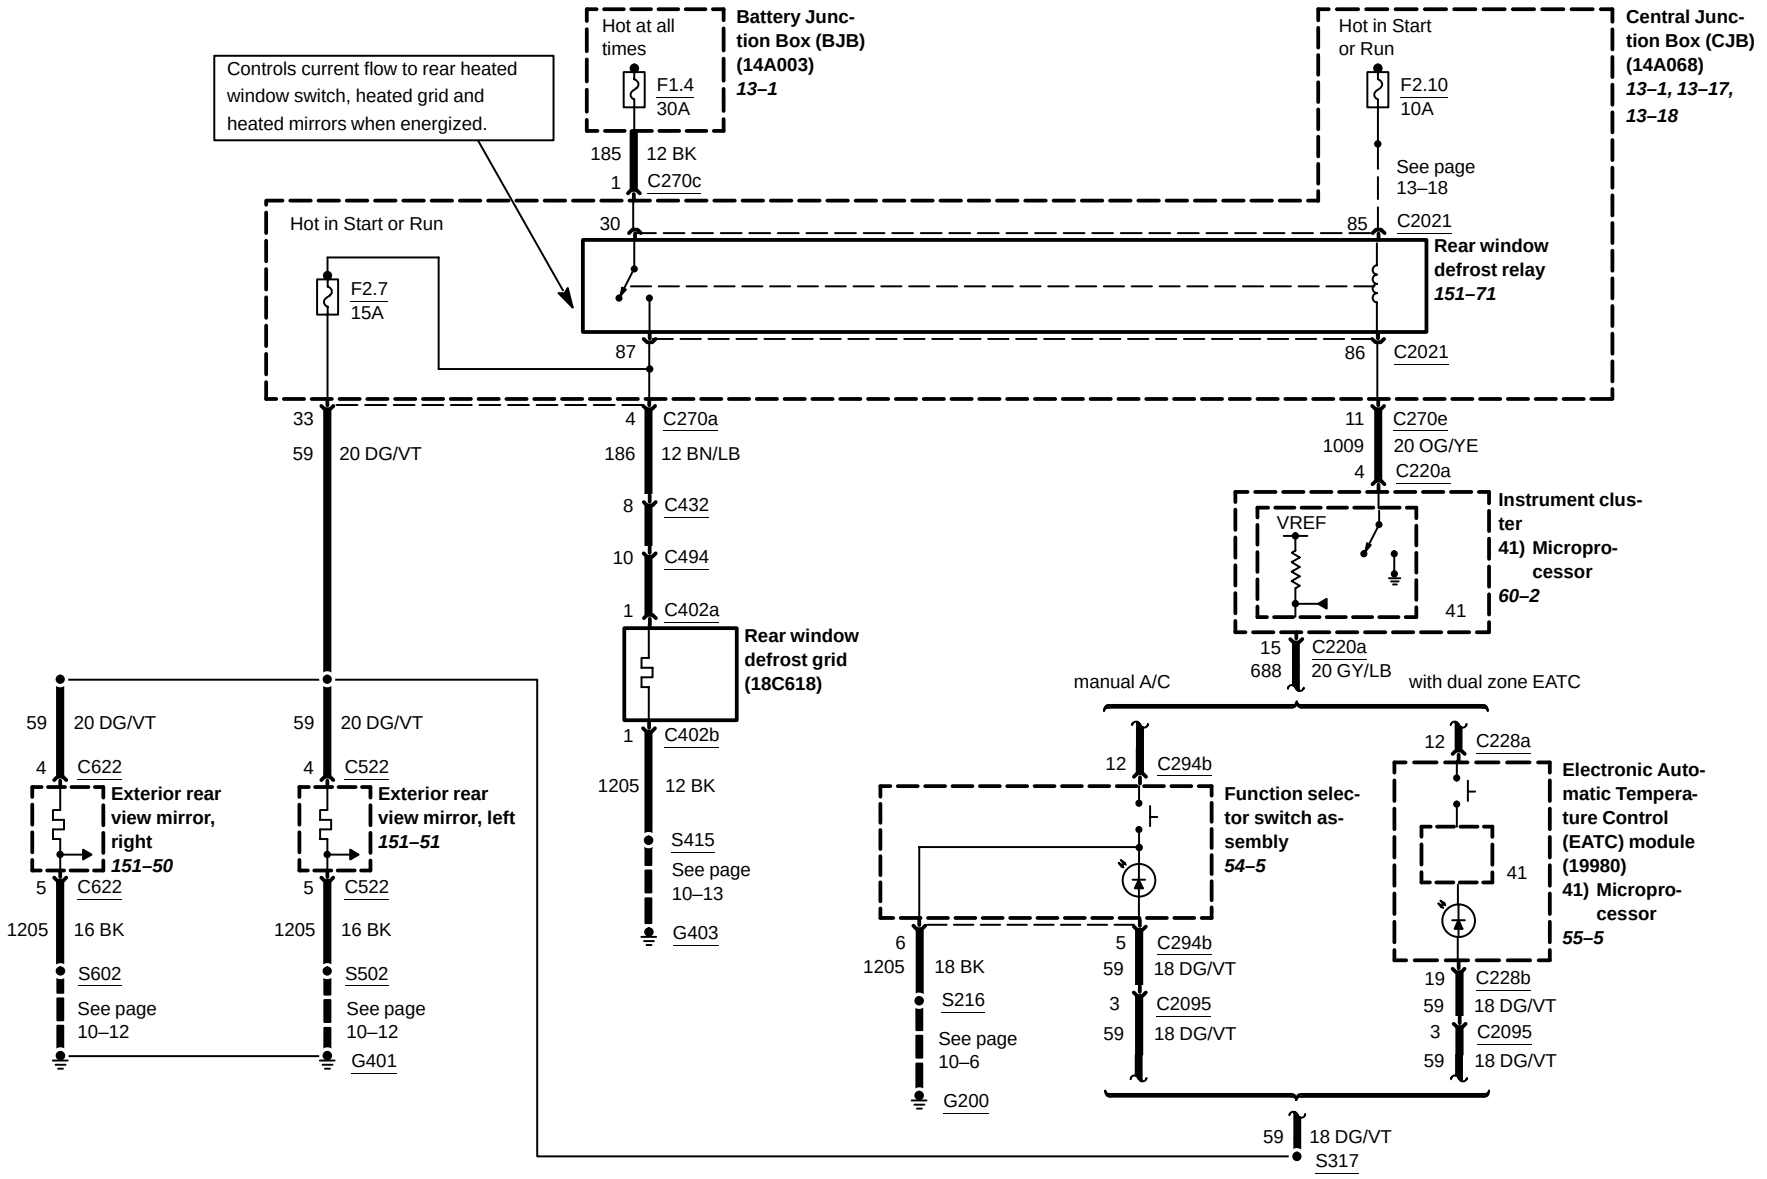
Controls current flow to rear heated window switch, heated grid and heated mirrors when energized.
Hot at all times
F1.4
30A
Battery Junction Box (BJB) (14A003) 13–1
185
12 BK
1
C270c
Hot in Start or Run
F2.10
10A
See page 13–18
Central Junction Box (CJB) (14A068) 13–1, 13–17, 13–18
Hot in Start or Run
F2.7
15A
30
85
C2021
Rear window defrost relay 151–71
87
86
C2021
33
59
20 DG/VT
4
C270a
186
12 BN/LB
8
C432
10
C494
1
C402a
Rear window defrost grid (18C618)
1
C402b
1205
12 BK
S415
See page 10–13
G403
11
C270e
1009
20 OG/YE
4
C220a
Instrument cluster
41) Microprocessor 60–2
VREF
41
15
688
C220a
20 GY/LB
manual A/C
with dual zone EATC
59
20 DG/VT
4
C622
Exterior rear view mirror, right 151–50
5
C622
1205
16 BK
S602
See page 10–12
G401
59
20 DG/VT
4
C522
Exterior rear view mirror, left 151–51
5
C522
1205
16 BK
S502
See page 10–12
G401
12
C294b
Function selector switch assembly 54–5
6
1205
18 BK
S216
See page 10–6
G200
5
C294b
59
18 DG/VT
3
C2095
59
18 DG/VT
12
C228a
41
Electronic Automatic Temperature Control (EATC) module (19980)
41) Microprocessor 55–5
19
C228b
59
18 DG/VT
3
C2095
59
18 DG/VT
59
18 DG/VT
S317