-1

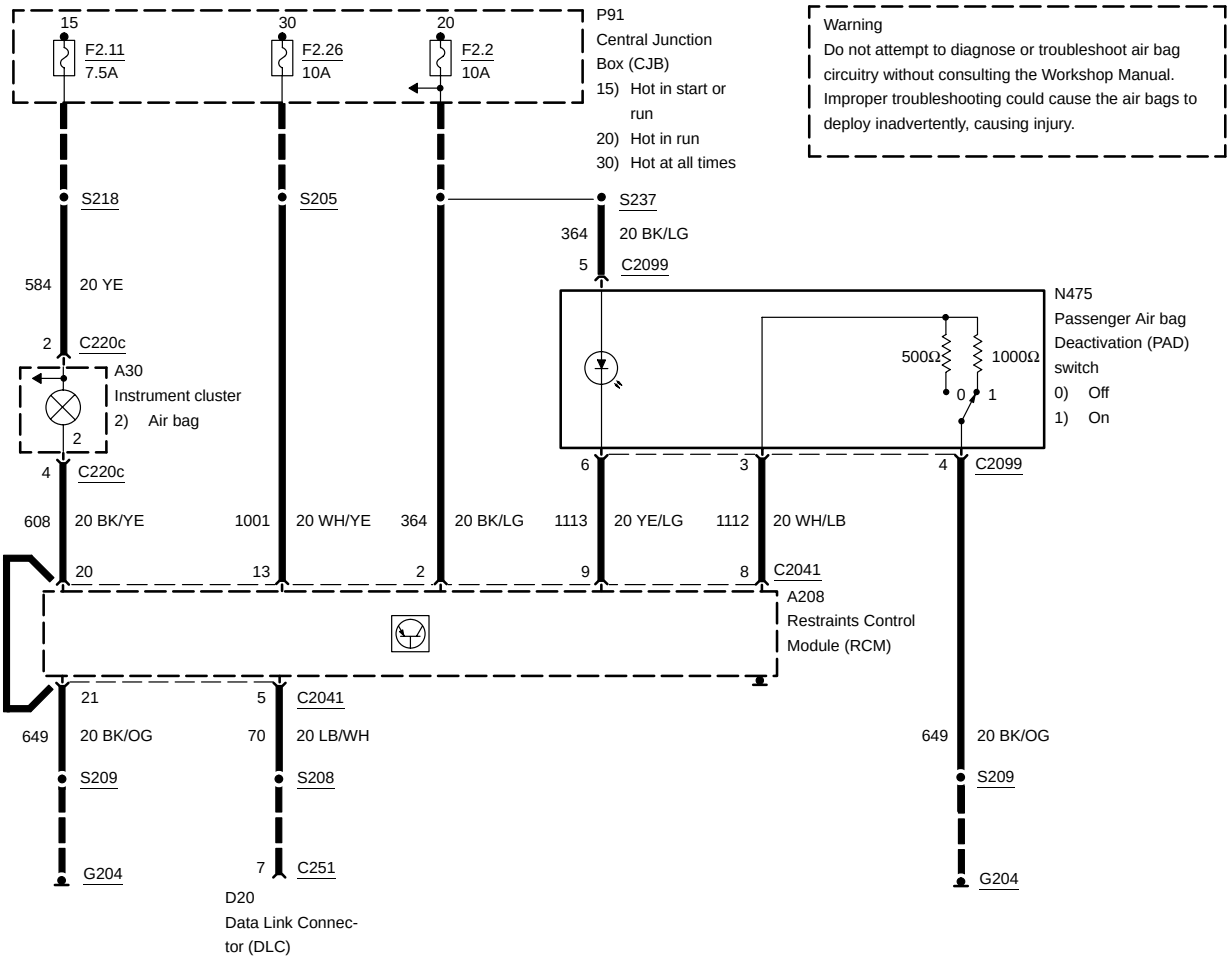
15
F2.11
7.5A
30
F2.26
10A
20
F2.2
10A
P91
Central Junction Box (CJB)
15) Hot in start or run
20) Hot in run
30) Hot at all times
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
S218
S205
S237
364 20 BK/LG
5 C2099
584 20 YE
2 C220c
A30
Instrument cluster
2) Air bag
2
4 C220c
N475
Passenger Air bag Deactivation (PAD) switch
0) Off
1) On
500Ω
1000Ω
0
1
6
3
4 C2099
608 20 BK/YE
1001 20 WH/YE
364 20 BK/LG
1113 20 YE/LG
1112 20 WH/LB
20
13
2
9
8 C2041
A208
Restraints Control Module (RCM)
21
5 C2041
649 20 BK/OG
70 20 LB/WH
649 20 BK/OG
S209
S208
S209
7 C251
G204
G204
D20
Data Link Connector (DLC)