C935 (GN)

9H589

B47
Heated Oxygen Sensor (HO2S) #21

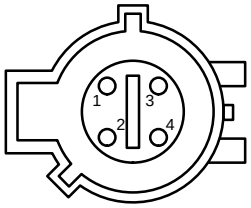

F04124

Pin	Circuit	Circuit Function
1	15-RJ15 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ15 (BK/BU)	Ground, switched
3	9-RJ15 (BN/RD)	Sensor signal return (reference/ ground)
4	8-RJ15 (WH/RD)	Sensor signal

C936 (BU)

12A522

Duratec–VE

B88
Heated Oxygen Sensor (HO2S) #12

ZETEC–VCT

B212
Heated oxygen sensor (HO2S), rear

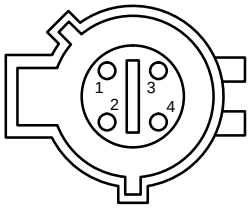

F04075

Pin	Circuit	Circuit Function
1	15-RJ25 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ26 (BK/GN)	Ground, switched
3	9-RJ26 (BN/GN)	Sensor signal return (reference/ground)
4	8-RJ26 (WH/GN)	Sensor signal

C937

14K138

Y18
Speaker, right front



F02058

Pin	Circuit	Circuit Function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C938

14A584

Y28
Speaker, left front



F02058

Pin	Circuit	Circuit Function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C939

14014

Y17
Speaker, left rear



F02058

Pin	Circuit	Circuit Function
1	8-MD11 (WH/VT)	Sensor signal
2	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)