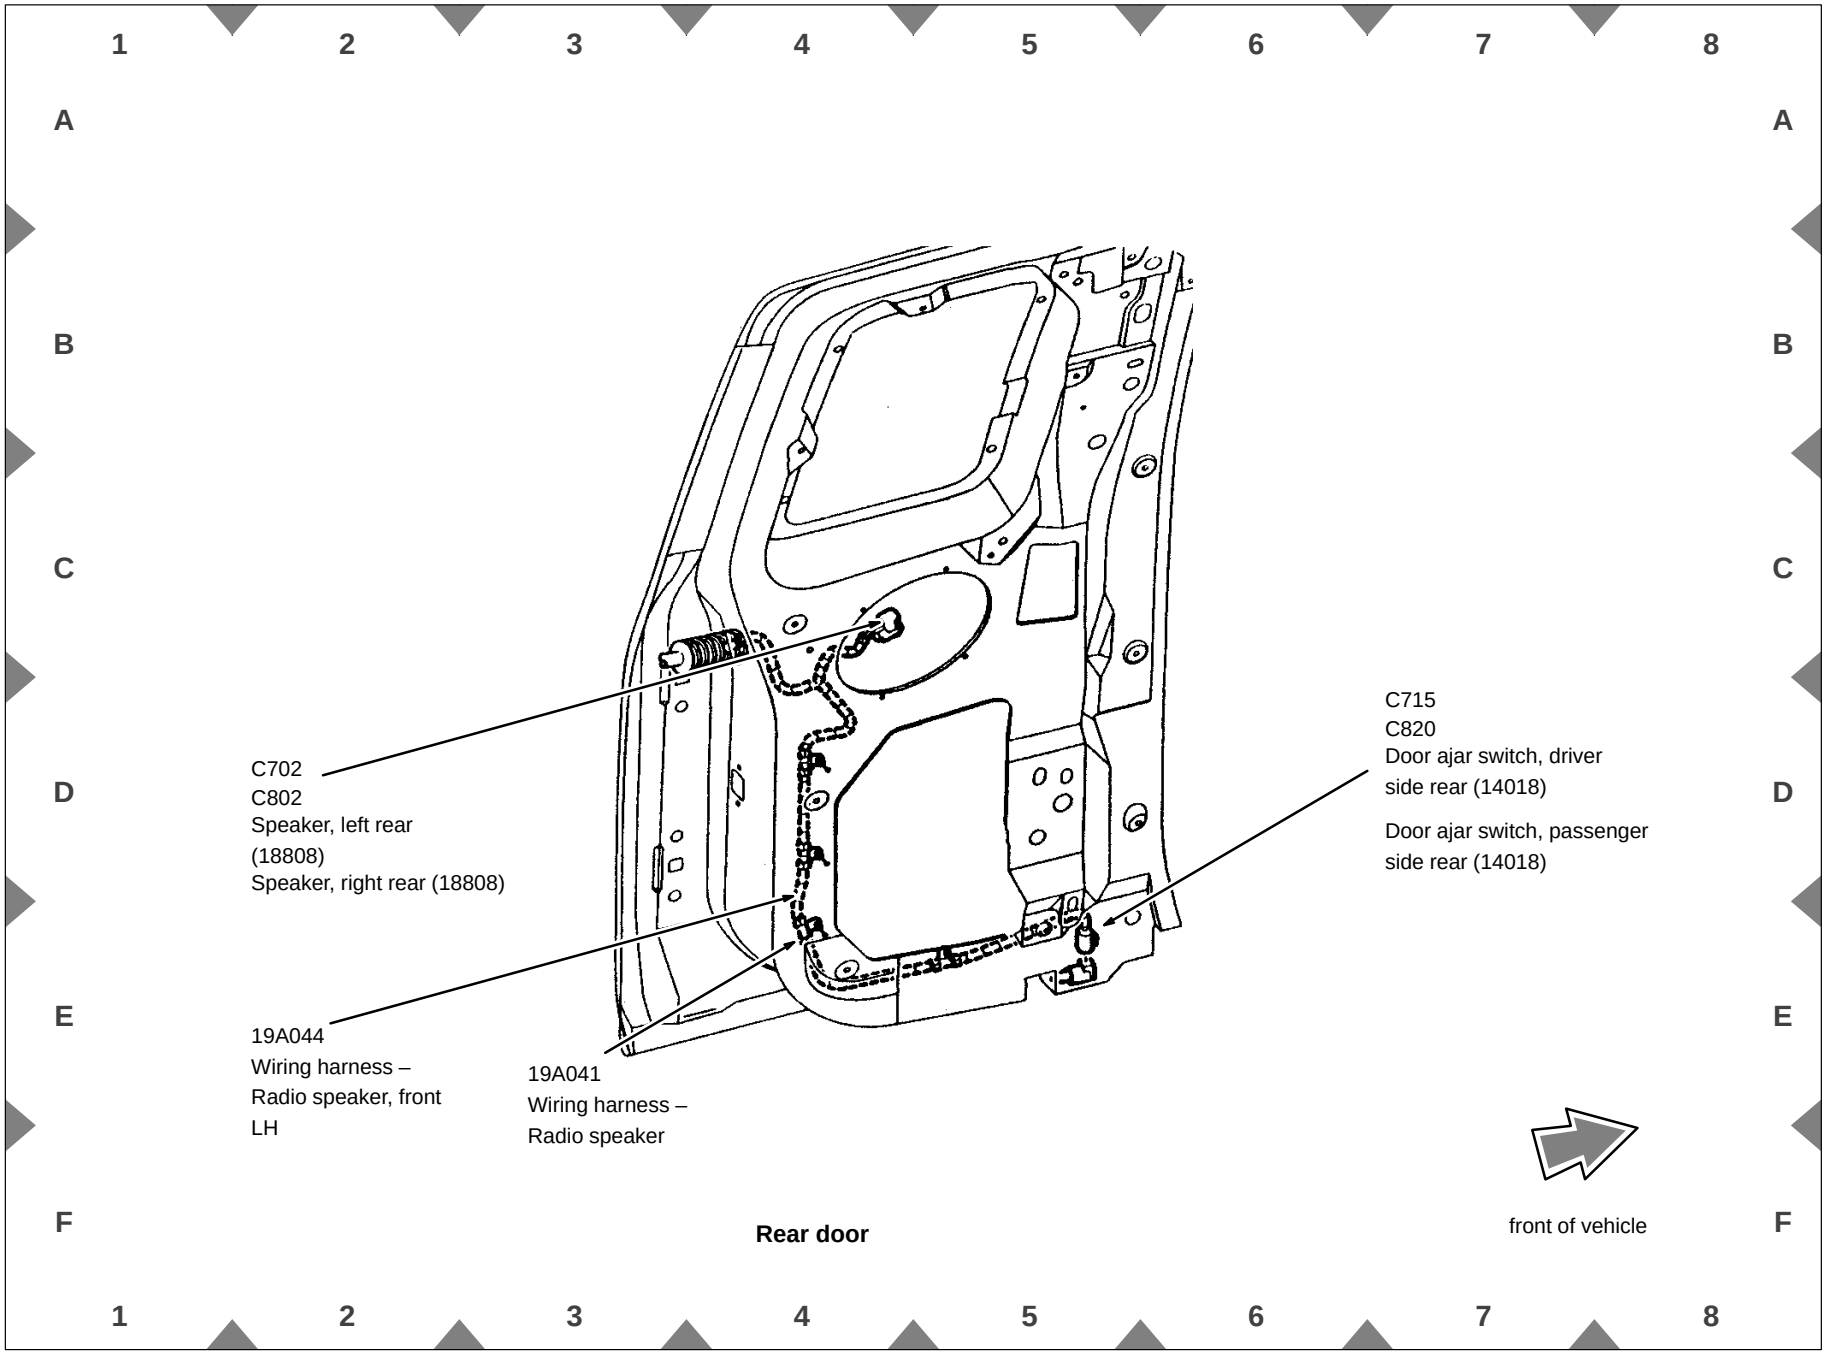
1
2
3
4
5
6
7
8
A
B
C
D
E
F
C702
C802
Speaker, left rear (18808)
Speaker, right rear (18808)
19A044
Wiring harness – Radio speaker, front LH
19A041
Wiring harness – Radio speaker
C715
C820
Door ajar switch, driver side rear (14018)
Door ajar switch, passenger side rear (14018)
front of vehicle
Rear door