## C365

**14C693**

N31
Seat back heater, left front

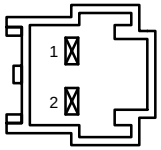


F02077

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 20S-HC16 (PK/BU) | Voltage, hot in run only, Switched |
| 2 | 31S-HC16 (BK/BU) | Ground, Switched |

## C366

**14C693**

M231
Driver seat lumbar compressor motor (65500)




F02073

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 33-AH39 (YE/BU) | Voltage, hot in run only, Switched |
| | 33-AH22 (YE/BU) | |
| 2 | 32-AH39 (WH/BU) | Switched between: Battery voltage, Ground or Open |
| | 32-AH22 (WH/BU) | |

## C367

**14C693**

A155
Side air bag module, left

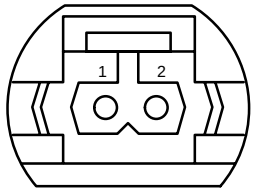


F02075

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 31S-JA37 (BK/GN) | Ground, Switched |
| 2 | 30S-JA37 (RD/GN) | Voltage supplied at all times (not overload protected), Switched |

## C368

**14C693**

M230
Driver seat backrest motor

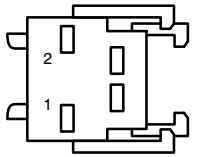


F04141

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 32-AH36 (WH/RD) | Switched between: Battery voltage, Ground or Open |
| | 32-AH7 (WH/RD) | |
| 2 | 33-AH36 (YE/RD) | Switched between: Battery voltage, Ground or Open |
| | 33-AH7 (YE/RD) | |

## C372

**14B719**

B222
Driver memory seat horizontal sensor

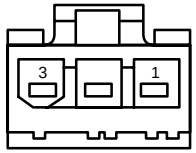


F03111

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 7-AH26 (YE/RD) | Voltage DC supplied at all times (sensor) |
| 2 | 8-AH26 (WH/RD) | Sensor signal |
| 3 | 9-AH26 (BN/RD) | Sensor signal return (reference/ground) |

## C373

**14B719**

B223
Driver memory seat front height sensor

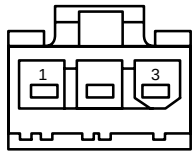


F03111

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 7-AH24 (YE/BK) | Voltage DC supplied at all times (sensor) |
| 2 | 8-AH24 (WH/BK) | Sensor signal |
| 3 | 9-AH24 (BN/YE) | Sensor signal return (reference/ground) |