Late build

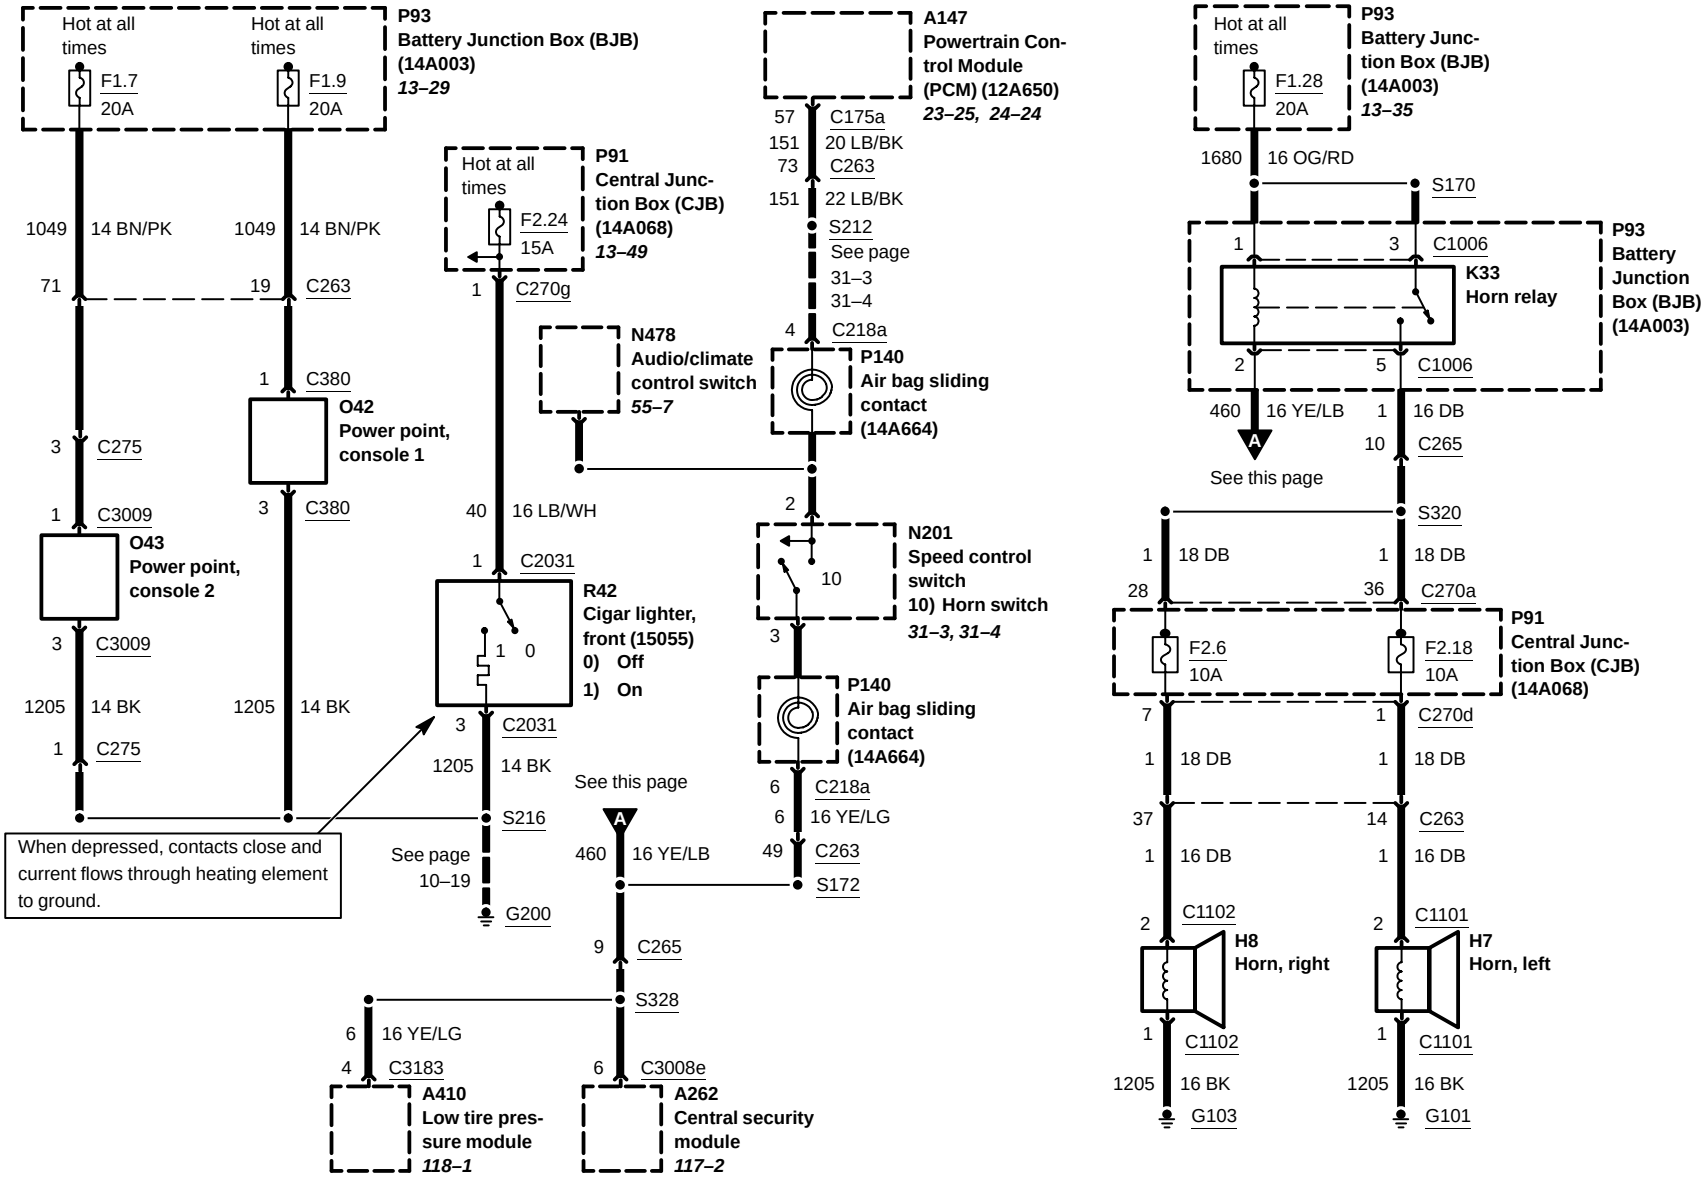
P93
Battery Junction Box (BJB)
(14A003)
13–29
Hot at all times
F1.7
20A
F1.9
20A
1049 14 BN/PK
71
19 C263
1 C380
O42
Power point, console 1
3 C275
1 C3009
O43
Power point, console 2
3 C3009
1205 14 BK
1 C275
When depressed, contacts close and current flows through heating element to ground.
P91
Central Junction Box (CJB)
(14A068)
13–49
F2.24
15A
1 C270g
40 16 LB/WH
1 C2031
R42
Cigar lighter, front (15055)
0) Off
1) On
3 C2031
1205 14 BK
S216
See page 10–19
G200
N478
Audio/climate control switch
55–7
A147
Powertrain Control Module (PCM) (12A650)
23–25, 24–24
57 C175a
151 20 LB/BK
73 C263
151 22 LB/BK
S212
See page 31–3 31–4
4 C218a
P140
Air bag sliding contact
(14A664)
2
N201
Speed control switch
10) Horn switch
31–3, 31–4
10
3
P140
Air bag sliding contact
(14A664)
6 C218a
6 16 YE/LG
49 C263
S172
See this page
A
460 16 YE/LB
9 C265
S328
6 16 YE/LG
4 C3183
A410
Low tire pressure module
118–1
6 C3008e
A262
Central security module
117–2
P93
Battery Junction Box (BJB)
(14A003)
13–35
Hot at all times
F1.28
20A
1680 16 OG/RD
S170
1 3 C1006
K33
Horn relay
2 5 C1006
P93
Battery Junction Box (BJB)
(14A003)
460 16 YE/LB
A
See this page
1 16 DB
10 C265
S320
1 18 DB
28 36 C270a
P91
Central Junction Box (CJB)
(14A068)
F2.6
10A
F2.18
10A
7 1 C270d
1 18 DB 1 18 DB
37 14 C263
1 16 DB 1 16 DB
2 C1102
H8
Horn, right
2 C1101
H7
Horn, left
1 C1102
1205 16 BK
G103
1 C1101
1205 16 BK
G101