## C2019 (BK)

**19D887**

B206
In–vehicle temperature sensor

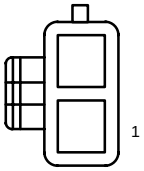


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | HCE3 (BK) | Sensor signal return (reference/ground) |
| 2 | HC04 (GN/WH) | In–vehicle temperature sensor, input |

## C2020 (WH)

**14N104**

E111
Anti–theft ON indicator

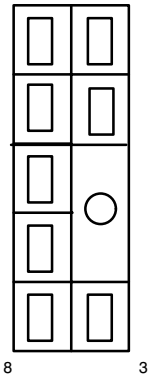


| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | – | not used |
| 2 | – | not used |
| 3 | PS25 (GN/YE) | Voltage supplied at all times (overload protected) |
| 4 | – | not used |
| 5 | – | not used |
| 6 | – | not used |
| 7 | – | not used |
| 8 | PS95 (GY) | Anti–theft ON indicator, control |

## C2021 (WH)

**14B023**

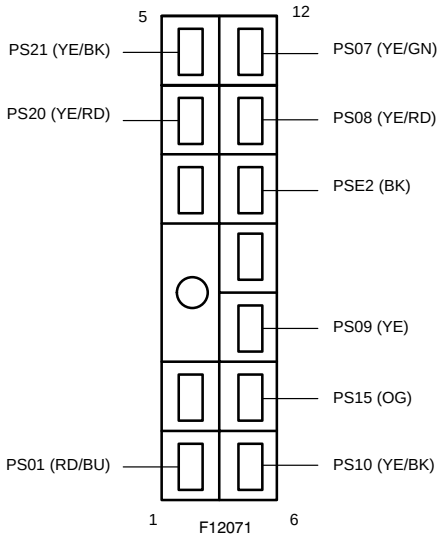

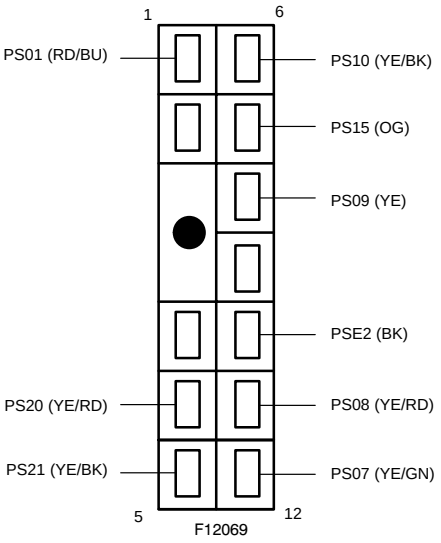
**14N104**