92-1 EXTERIOR LAMPS

2001 EXPLORER/MOUNTAINEER

For diagnostic information, refer to Section 417-01 of the Workshop Manual.

Directs current to operate exterior lamps with switch in PARK or HEAD position.
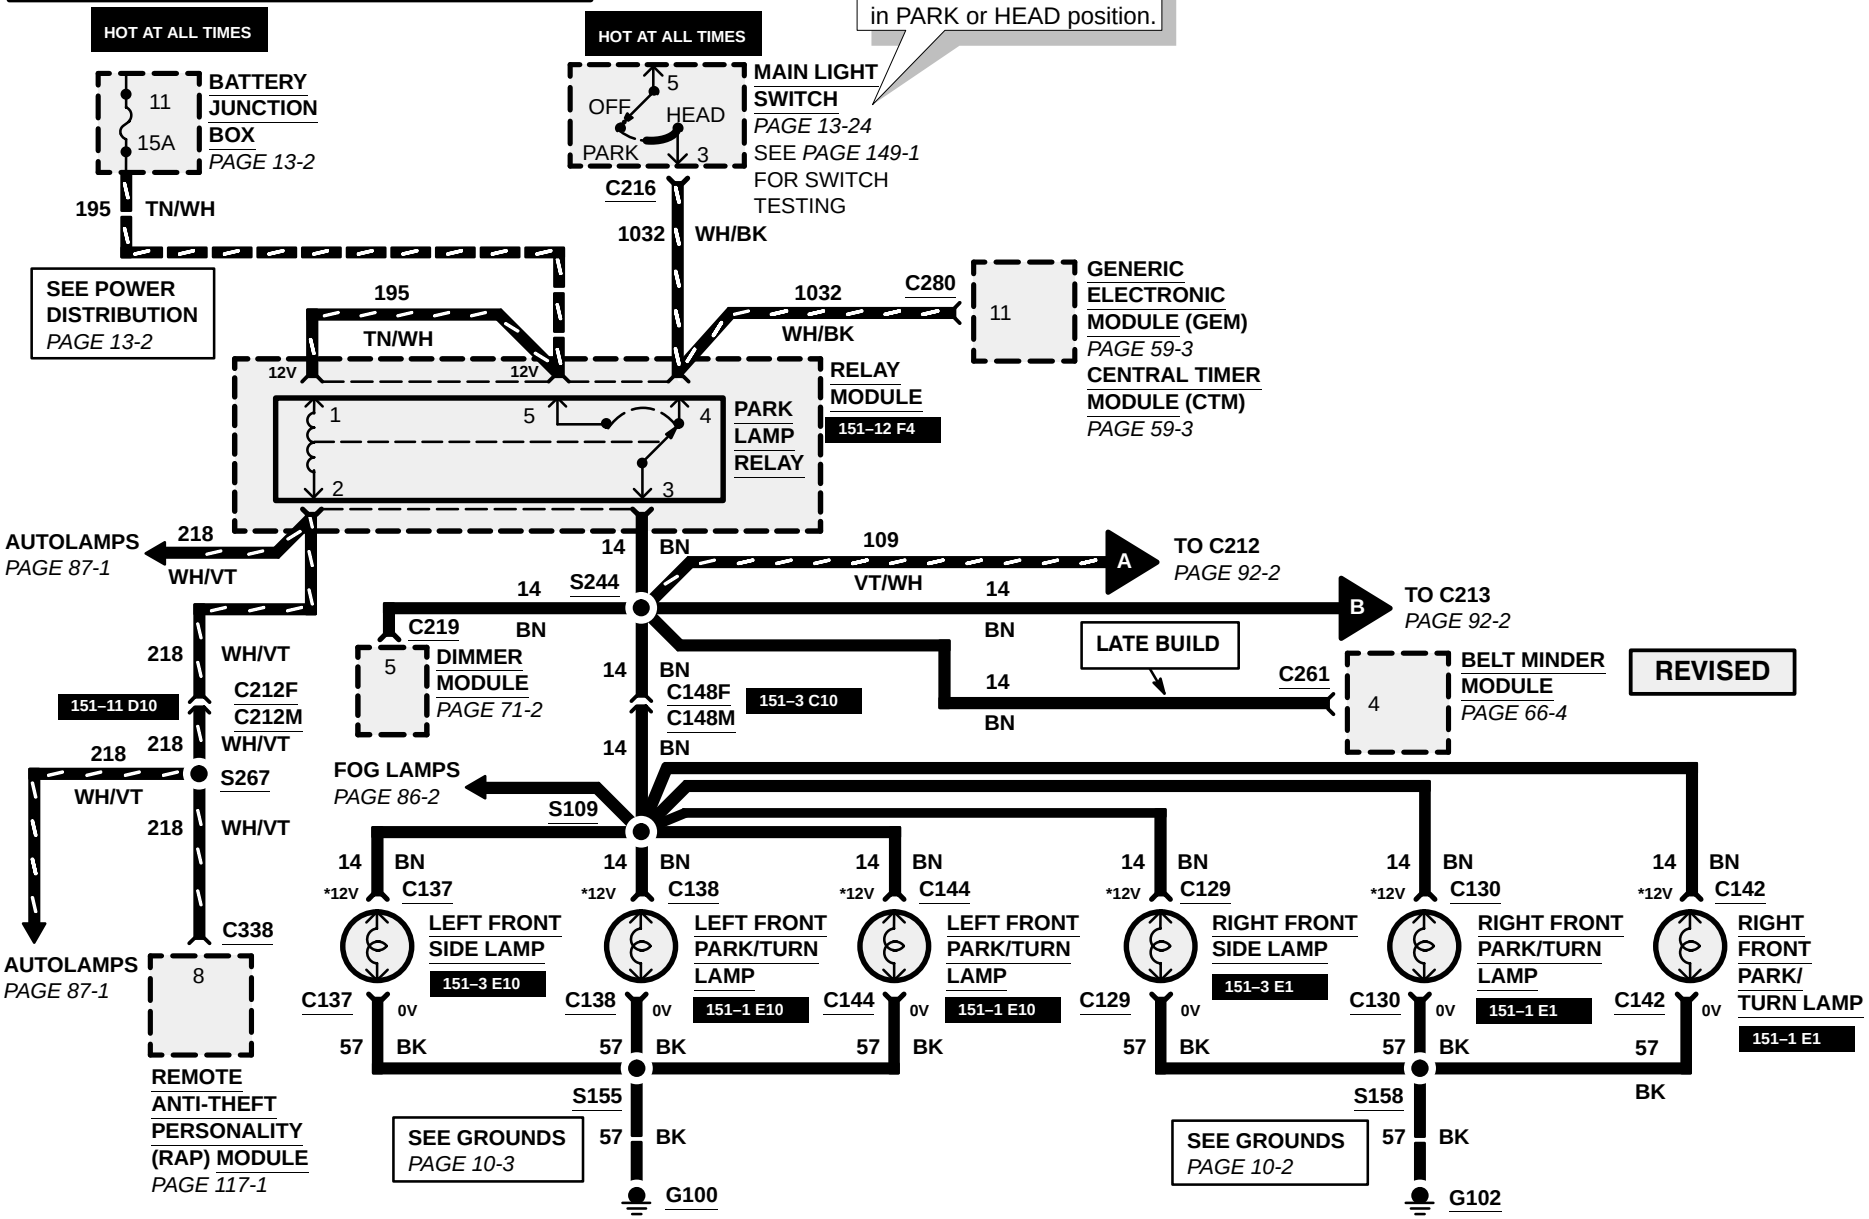
*** HEADLAMP SWITCH IN PARK OR HEAD OR PARK LAMP RELAY CLOSED**