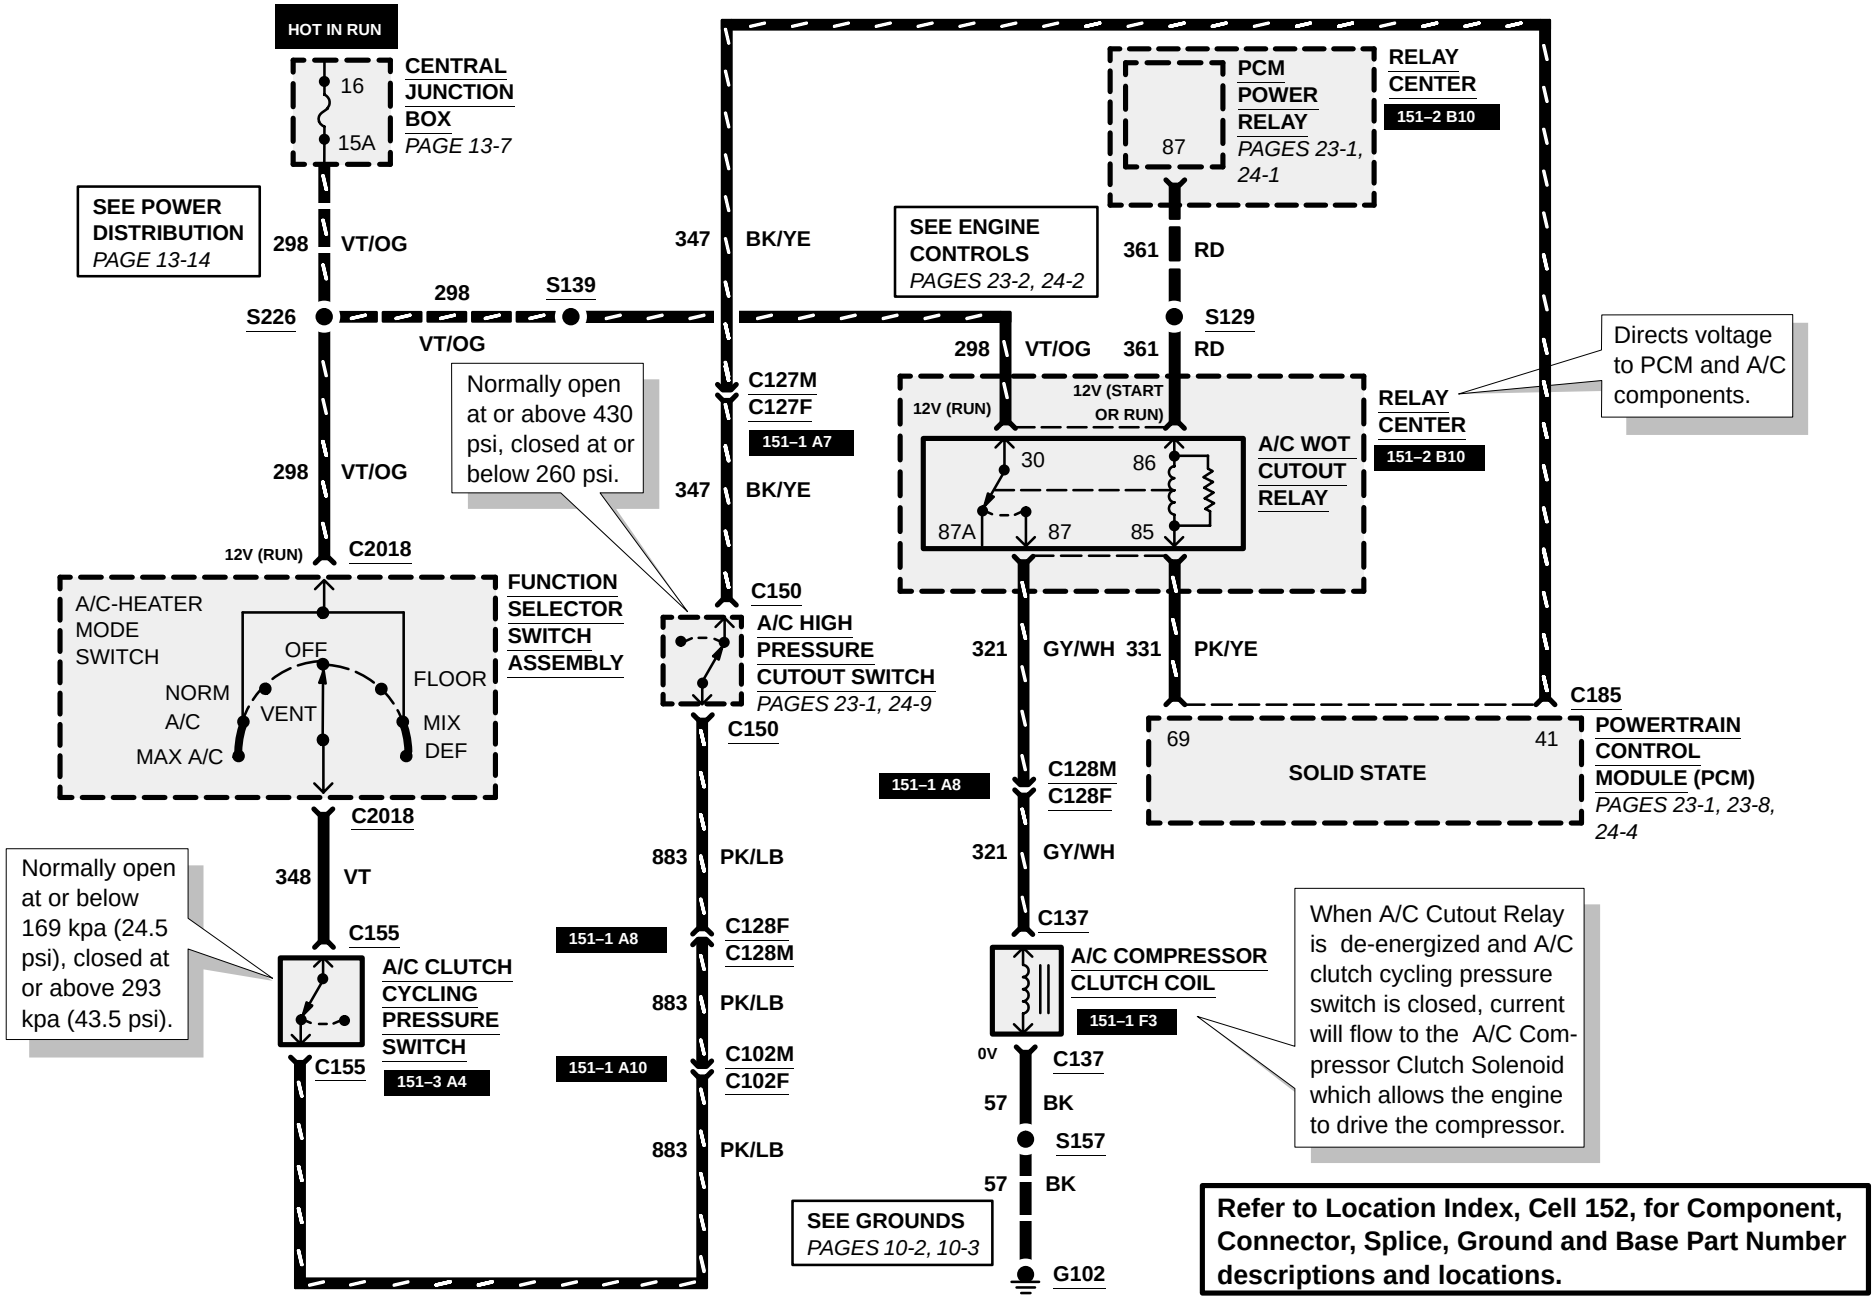
HOT IN RUN
CENTRAL JUNCTION BOX
PAGE 13-7
16
15A
SEE POWER DISTRIBUTION
PAGE 13-14
298 VT/OG
S226
298 VT/OG
S139
347 BK/YE
PCM POWER RELAY
PAGES 23-1, 24-1
87
RELAY CENTER
151–2 B10
SEE ENGINE CONTROLS
PAGES 23-2, 24-2
361 RD
S129
298 VT/OG
361 RD
Directs voltage to PCM and A/C components.
Normally open at or above 430 psi, closed at or below 260 psi.
C127M
C127F
151–1 A7
347 BK/YE
12V (RUN)
12V (START OR RUN)
RELAY CENTER
151–2 B10
30
86
87A
87
85
A/C WOT CUTOUT RELAY
298 VT/OG
12V (RUN)
C2018
A/C-HEATER MODE SWITCH
OFF
NORM A/C
VENT
FLOOR
MIX DEF
MAX A/C
FUNCTION SELECTOR SWITCH ASSEMBLY
C150
A/C HIGH PRESSURE CUTOUT SWITCH
PAGES 23-1, 24-9
321 GY/WH
331 PK/YE
C185
POWERTRAIN CONTROL MODULE (PCM)
PAGES 23-1, 23-8, 24-4
69
41
SOLID STATE
C150
151–1 A8
C128M
C128F
321 GY/WH
C2018
348 VT
Normally open at or below 169 kpa (24.5 psi), closed at or above 293 kpa (43.5 psi).
883 PK/LB
C155
151–1 A8
C128F
C128M
C137
A/C COMPRESSOR CLUTCH COIL
151–1 F3
883 PK/LB
A/C CLUTCH CYCLING PRESSURE SWITCH
C155
151–3 A4
151–1 A10
C102M
C102F
0V
C137
57 BK
S157
883 PK/LB
57 BK
When A/C Cutout Relay is de-energized and A/C clutch cycling pressure switch is closed, current will flow to the A/C Compressor Clutch Solenoid which allows the engine to drive the compressor.
SEE GROUNDS
PAGES 10-2, 10-3
G102
Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.