C182

14A103

K4
Fuel pump relay

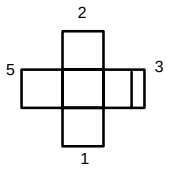

F04127

Pin	Circuit	Circuit Function
1	AV76 (BK/RD)	Voltage supplied in Start and Run (overload protected)
2	AV54 (BU/RD)	Fuel pump relay, control
3	AV75 (BK/RD)	Voltage supplied in Start and Run (overload protected)
4	–	not used
5	AV77 (LG/RD)	Fuel pump relay, switched power, output

C184

14A103

K33
Horn relay

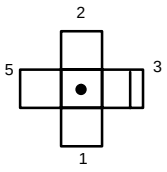

F04127

Pin	Circuit	Circuit Function
1	QA04 (YE)	Horn relay, control
2	QA05 (GN/RD)	Voltage supplied at all times (overload protected)
3	QA01 (GN/RD)	Voltage supplied at all times (overload protected)
4	–	not used
5	QA02 (GN)	Horn relay, switched power

C183

14A103

K302
Bulb check relay

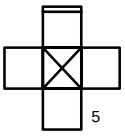

F04129

Pin	Circuit	Circuit Function
1	DA30 (BU)	Voltage supplied in Start and Run (overload protected)
2	DA26 (BU/YE)	Bulb check relay, control
3	NBE2 (BK)	Ground
4	–	not used
5	NB03 (YE/VT)	Brake indicator, control

C190

12A522

B200
Coolant temperature sensor 1

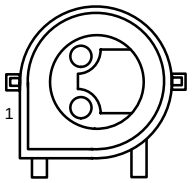

F02177

Pin	Circuit	Circuit Function
1	HCE2 (BK)	Sensor signal return (reference/ground)
2	HC03 (VT)	Coolant temperature sensor 1, input

C191 (BK)

14A103

B203
Ambient air temperature sensor

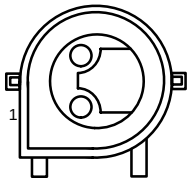

F02177

Pin	Circuit	Circuit Function
1	HC17 (RD/WH)	Ambient air temperature sensor, input
2	HCE6 (BK)	Sensor signal return (reference/ground)