C707

14632

Sliding door contact switch, left

Late production

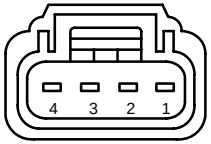

F04162

Pin	Circuit	Circuit function
1	803 (BN/PK)	Speaker, left rear (18808) –
2	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Unlock
3	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Lock
4	825 (TN/LG)	Speaker, left rear (18808) +

Early production

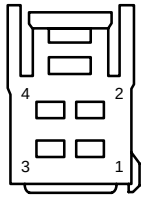

F04106

Pin	Circuit	Circuit function
1	1386 (OG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Unlock
2	1385 (LG)	Rear Electronic Module (REM), to, Door lock actuator assembly, left sliding door, Lock
3	803 (BN/PK)	Speaker, left rear (18808) –
4	825 (TN/LG)	Speaker, left rear (18808) +