160-1 VEHICLE REPAIR LOCATION CODES

VEHICLE REPAIR LOCATION CODES

TO PINPOINT THE ACTUAL VEHICLE LOCATION OF A REPAIR. THE **VEHICLE REPAIR LOCATION CODE** IS REQUIRED.

FOR EXAMPLE, AN "X" HAS BEEN PLACED IN THE QUADRANT OF THE VEHICLE DIAGRAMS INDICATING THE LOCATION OF THE REPAIR. SEE DIAGRAMS.

LOCATION CODE, FOR THE EXAMPLE: A5/FU – (UNDER THE FLOOR OF DRIVER'S LEFT FOOT.)

FRONT/REAR DIRECTION

FRONT

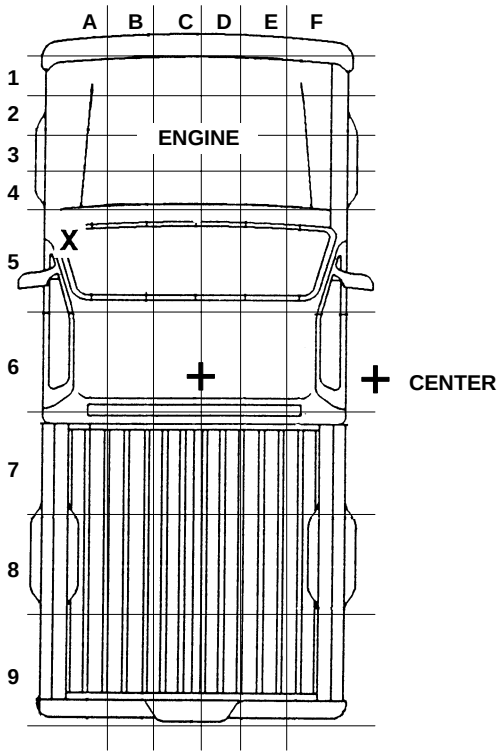

REAR

OVER/UNDER DIRECTION

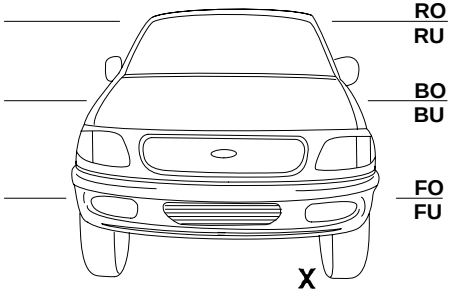

R = ROOF LINE
- RO = ROOF OVER
- RU = ROOF UNDER

B = BELT LINE
- BO = BELT OVER
- BU = BELT UNDER

F = FLOOR PAN
- FO = FLOOR OVER
- FU = FLOOR UNDER

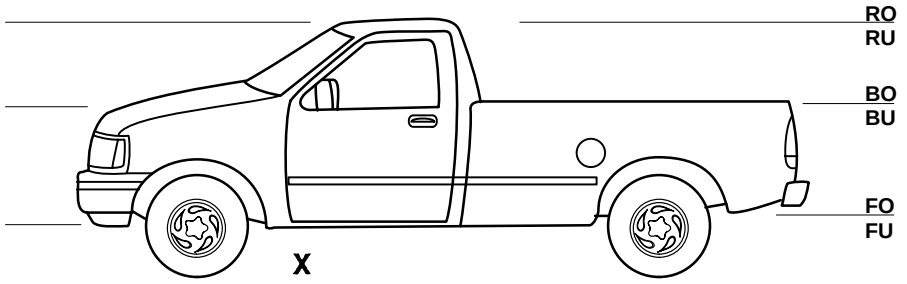

SIDE VIEW

F-150

FCS-12263-01