## C501c

### 14631

Driver Door Module

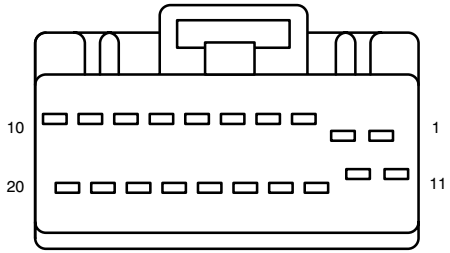


F20017

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 32-AD7 (WH/RD) | Exterior rear view mirror, driver side (17682) - Right/Left mirror movement, motor +/ - |
| 2 | 33-AD7 (YE/RD) | Exterior rear view mirror, driver side (17682) - Right/Left mirror movement, motor +/ - |
| 3 | 34-AD8 (BU/WH) | Exterior rear view mirror, driver side (17682) - Up/Down mirror movement, motor +/ - |
| 4 | 35-AD8 (VT) | Exterior rear view mirror, driver side (17682) - Up/Down mirror movement, motor +/ - |
| 5 | 7-AD18 (YE/BK) | Exterior rear view mirror, driver side (17682) - Reference voltage |
| 6 | – | not used |
| 7 | – | not used |
| 8 | 33-AA10 (YE/BK) | Door lock motor, driver side +/ - |
| 9 | 32-AA11 (WH/VT) | Door lock motor, driver side +/ - |
| 10 | – | not used |

| Pin | Circuit | Circuit function |
|---|---|---|
| 11 | – | not used |
| 12 | – | not used |
| 13 | – | not used |
| 14 | 8-AD18 (WH/BK) | Exterior rear view mirror, driver side (17682) - Right/Left mirror movement, Sensor |
| 15 | 10-AD18 (GY/BK) | Exterior rear view mirror, driver side (17682) - Up/Down mirror movement, Sensor |
| 16 | 31S-AA78 (BK/BU) | Door lock unit, driver side front (5421813) - Set |
| 17 | 31S-AA79 (BK/WH) | Door lock unit, driver side front (5421813) - Reset |
| 18 | – | not used |
| 19 | 9-AD18 (BN/YE) | Exterior rear view mirror, driver side (17682) - Signal return |
| 20 | 9-AA70 (BN/GN) | Key pad common |