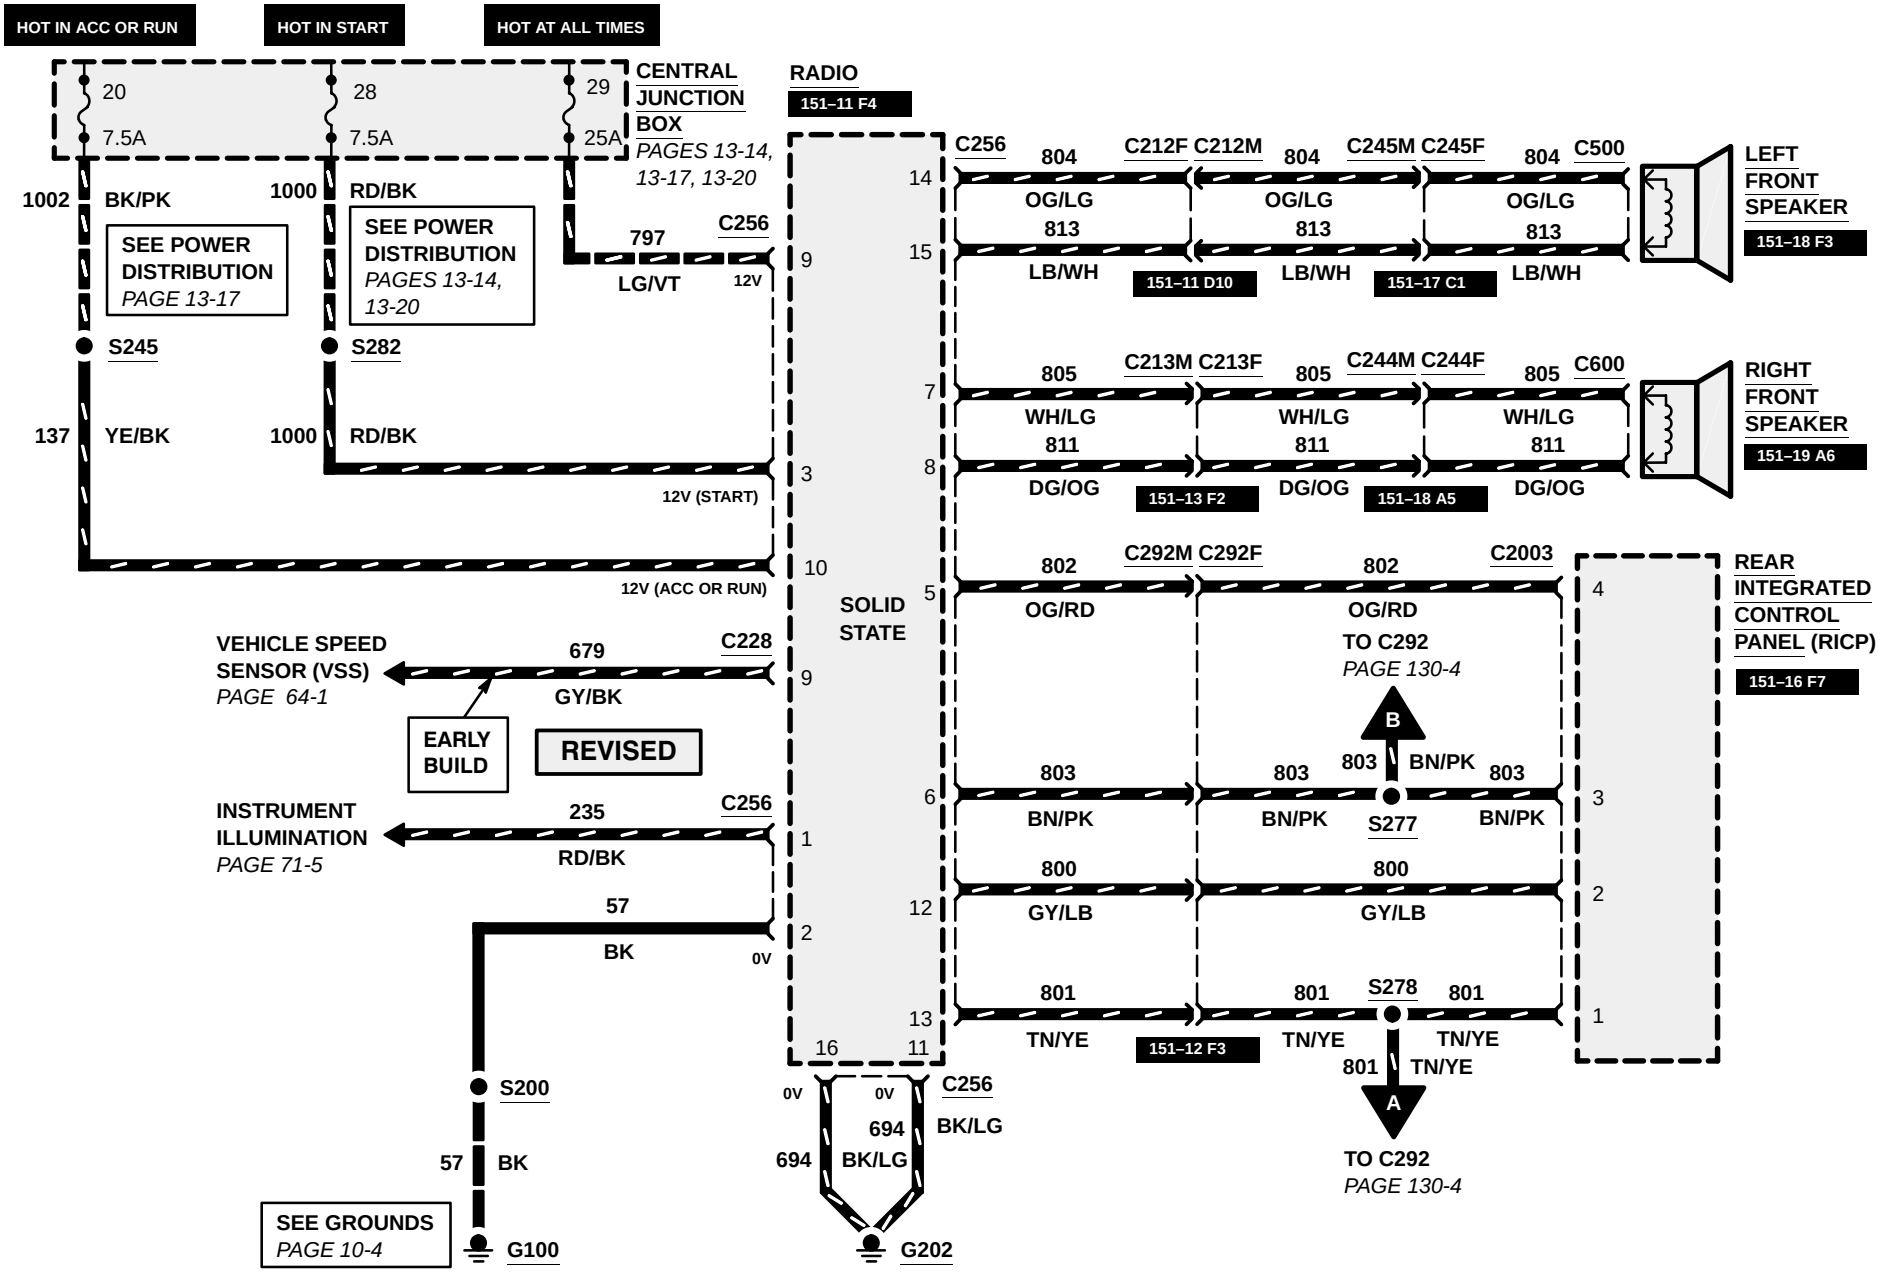
HOT IN ACC OR RUN
HOT IN START
HOT AT ALL TIMES
CENTRAL JUNCTION BOX
PAGES 13-14, 13-17, 13-20
20
7.5A
28
7.5A
29
25A
1002 BK/PK
1000 RD/BK
SEE POWER DISTRIBUTION PAGE 13-17
SEE POWER DISTRIBUTION PAGES 13-14, 13-20
797 LG/VT
C256
12V
S245
S282
137 YE/BK
1000 RD/BK
12V (START)
12V (ACC OR RUN)
RADIO
151–11 F4
SOLID STATE
VEHICLE SPEED SENSOR (VSS)
PAGE 64-1
679 GY/BK
C228
EARLY BUILD
REVISED
INSTRUMENT ILLUMINATION
PAGE 71-5
235 RD/BK
C256
57 BK
0V
S200
57 BK
SEE GROUNDS PAGE 10-4
G100
0V
0V
694 BK/LG
694 BK/LG
C256
G202
C256
804 OG/LG
C212F C212M
804 OG/LG
C245M C245F
804 OG/LG
C500
813 LB/WH
151–11 D10
813 LB/WH
151–17 C1
813 LB/WH
LEFT FRONT SPEAKER
151–18 F3
805 WH/LG
C213M C213F
805 WH/LG
C244M C244F
805 WH/LG
C600
811 DG/OG
151–13 F2
811 DG/OG
151–18 A5
811 DG/OG
RIGHT FRONT SPEAKER
151–19 A6
802 OG/RD
C292M C292F
802 OG/RD
C2003
TO C292 PAGE 130-4
B
803 BN/PK
803 BN/PK
S277
803 BN/PK
803 BN/PK
800 GY/LB
800 GY/LB
801 TN/YE
151–12 F3
801 TN/YE
S278
801 TN/YE
801 TN/YE
A
TO C292 PAGE 130-4
REAR INTEGRATED CONTROL PANEL (RICP)
151–16 F7