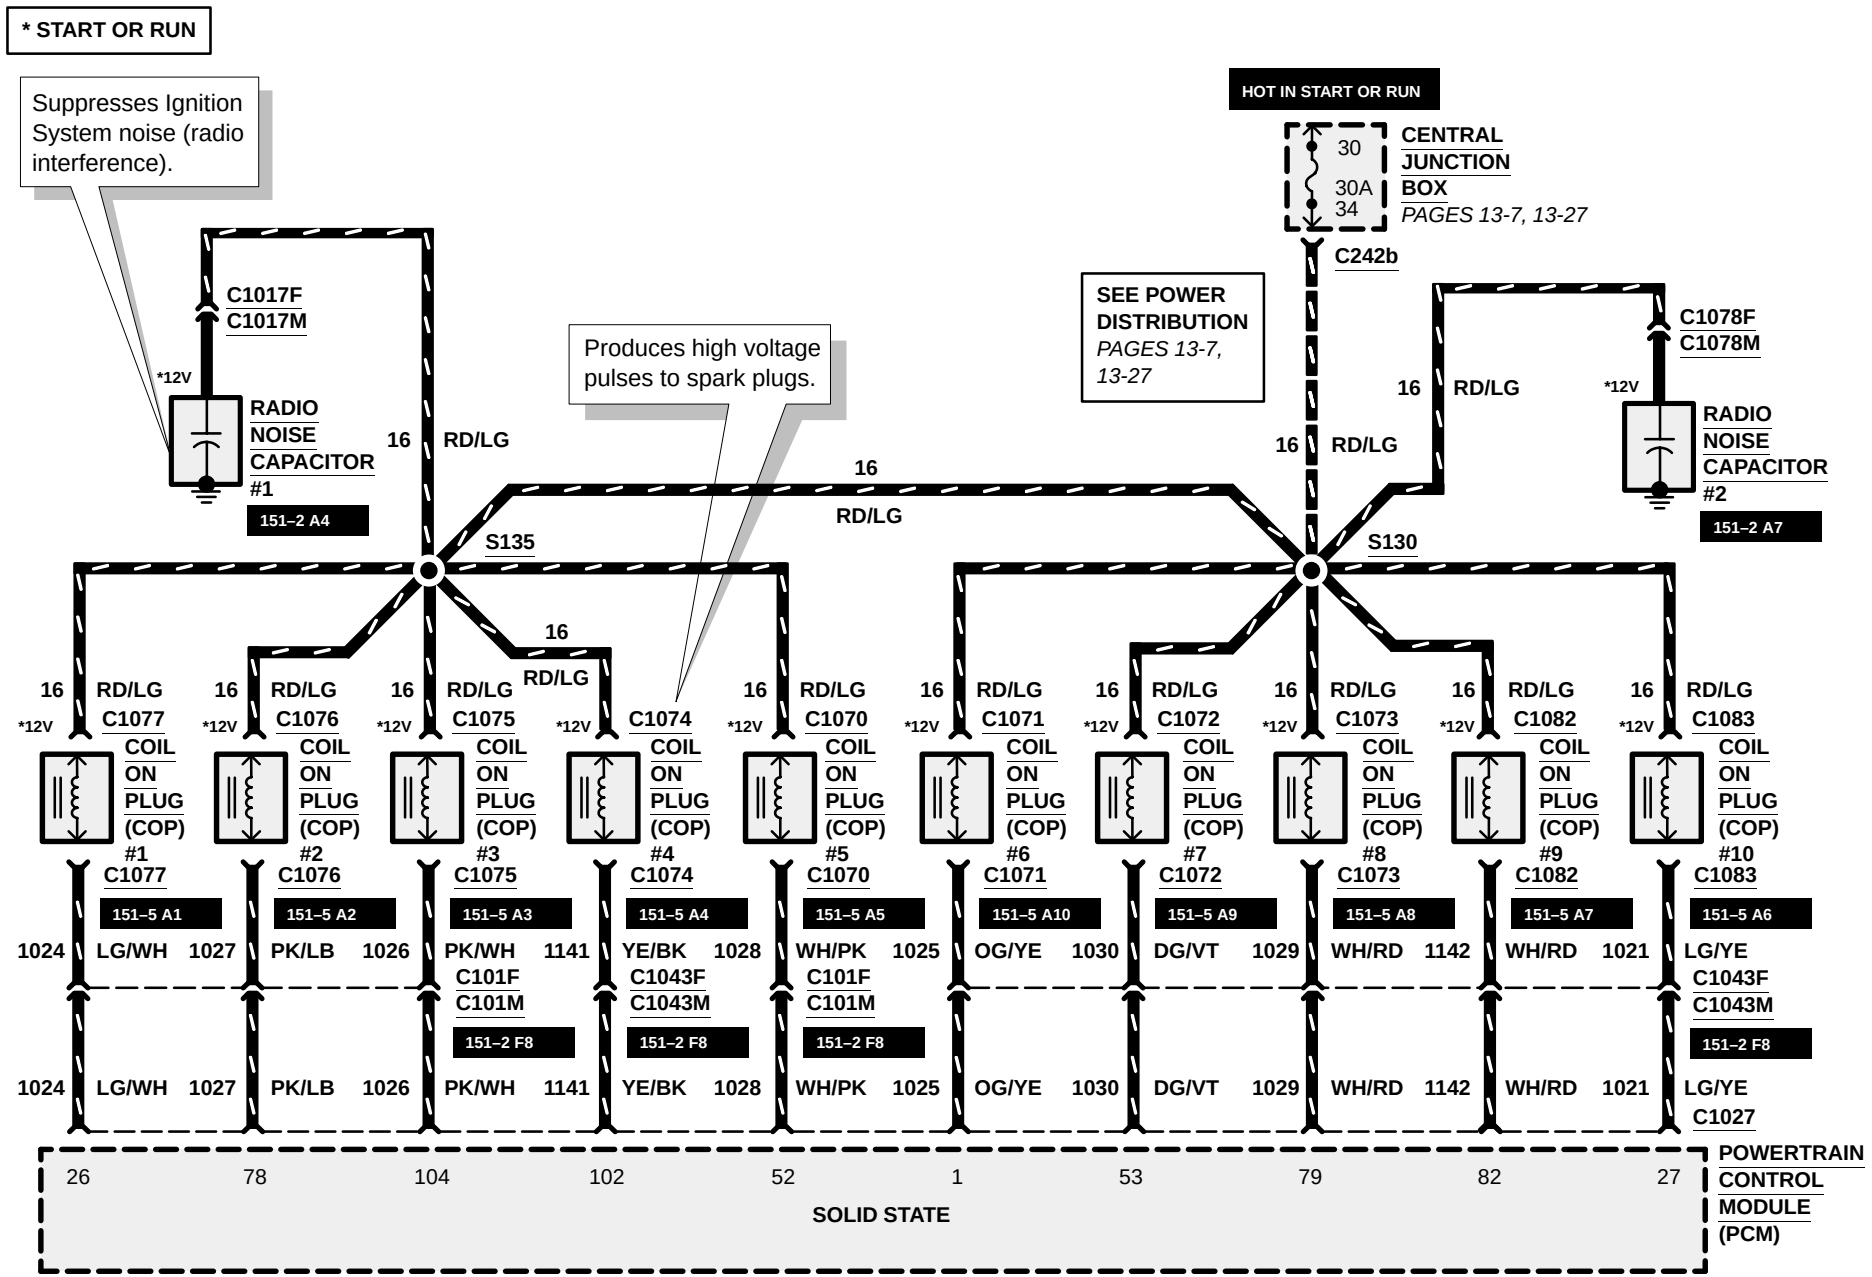
* START OR RUN
Suppresses Ignition System noise (radio interference).
Produces high voltage pulses to spark plugs.
HOT IN START OR RUN
30
30A
34
CENTRAL JUNCTION BOX
PAGES 13-7, 13-27
C242b
SEE POWER DISTRIBUTION
PAGES 13-7, 13-27
C1017F
C1017M
*12V
RADIO NOISE CAPACITOR #1
151–2 A4
C1078F
C1078M
RADIO NOISE CAPACITOR #2
151–2 A7
16 RD/LG
S135
S130
C1077
C1076
C1075
C1074
C1070
C1071
C1072
C1073
C1082
C1083
COIL ON PLUG (COP) #1
COIL ON PLUG (COP) #2
COIL ON PLUG (COP) #3
COIL ON PLUG (COP) #4
COIL ON PLUG (COP) #5
COIL ON PLUG (COP) #6
COIL ON PLUG (COP) #7
COIL ON PLUG (COP) #8
COIL ON PLUG (COP) #9
COIL ON PLUG (COP) #10
151–5 A1
151–5 A2
151–5 A3
151–5 A4
151–5 A5
151–5 A10
151–5 A9
151–5 A8
151–5 A7
151–5 A6
1024 LG/WH
1027 PK/LB
1026 PK/WH
1141 YE/BK
1028 WH/PK
1025 OG/YE
1030 DG/VT
1029 WH/RD
1142 WH/RD
1021 LG/YE
C101F
C101M
C1043F
C1043M
151–2 F8
C1027
26 78 104 102 52 1 53 79 82 27
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)