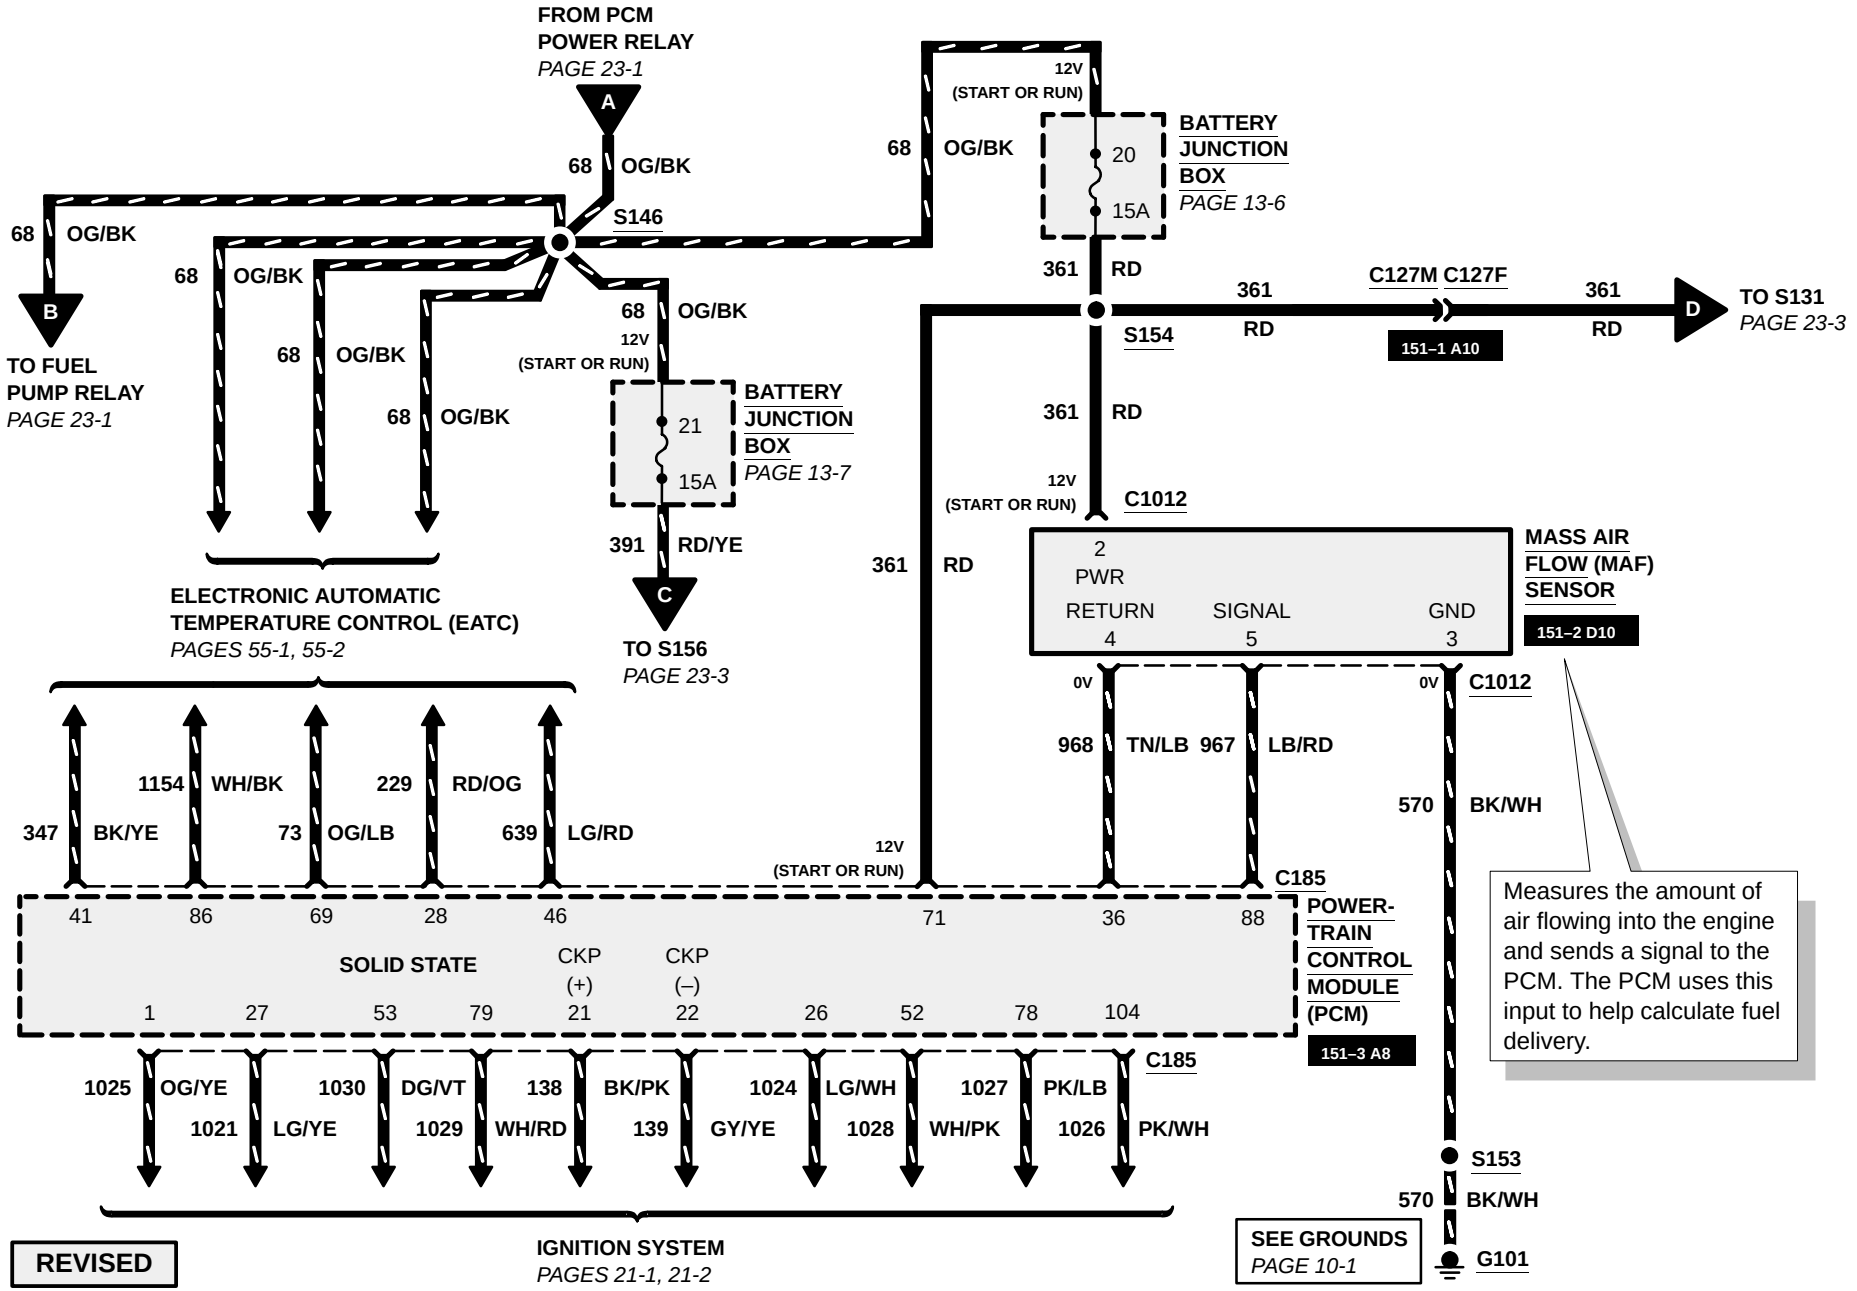
FROM PCM
POWER RELAY
PAGE 23-1
A
68 OG/BK
S146
68 OG/BK
B
TO FUEL
PUMP RELAY
PAGE 23-1
68 OG/BK
68 OG/BK
68 OG/BK
68 OG/BK
12V
(START OR RUN)
BATTERY
JUNCTION
BOX
PAGE 13-7
21
15A
391 RD/YE
C
TO S156
PAGE 23-3
ELECTRONIC AUTOMATIC
TEMPERATURE CONTROL (EATC)
PAGES 55-1, 55-2
68 OG/BK
12V
(START OR RUN)
BATTERY
JUNCTION
BOX
PAGE 13-6
20
15A
361 RD
S154
361 RD
C127M C127F
151–1 A10
361 RD
D
TO S131
PAGE 23-3
361 RD
12V
(START OR RUN)
C1012
2
PWR
RETURN
4
SIGNAL
5
GND
3
MASS AIR
FLOW (MAF)
SENSOR
151–2 D10
0V
968 TN/LB
967 LB/RD
0V
C1012
570 BK/WH
347 BK/YE
1154 WH/BK
73 OG/LB
229 RD/OG
639 LG/RD
12V
(START OR RUN)
C185
41 86 69 28 46 71 36 88
SOLID STATE
CKP (+)
CKP (–)
1 27 53 79 21 22 26 52 78 104
POWER-
TRAIN
CONTROL
MODULE
(PCM)
151–3 A8
1025 OG/YE
1021 LG/YE
1030 DG/VT
1029 WH/RD
138 BK/PK
139 GY/YE
1024 LG/WH
1028 WH/PK
1027 PK/LB
1026 PK/WH
C185
S153
570 BK/WH
G101
SEE GROUNDS
PAGE 10-1
IGNITION SYSTEM
PAGES 21-1, 21-2
Measures the amount of air flowing into the engine and sends a signal to the PCM. The PCM uses this input to help calculate fuel delivery.

REVISED