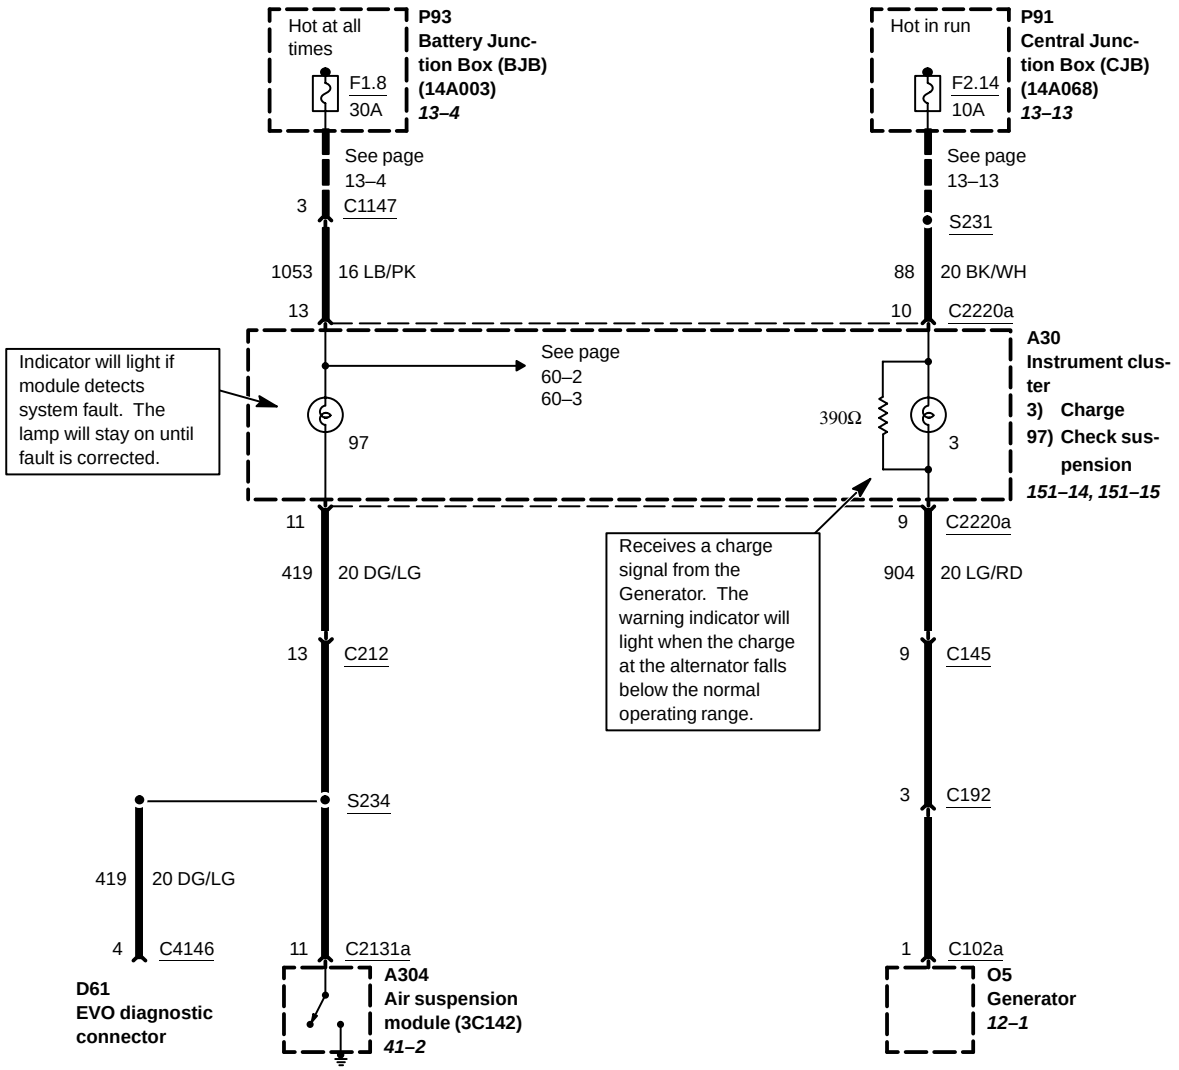
Hot at all times
F1.8
30A
P93
Battery Junction Box (BJB)
(14A003)
13–4
See page 13–4
3
C1147
1053
16 LB/PK
13
Hot in run
F2.14
10A
P91
Central Junction Box (CJB)
(14A068)
13–13
See page 13–13
S231
88
20 BK/WH
10
C2220a
A30
Instrument cluster
3) Charge
97) Check suspension
151–14, 151–15
Indicator will light if module detects system fault. The lamp will stay on until fault is corrected.
See page 60–2 60–3
97
390Ω
3
11
9
C2220a
419
20 DG/LG
904
20 LG/RD
Receives a charge signal from the Generator. The warning indicator will light when the charge at the alternator falls below the normal operating range.
13
C212
9
C145
S234
3
C192
419
20 DG/LG
4
C4146
11
C2131a
1
C102a
D61
EVO diagnostic connector
A304
Air suspension module (3C142)
41–2
O5
Generator
12–1